

WARRANTY


We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

**Are you having difficulty
with assembly? Missing parts?**

**Please send email with your order No
customerservice@hulalahome.com**

**For return, Please check the return policy with
the retailer or MarketPlace you bought from.**

**Appreciated your purchasing from us.
Pop up your life by our furniture piece!**

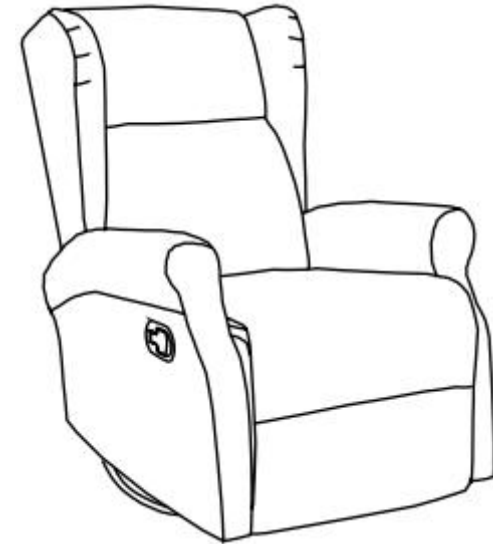

ITEM NO. HRCHD0241

NOTE:


This brochure contains IMPORTANT safety info. Please read and keep for future reference.

MAINTAINANCE AND WARNING

- Keep furniture away from heat.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry Cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, For residential use only.

PARTS LIST

A*1

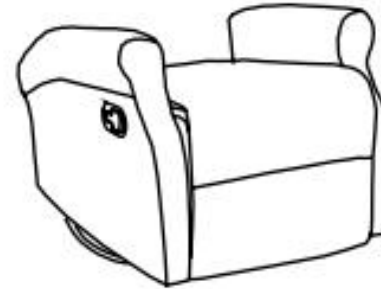

Seat

B*1



Back

C*1



Left Wing

D*1




Right Wing




Weight Limitation

250LBS


ASSEMBLY INSTRUCTIONS

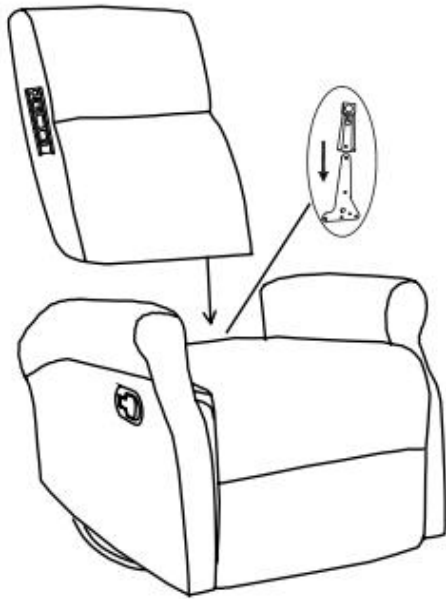

STEP 1: Match both bracket of backrest to the seat ,push down the backrest to assemble.

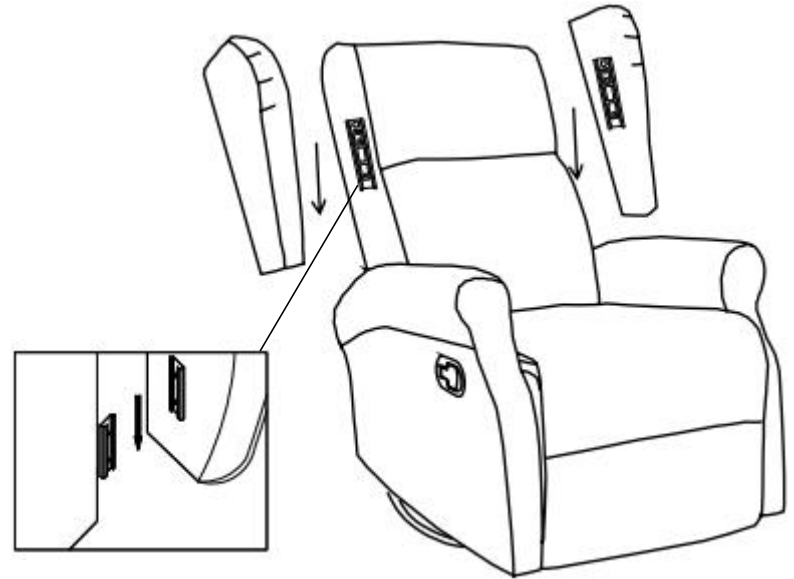


STEP 2: Match the ear bracket to the backrest side ,push down the ear to assemble.

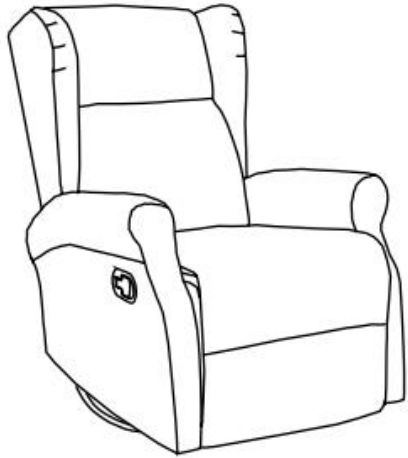


STEP 3: Assembly completed


Upright position

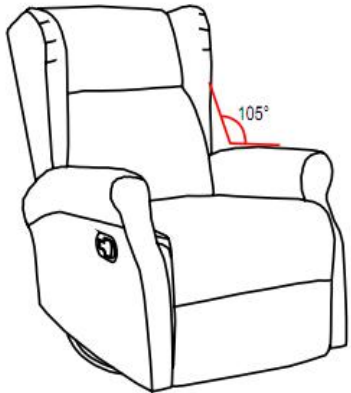


Full reclined position

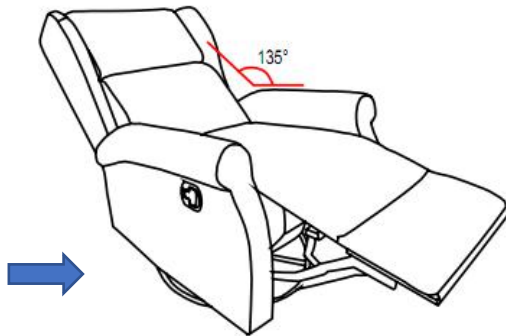

STEP 4: Pull the clasp to stretch the chair reclined and press footrest to set it back to upright position.

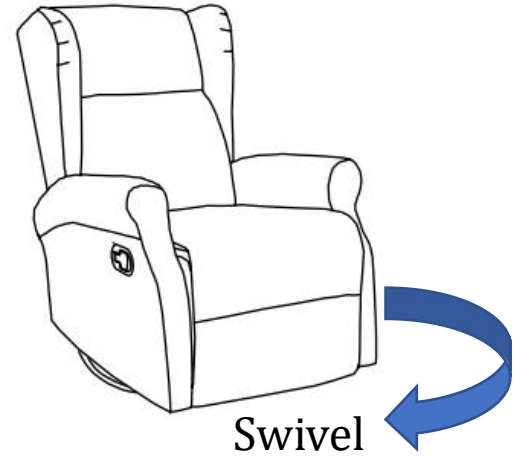

Swivel

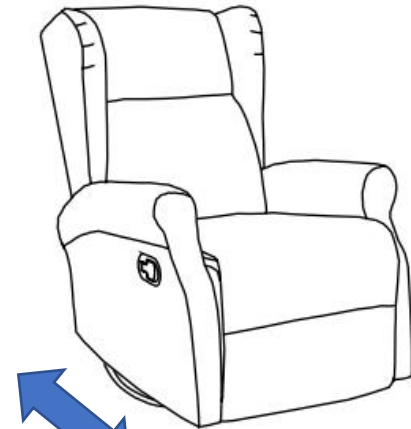

Rock