



EliteNest™

5-SEATER ASSEMBLY INSTRUCTIONS

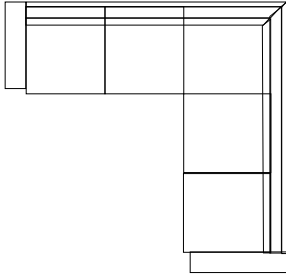

 
5-Seater without A & B

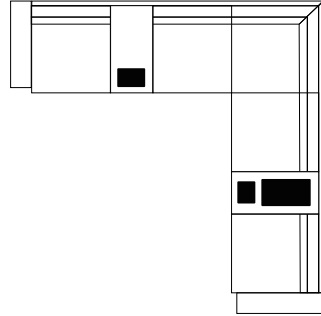


5-Seater with A & B

5-Seater Parts List

A x1



B x1

 

C x1



 
D x2



E x2




F x1



G x1




H x1

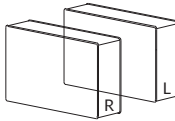

I x2



 O x1




K x1



L x1




 M x6




SEATER ASSEMBLY INSTRUCTIONS


Recliner (Right)

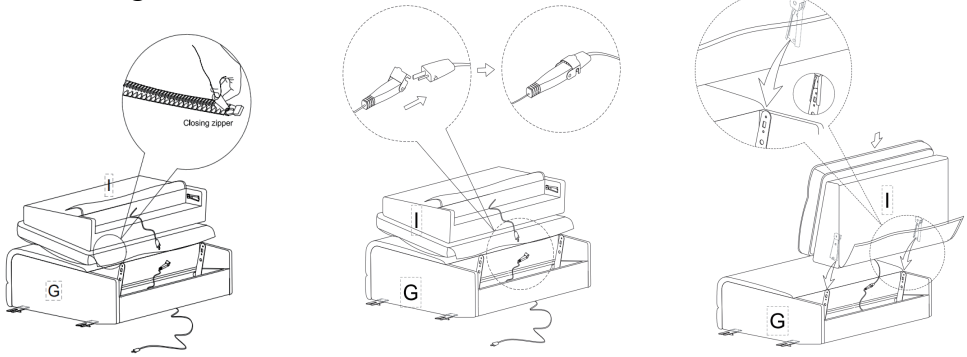


Recliner (Left)

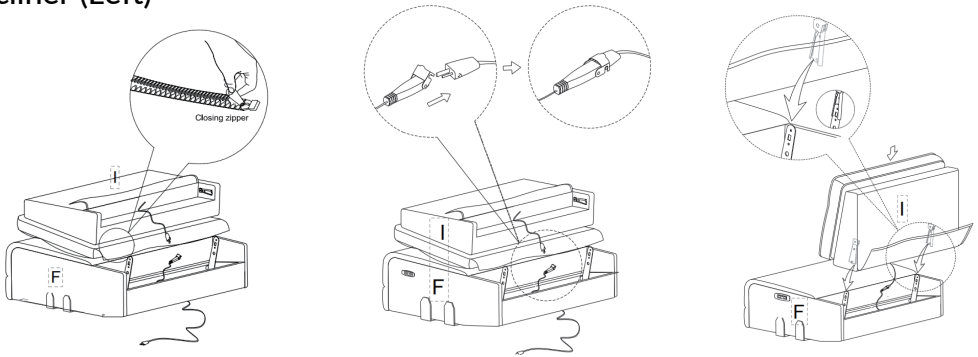

Arm Rest

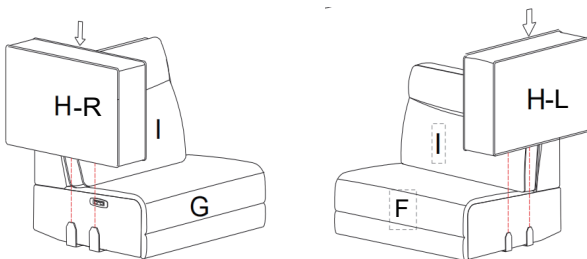


Step 1

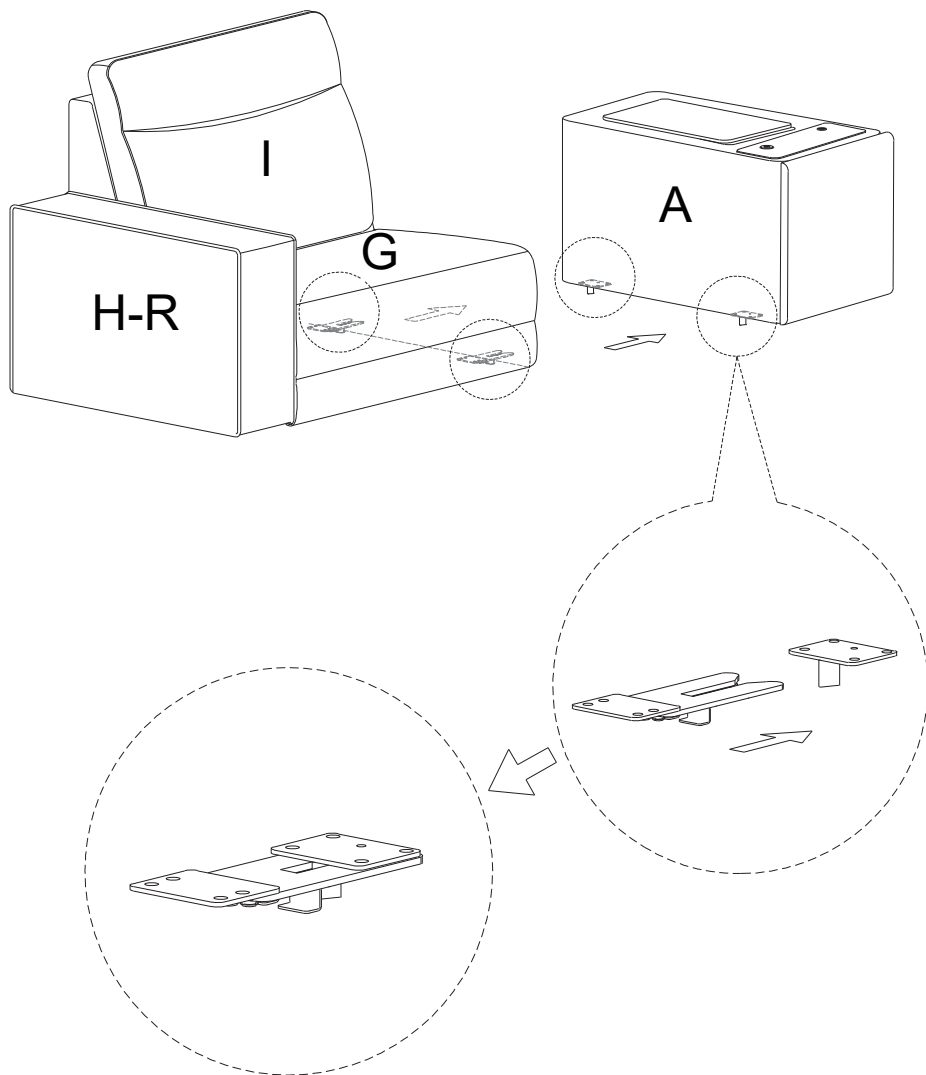


Note: If neither Console A nor B is included, the next seat can be connected directly in same way.

Step 2

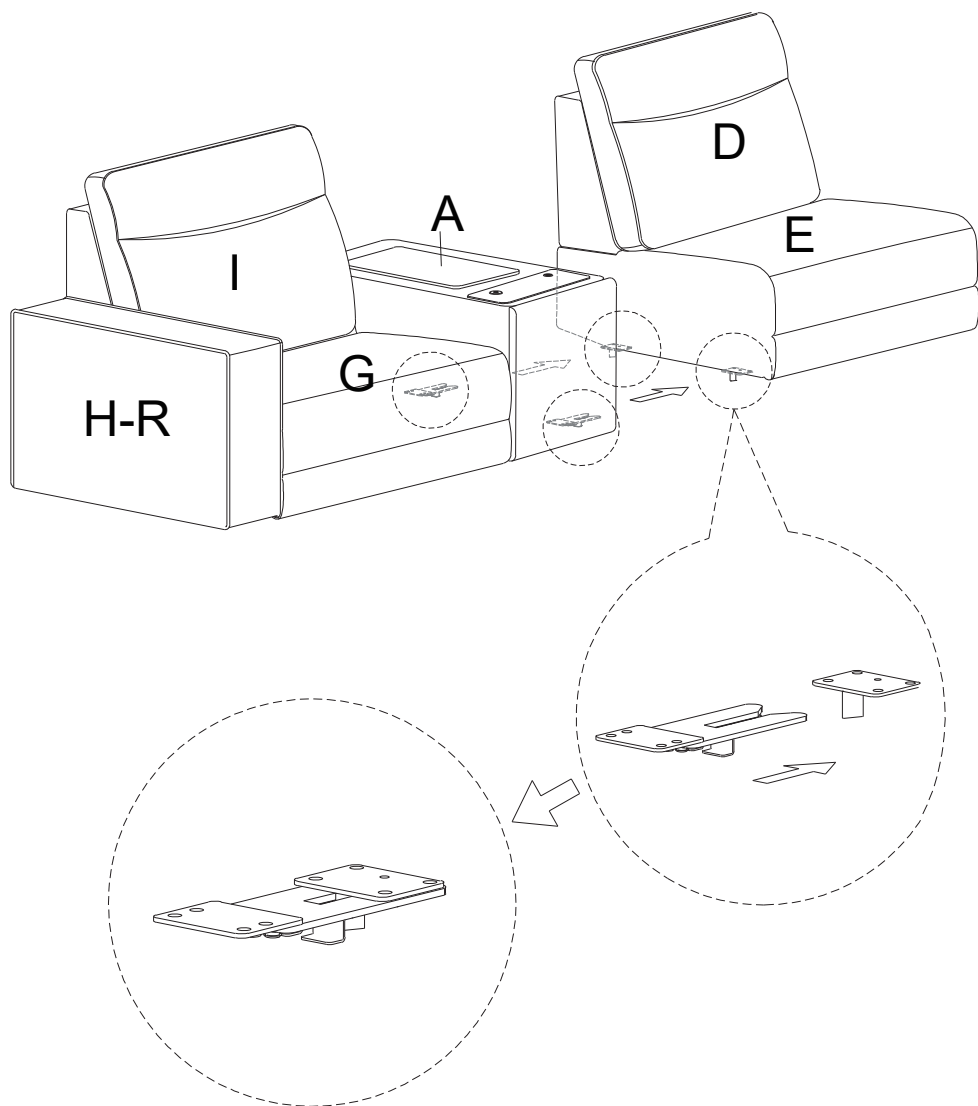


Note: If neither Console A nor B is included, the next seat can be connected directly in same way.

Step 3

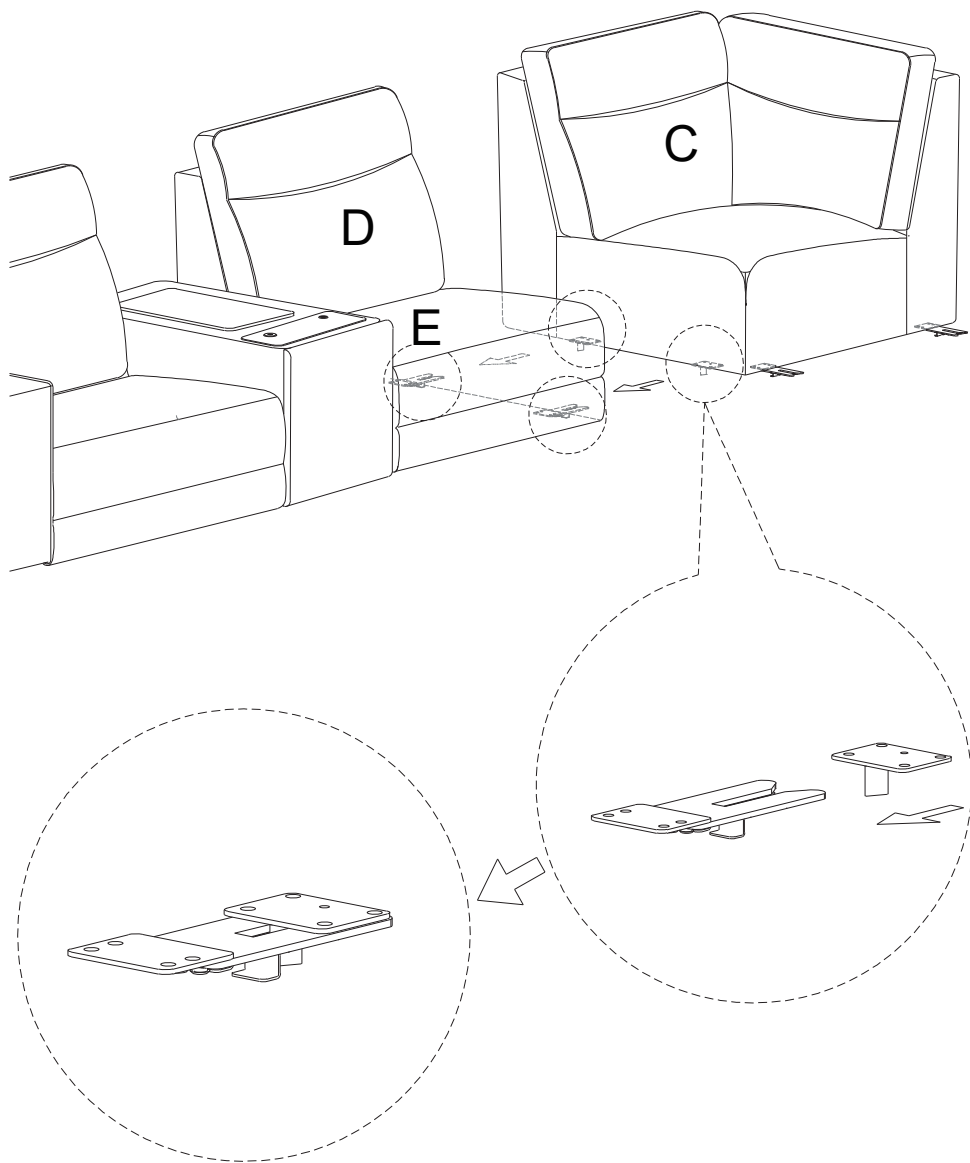


Note: If neither Console A nor B is included, the next seat can be connected directly in same way.

Step 4

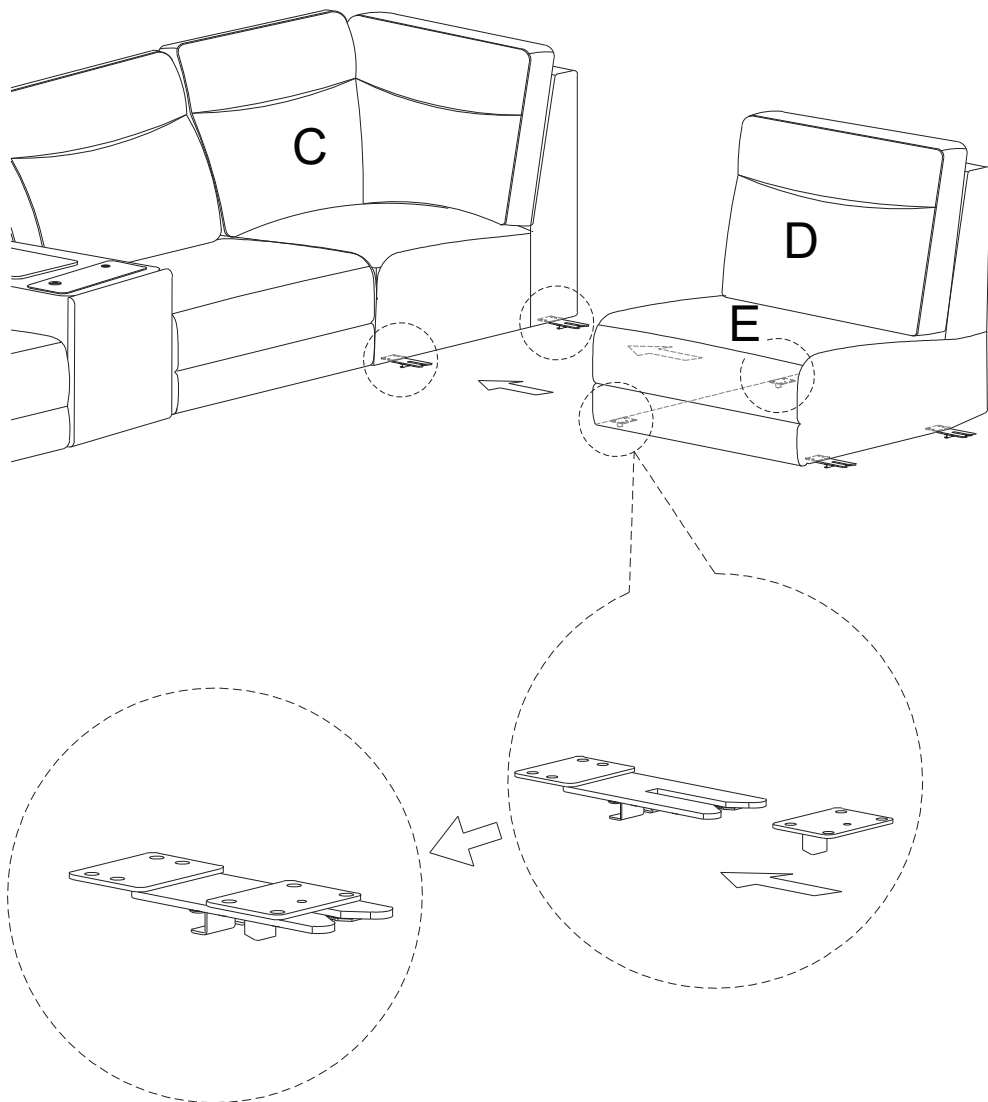


Note: If neither Console A nor B is included, the next seat can be connected directly in same way.

Step 5

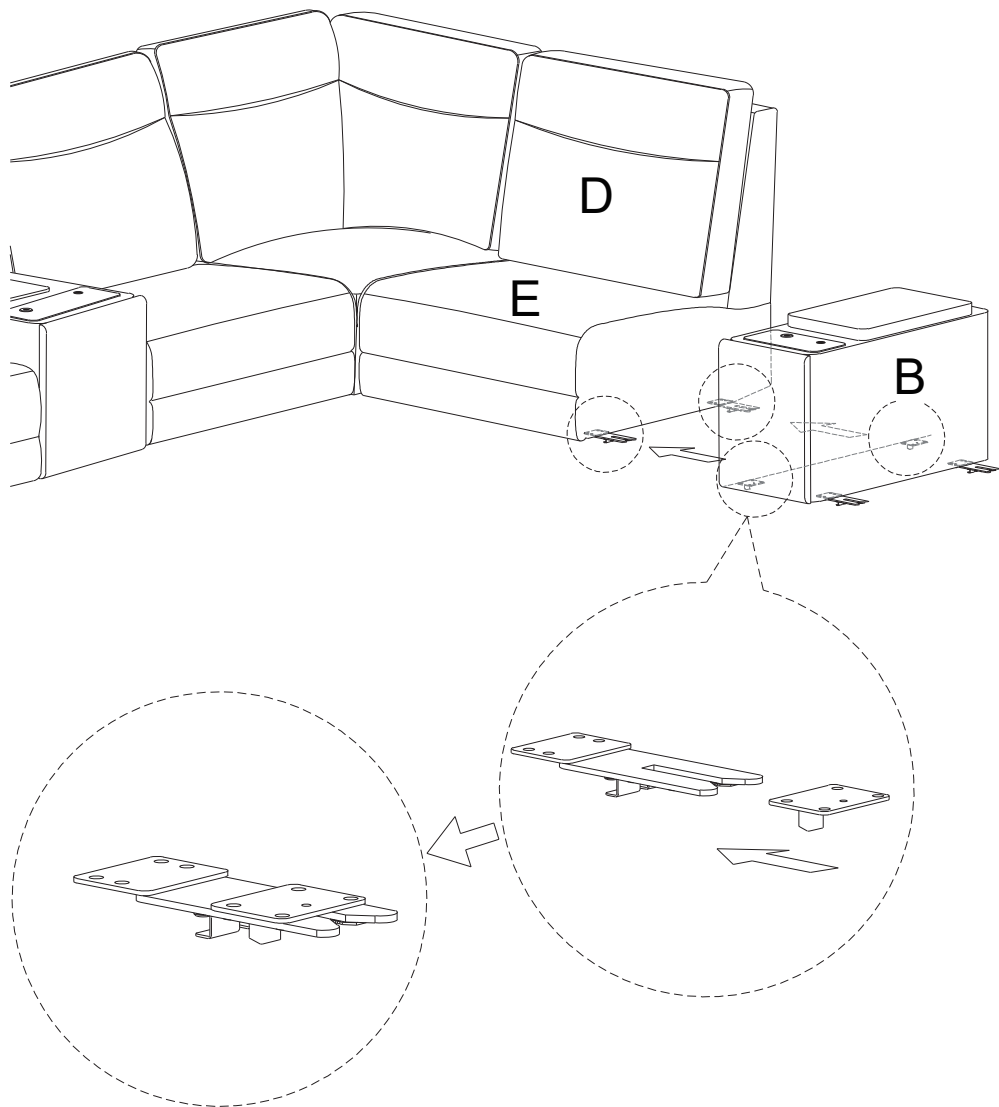

Note: If neither Console A nor B is included, the next seat can be connected directly in same way.



Step 6

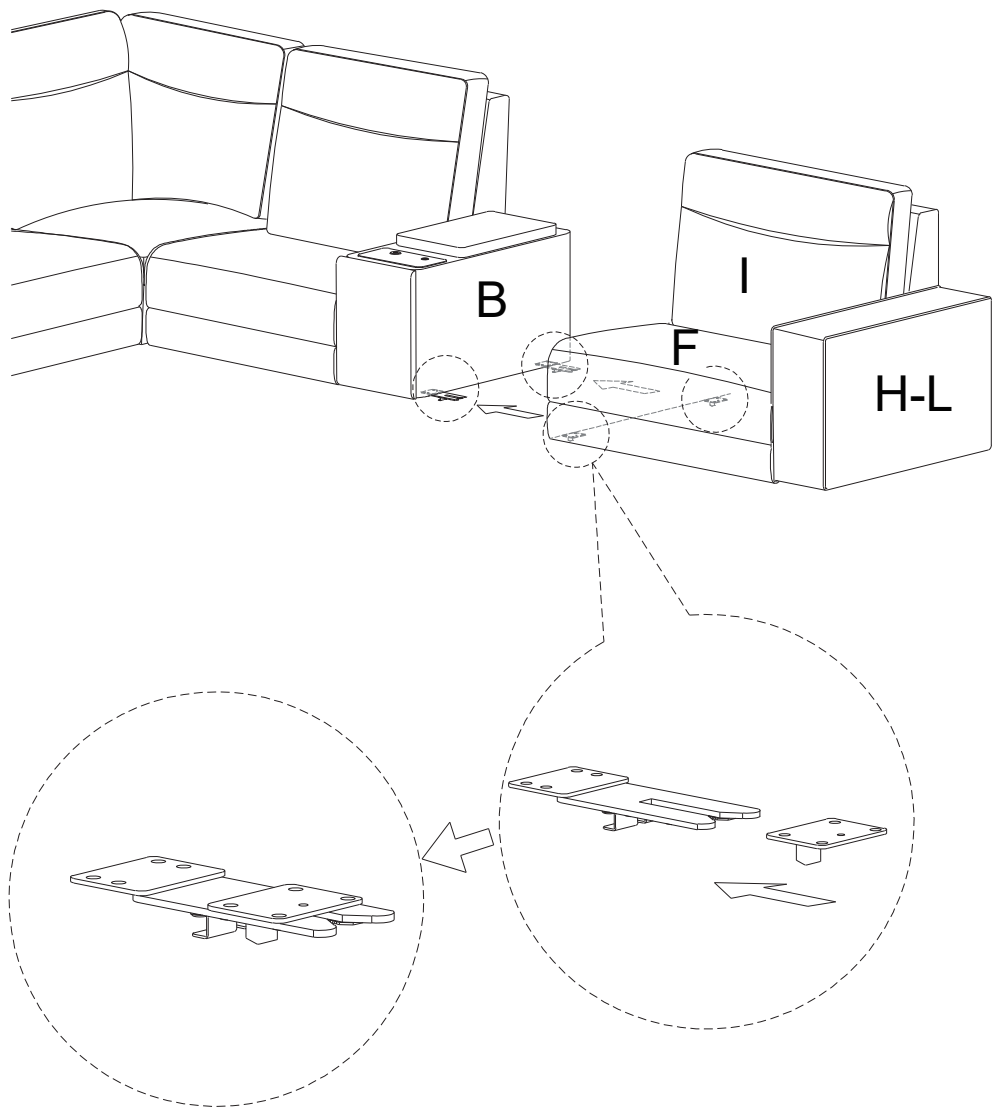

Note: If neither Console A nor B is included, the next seat can be connected directly in same way.

Functions Introduction

Power Connect

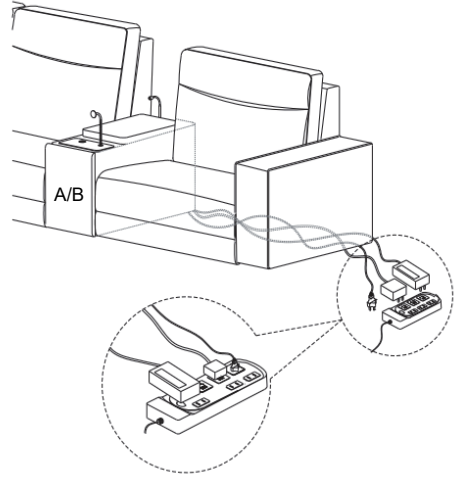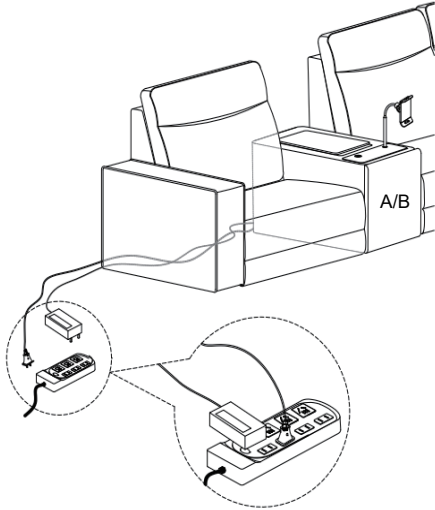

Reclining

