


ITEM NO. Z6BCDZ0723

Thank you for purchasing the bookcase .

Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product. At HULALA home we are committed to making great products possible. From our in-house Design Team, to our Buyers, we work together to bring great designs to life. Our expert Product Technologists work collaboratively with our buyers and suppliers to assure the legality, safety and quality of the product we sell. We are all committed to designing and developing products to the highest industry standards. We hope you are happy with your product and welcome any feedback or comments you may have.













Exploded Diagram

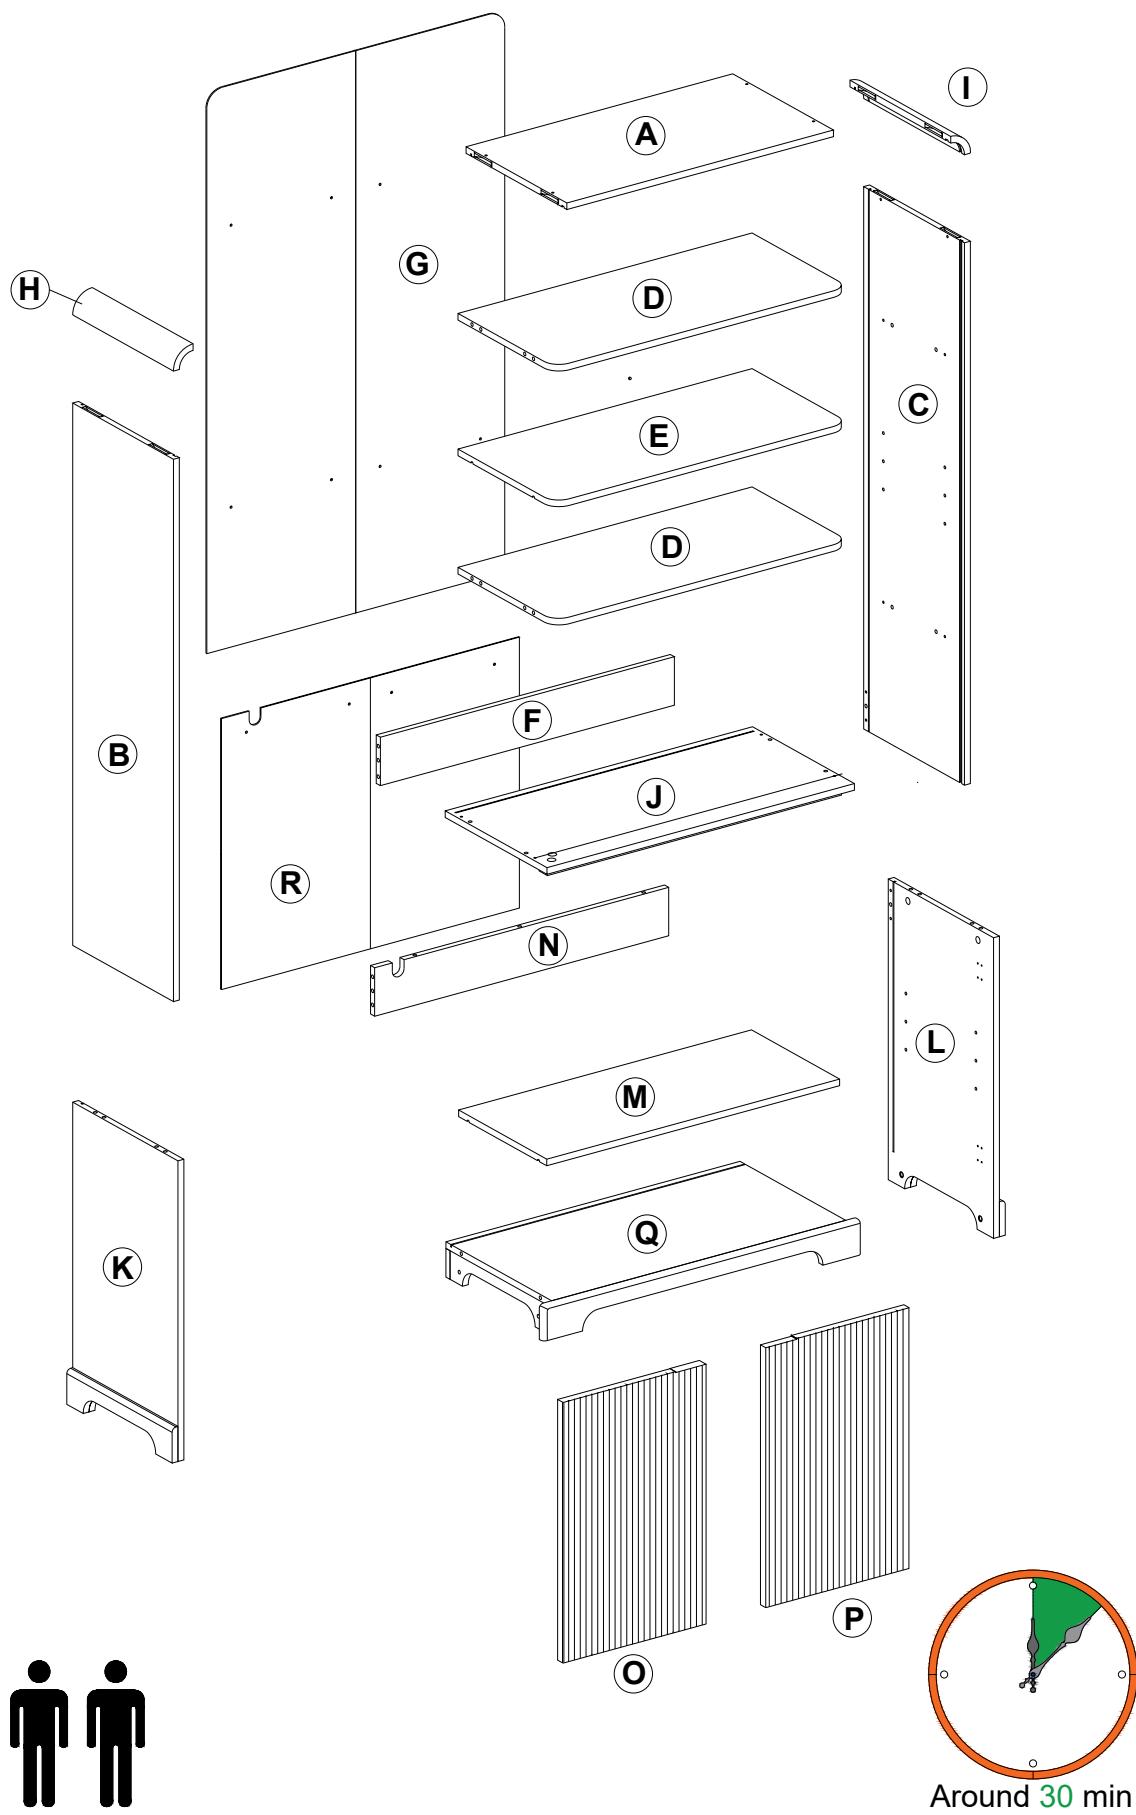


PARTS LIST

A Top Panel	B Upper Left Side Panel	C Upper Right Side Panel	D Fixed Shelf
E Upper Adjustable Shelf	F Upper Back Cross Rial	G Upper Back Panel	H Left Curved Panel
I Right Curved Panel	J Middle Fixed Panel	K Lower Left Side Panel	L Lower Right Side Panel
M Lower Adjustable Shelf	N Lower Back Cross Rial	O Left Door	P Right Door
Q Bottom Panel	R Lower Back Panel		

         HARDWARE LIST

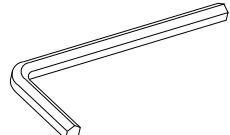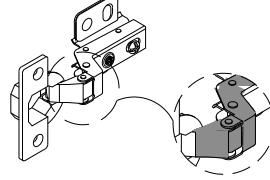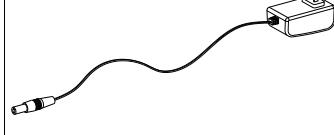1	x 22	2	x 22	3	x 25	4	x 4
							
Cam Bolt		Cam Lock		Wood Dowel 8x30mm		Bolt M6X25mm	
5	x 1	6	x 4	7	x 1	8	x 42
							
Allen Key 4mm		Bolt M5X40mm		Allen Key 3mm		Flat Head Screw Ø4X14 mm	
9	x 12	10	x 12	11	x 8	12	x4
							
Plastic Wedge For Back Panel		Round Head Screw Ø4X14mm		Shelf Support		Big Bend Hinge	
13	x 2	14	x 1	15	x 1	16	x1
							
Handle		LED Strip		LED Switch		Power Adapter	
17	x 2	18	x2	19	x2	20	x2
							
Bolt M6*12mm		Anti-slip Hardware		Anchor		Round Head Screw Ø4X25mm	
21	x 1	22	x 2				
							
Screwdriver		Cable Clip					

 SPARE LIST

1	x 2	2	x 2	3	x 2	4	x 1
							
Cam Bolt		Cam lock		Wood Dowel 8x30mm		Bolt M6X25mm	
8	x 4	9	x 1	10	x 1	11	x 1
							
Flat Head Screw Ø4X14mm		Plastic Wedge For back panel		Round Head Screw Ø4X14mm		Shelf Support	


Before your installation, please make sure that you have all the parts listed on the manual. If you find something missing, stop installing and contact your supplier immediately.

NOTE:Should be assembled on soft surface to keep balance.

ASSEMBLY INSTRUCTION

STEP 1


1		x 4
21		x 1

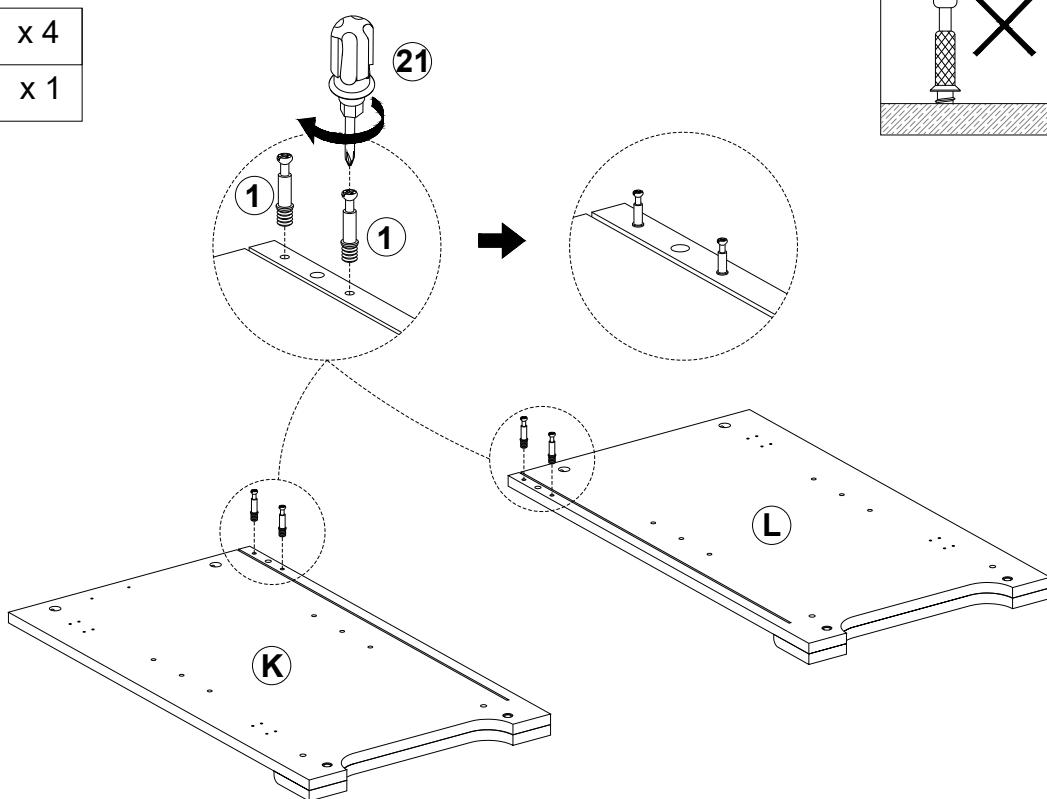

Insert the cam bolts (1) into the lower right side panel (L) and lower left side panel (K), and tighten with a screwdriver (21) as shown.

STEP 2


2		x 2
3		x 3
4		x 2
5		x 1

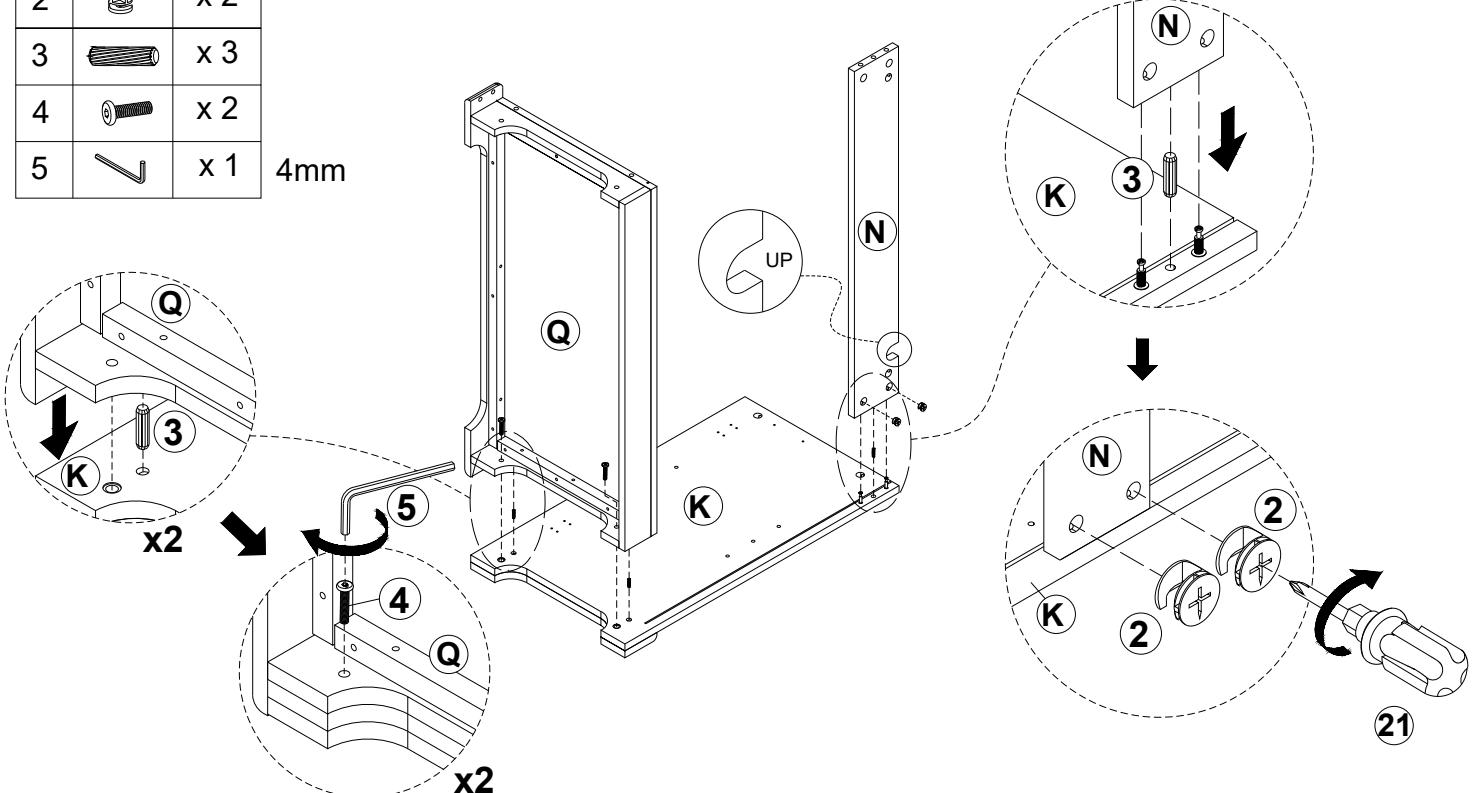

1. Insert the wood dowel (3) into the hole of the lower left side panel (K), Using cam lock(2) connect lower back cross rail(N) and tighten it with a screwdriver(21). 2. Use bolts (4) to pass through the holes in the bottom panel (Q) and connect it with the side panel, Then tighten it with a Allen key(5).


STEP 3

2		x 2
3		x 3
4		x 2

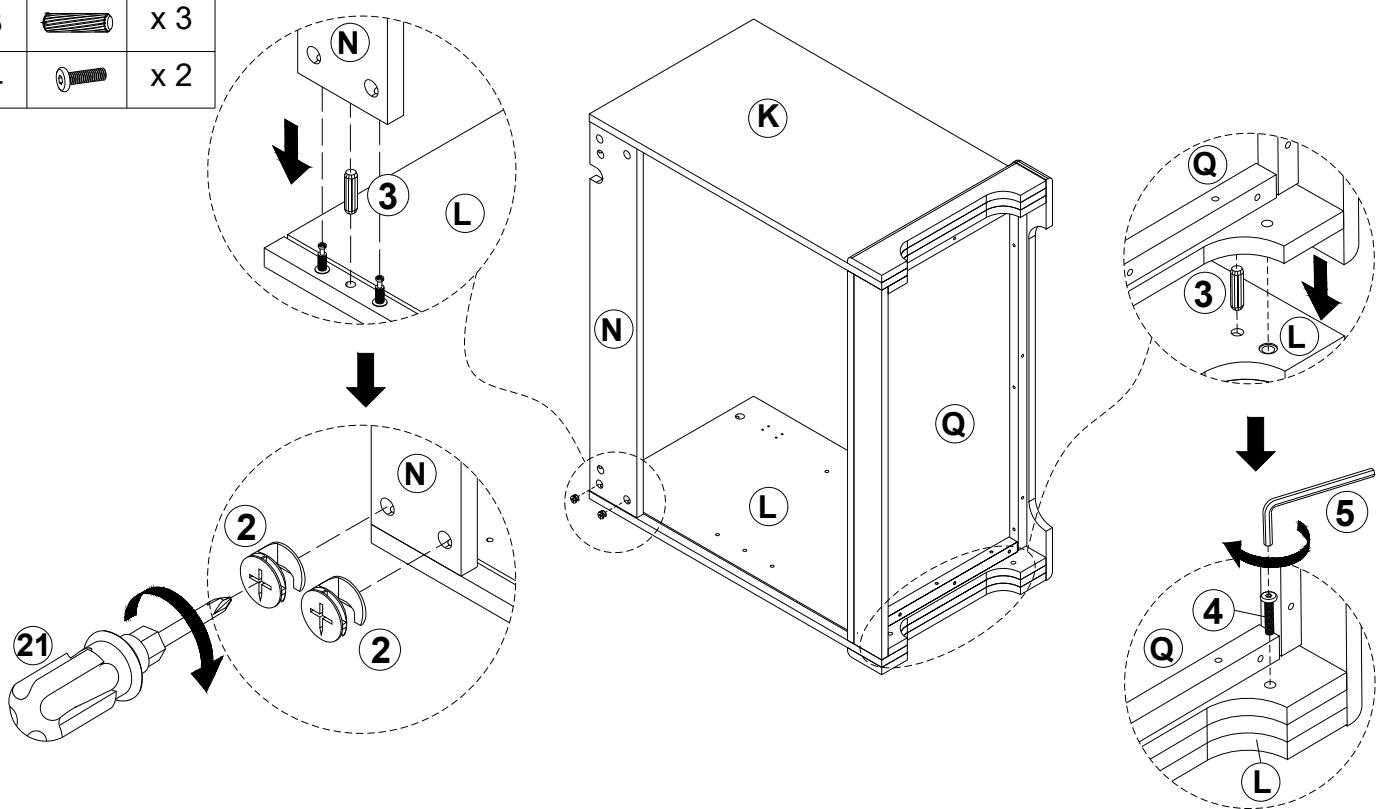

This assembly method is the same as the STEP 2.


STEP 4

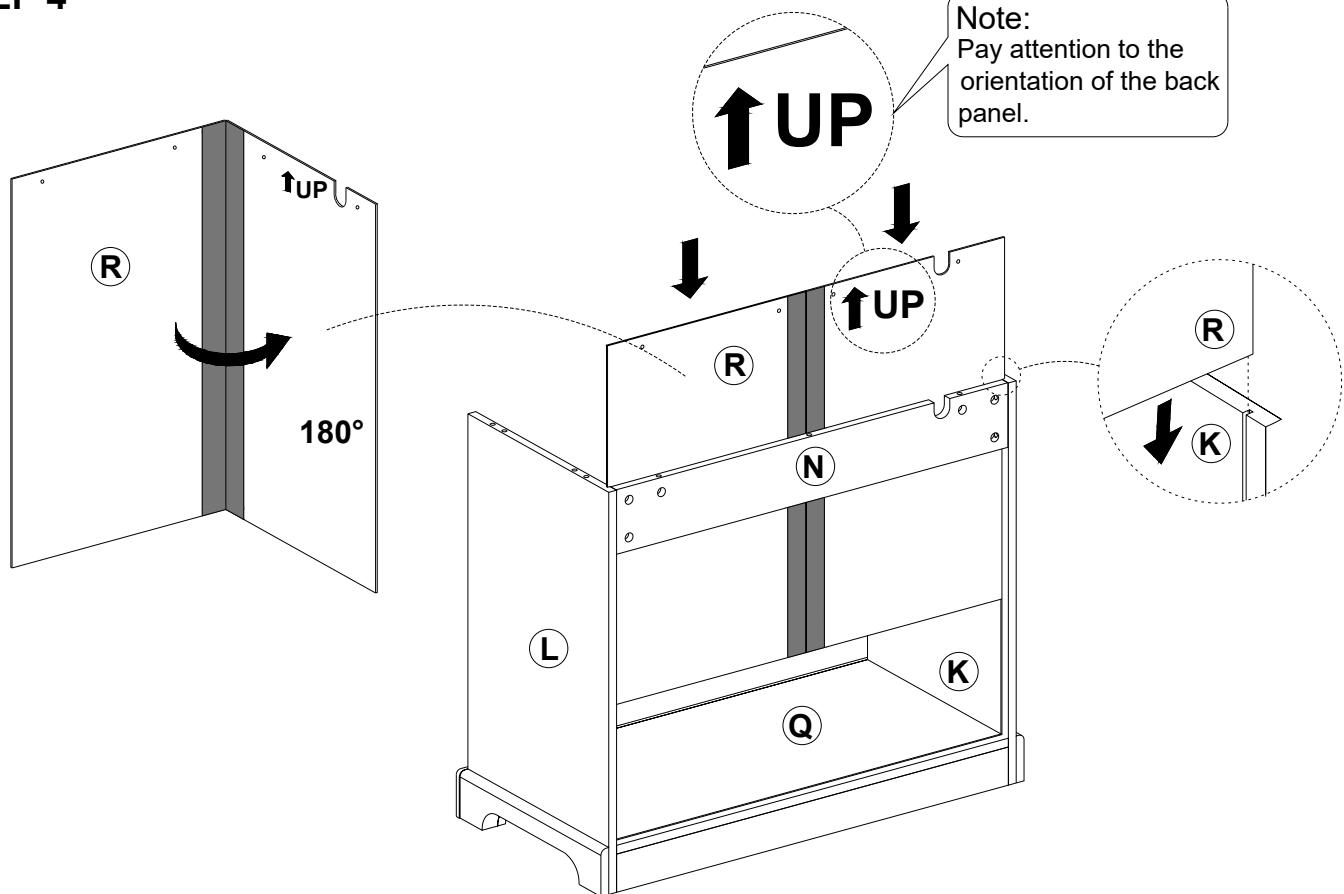

Open the lower back panel(R) and insert it into the slot of lower side panel (K) and (L) , as shown.

STEP 5


10		x 4
----	---	-----

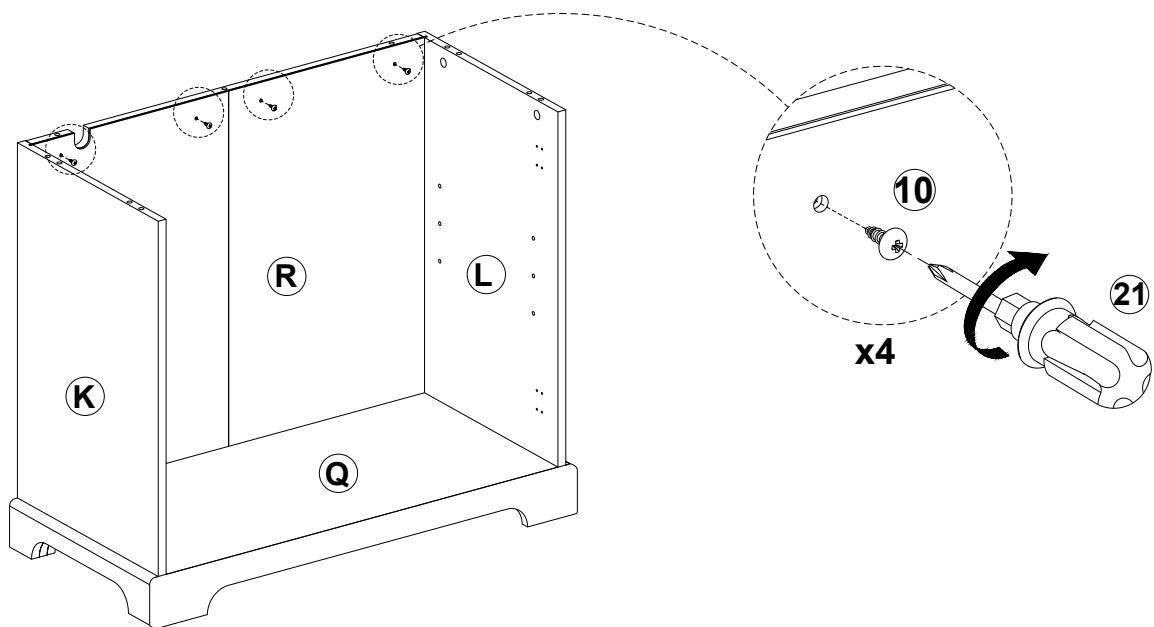

Use screws (10) to fix the lower back panel onto lower back cross rail(N), as shown

STEP 6


1		x 12
---	---	------

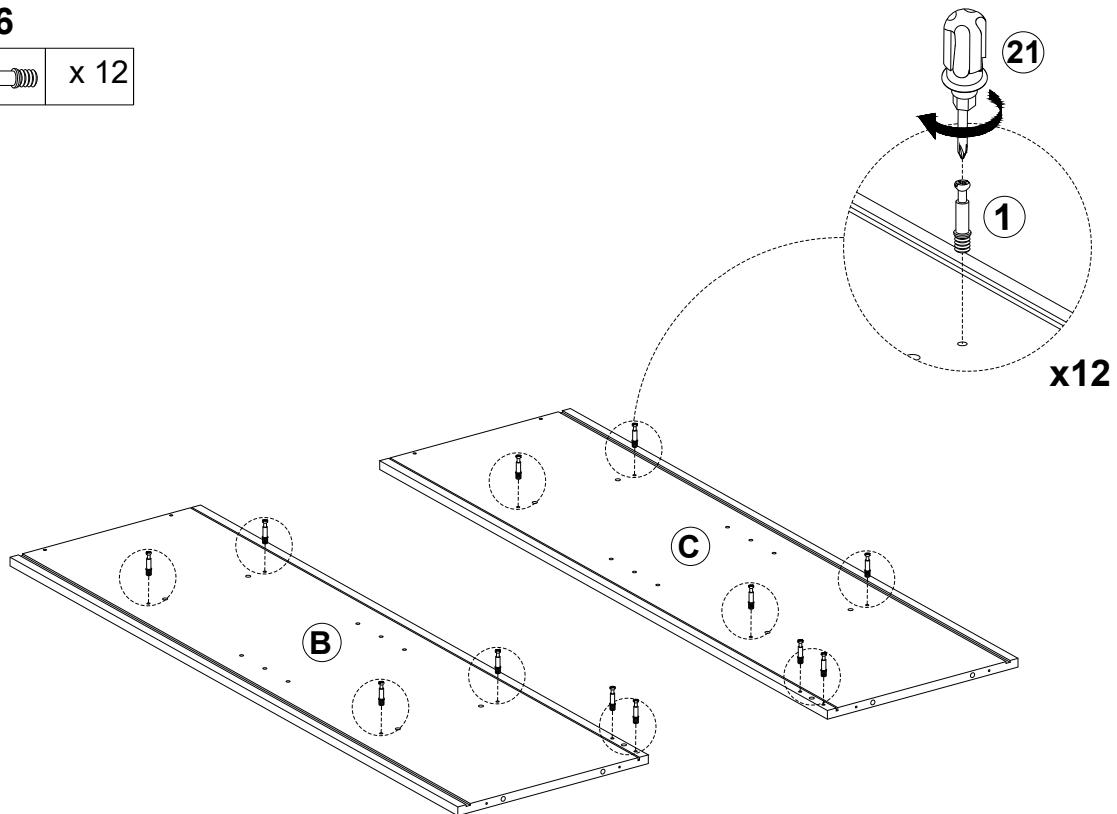

Insert the cam bolt (1) into the upper left side panel (B) and the upper right side panel(C), and tighten it with a screwdriver (21) as shown.

STEP 7


2		x 6
3		x 5

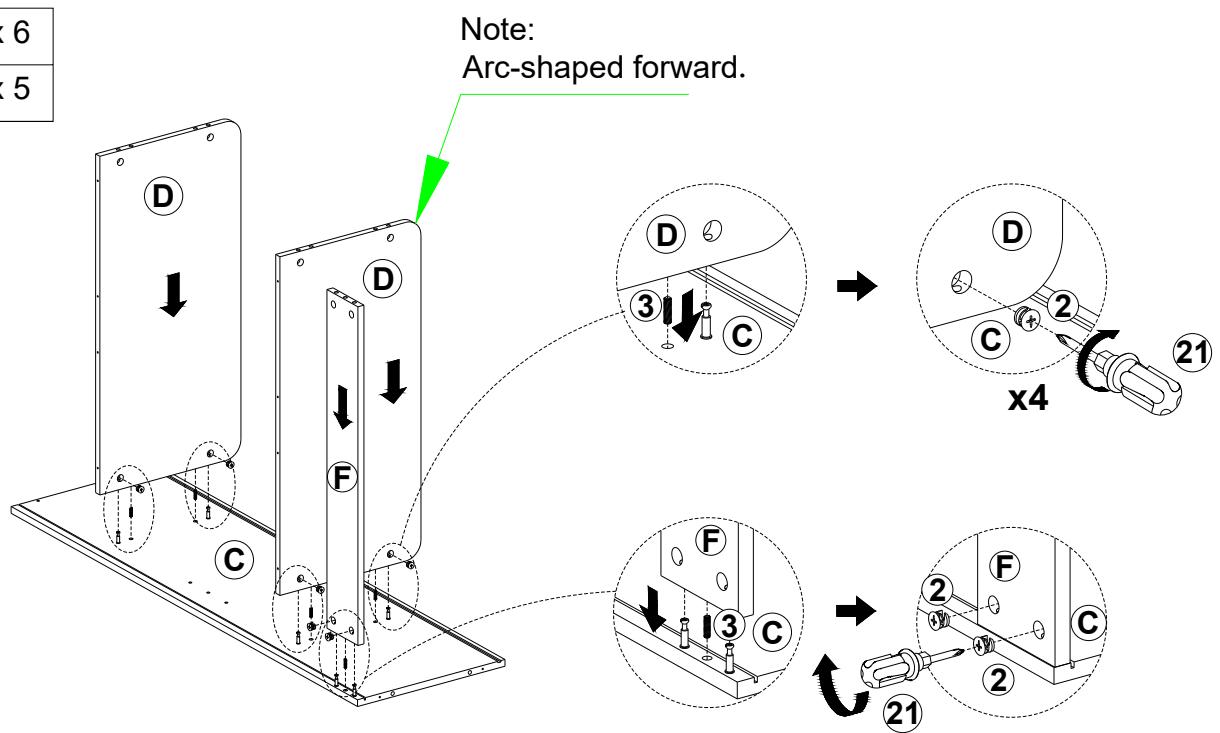

Insert the wood dowel (3) into the hole of the upper right side panel (C), Using cam lock(2) connect upper back cross rail(F) and fixed panel (D) tighten it with a screwdriver(21).

STEP 8

2		x 6
3		x 5

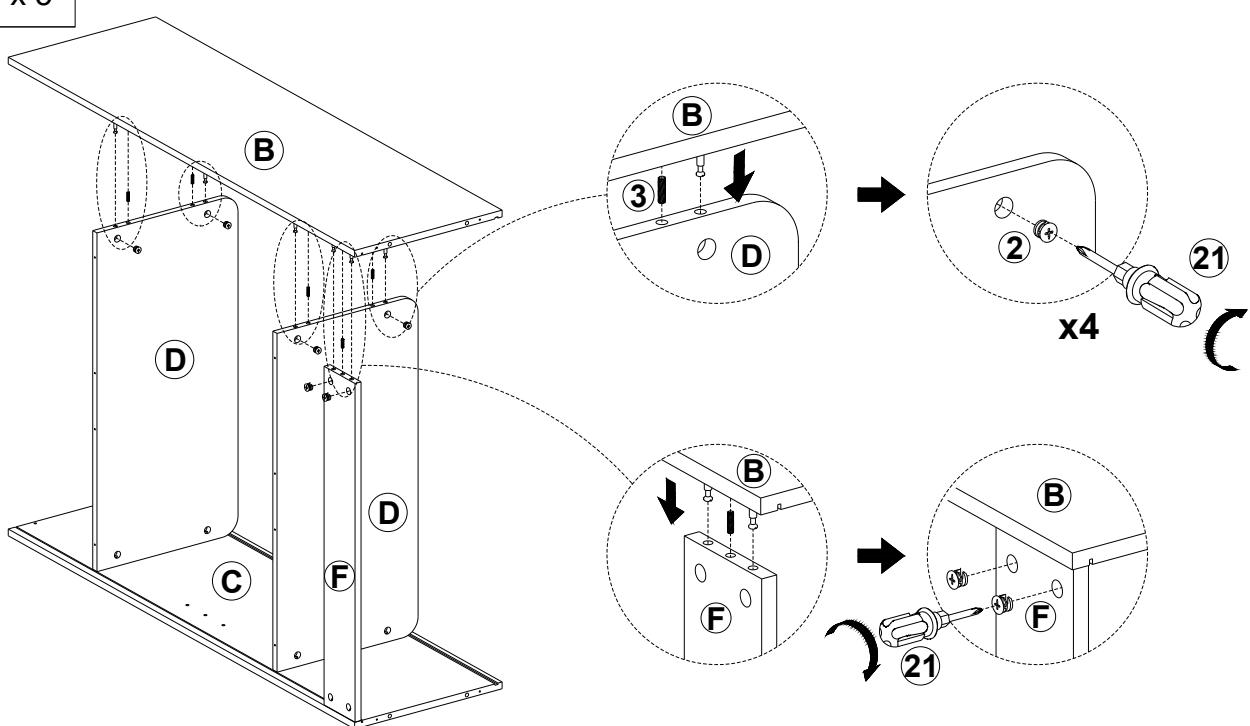


Insert the wood dowel (3) into the hole of the upper left side panel (B), Using cam lock(2) connect upper back cross rail(F) and fixed panel (D) tighten it with a screwdriver(21).

STEP 9


3		x 4
6		x 4
7		x 1

3mm

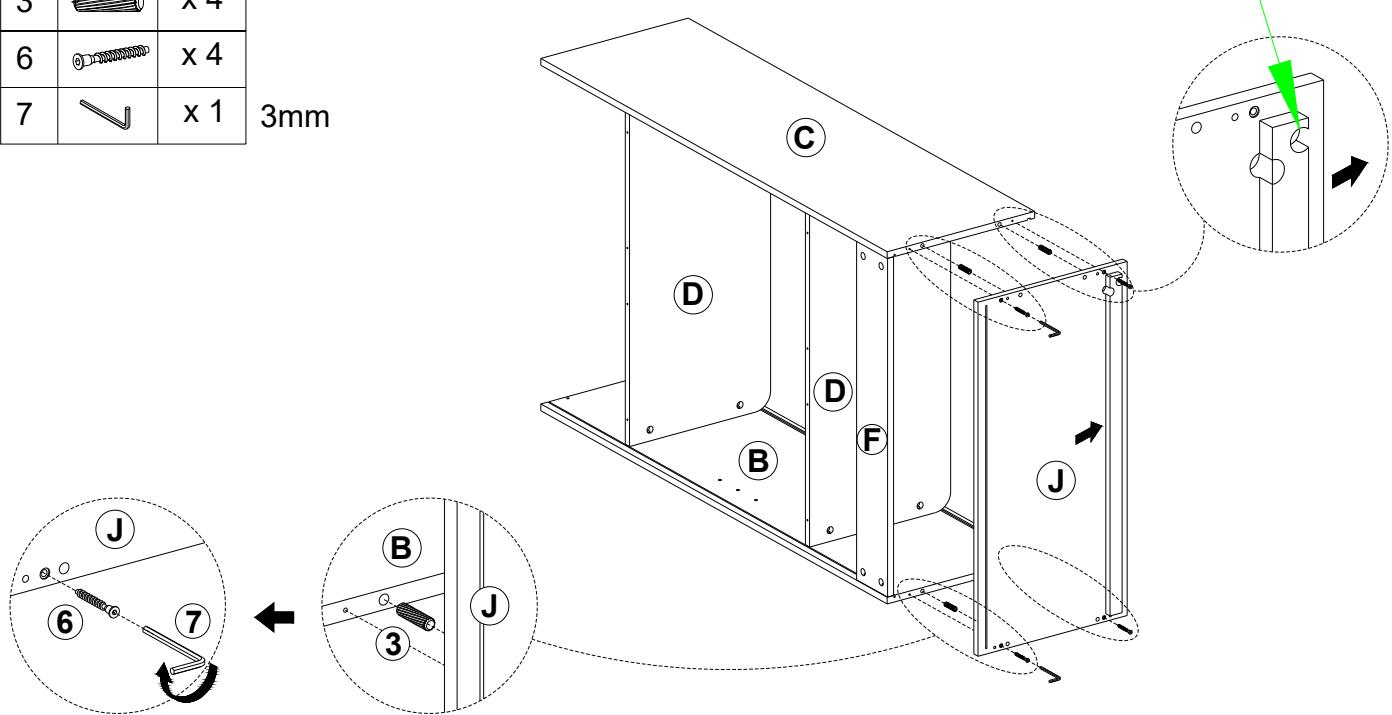


Insert the wood dowel (3) into the hole of the upper side panel (B)/(C), Using bolt (6) to pass through the holes in the middle fixed panel (J)connect upper side panel (B)/(C) tighten it with a Allen key(7).

STEP 10

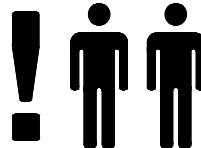


Note:

The operation requires two adults to complete

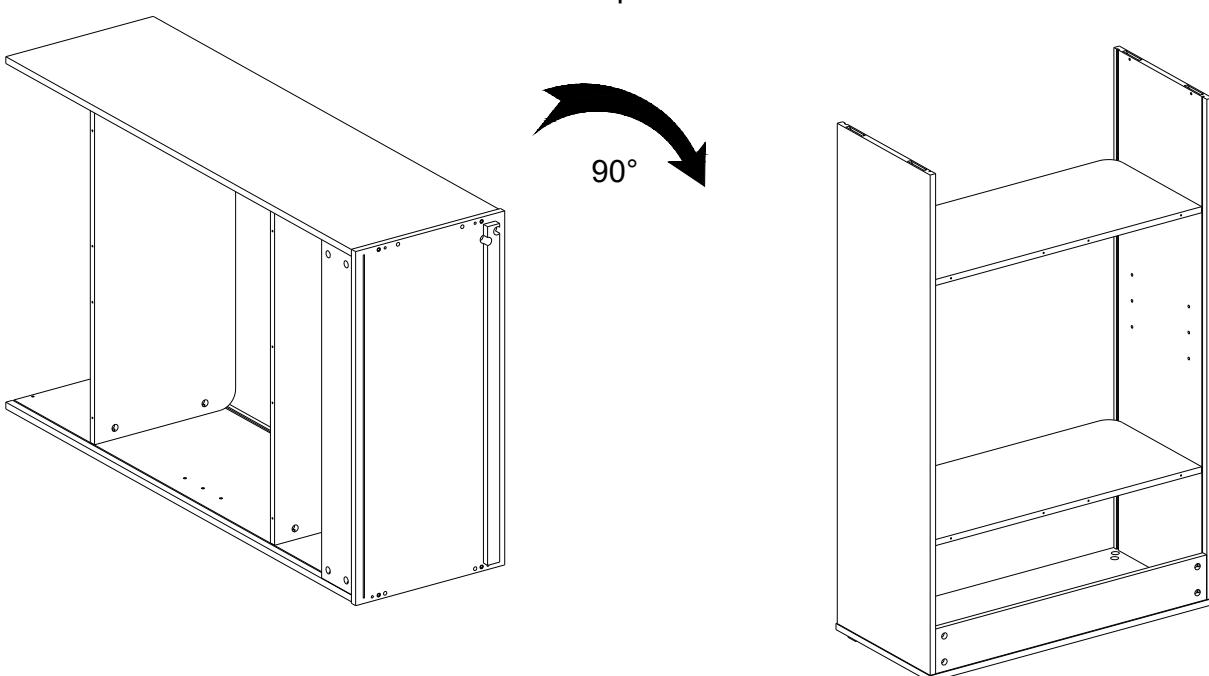

STEP 11



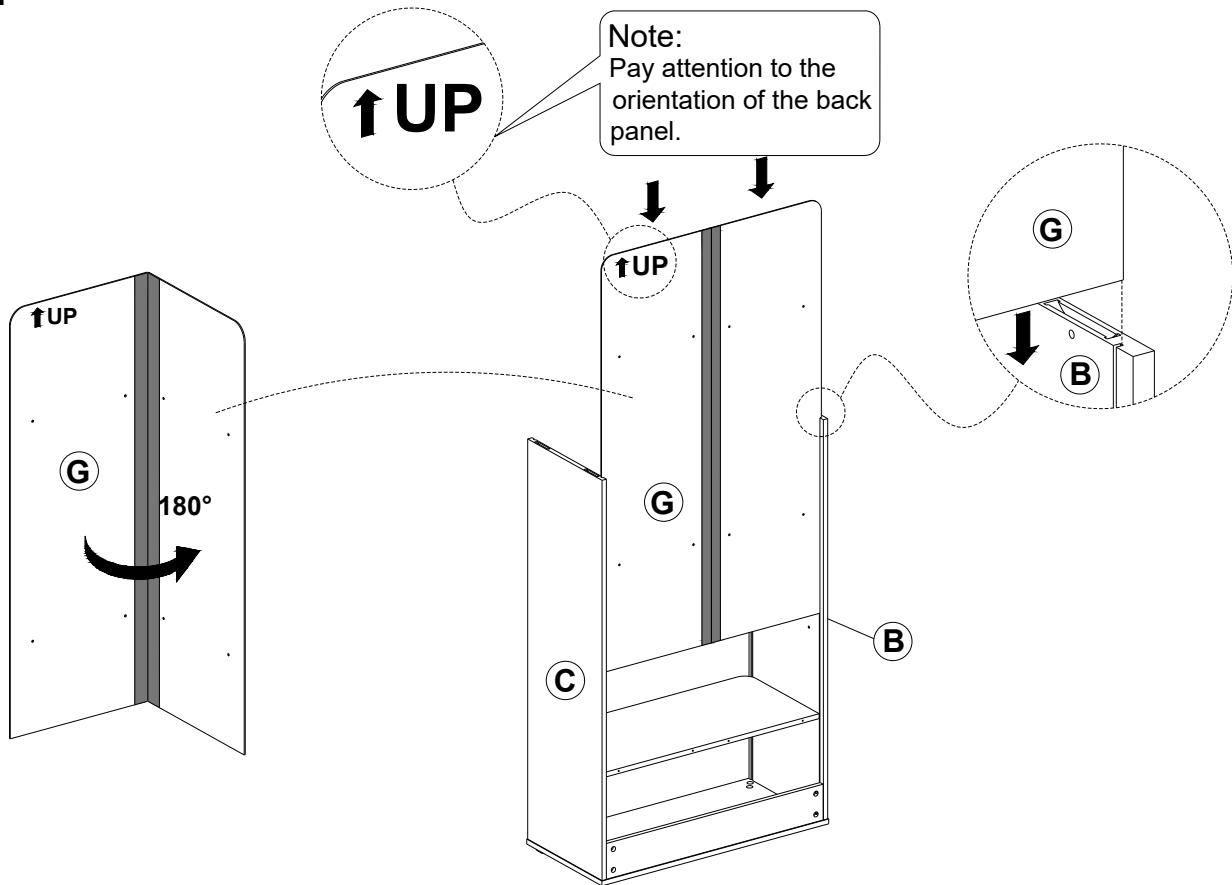


Open the upper back panel(G) and insert it into the slot of upper side panel (B) and (C) , as shown.

STEP 12

17		x 2
18		x 2


Step 1

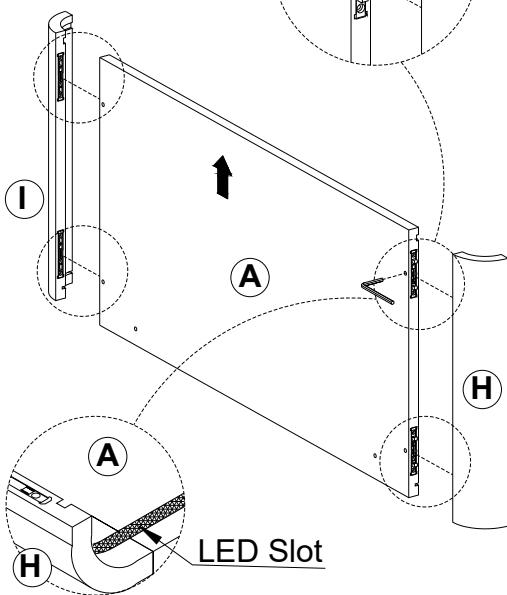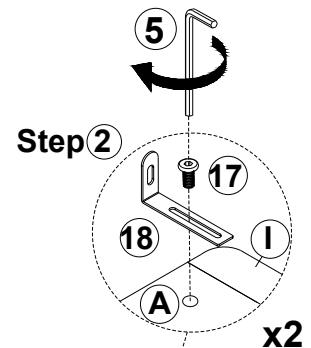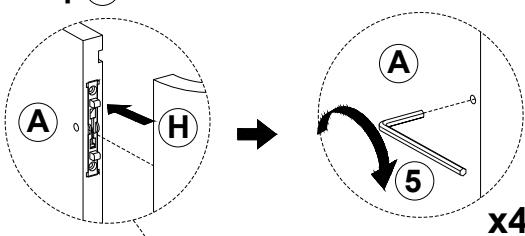

Back View

1.Insert the left and right curved panel(H)/(I) into the holes of the top panel and tighten them with an Allen key (5) as shown . 2.Use the bolt (17) to fix the anti-slip hardware(18) to the top panel and tighten it with a screwdriver, as shown.


STEP 13

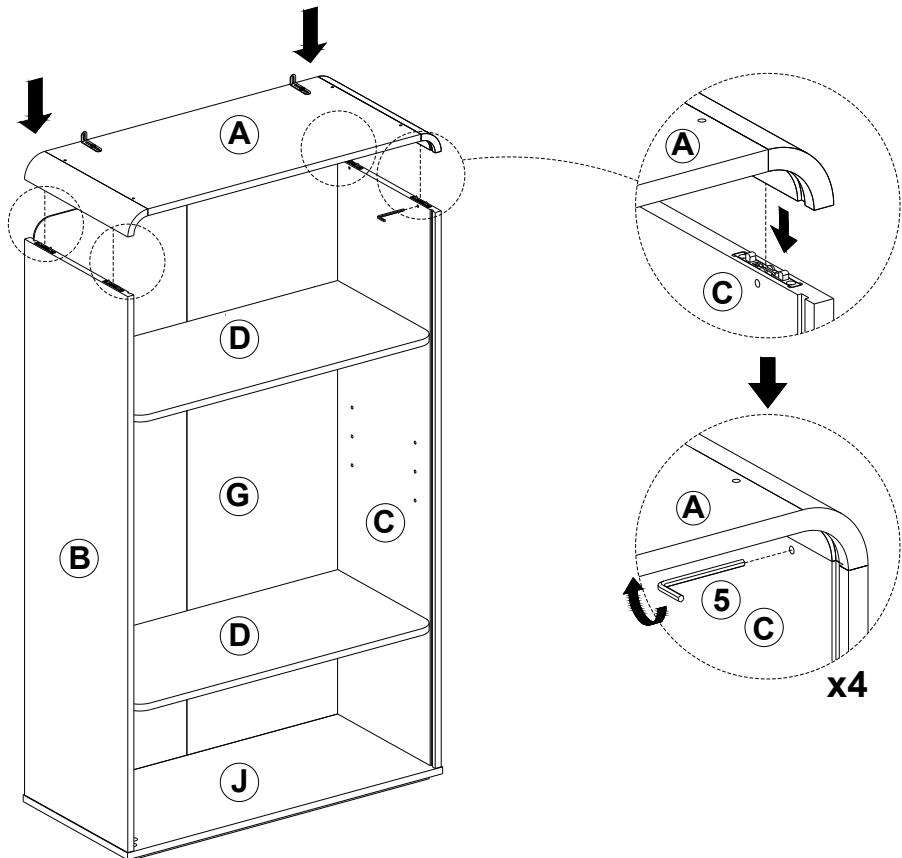

Insert the top panel (A) into the hole of the upper side panel (B) and (C), and tighten it with an Allen key (5) as shown

STEP 14


1		x 6
---	--	-----

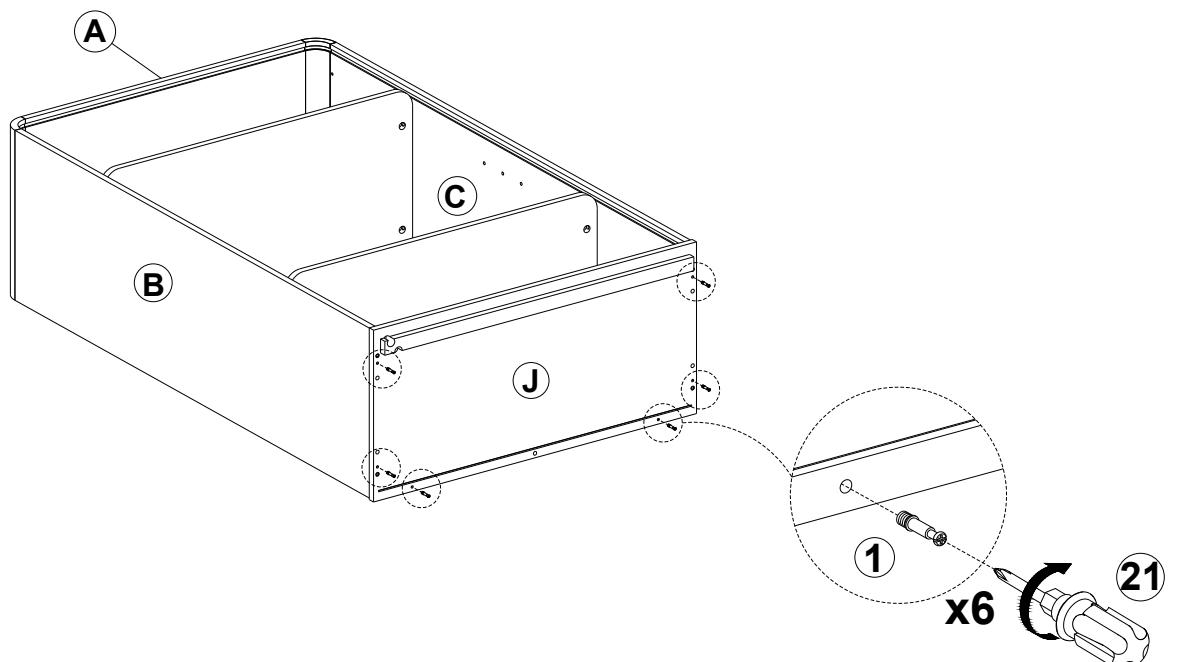

Insert the cam bolts (1) into the middle fixed panel (J), Then use the screwdriver (21) to tighten it according as shown.

STEP 15


2		x 4
3		x 5

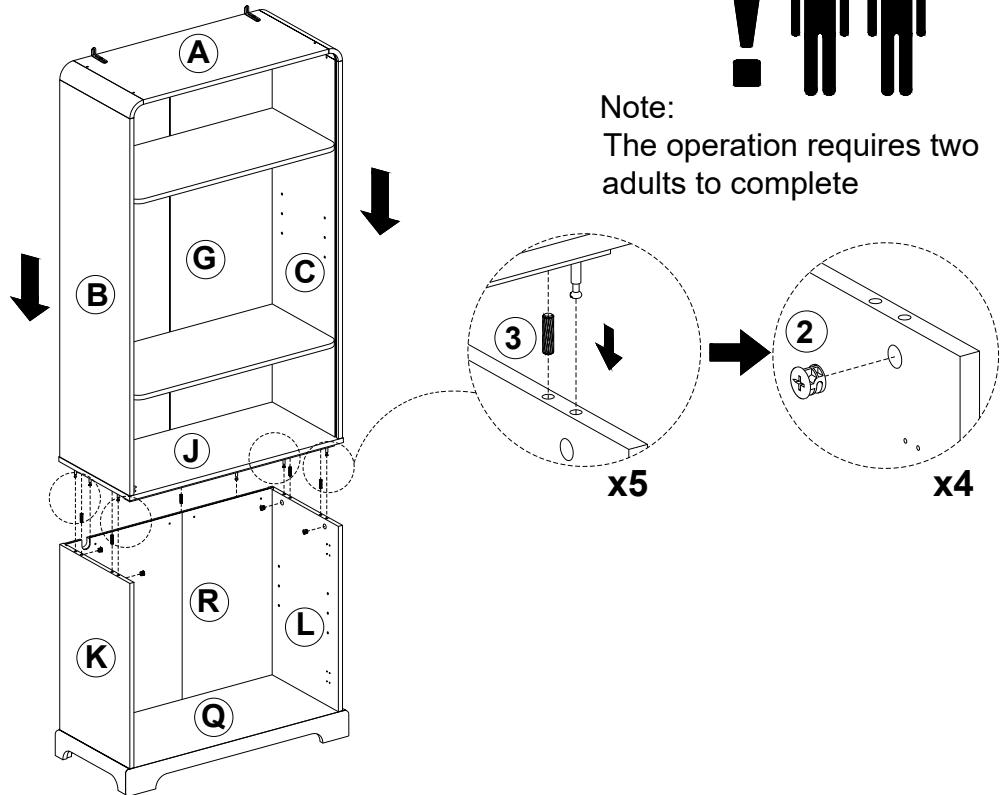

Insert the wood dowel (3) into the hole of the lower side panel (K)/(L), Using cam lock (2) connect middle fixed panel (J) tighten it with a screwdriver, as shown .

STEP 16


2		x 2
8		x 12
9		x 12
10		x 8

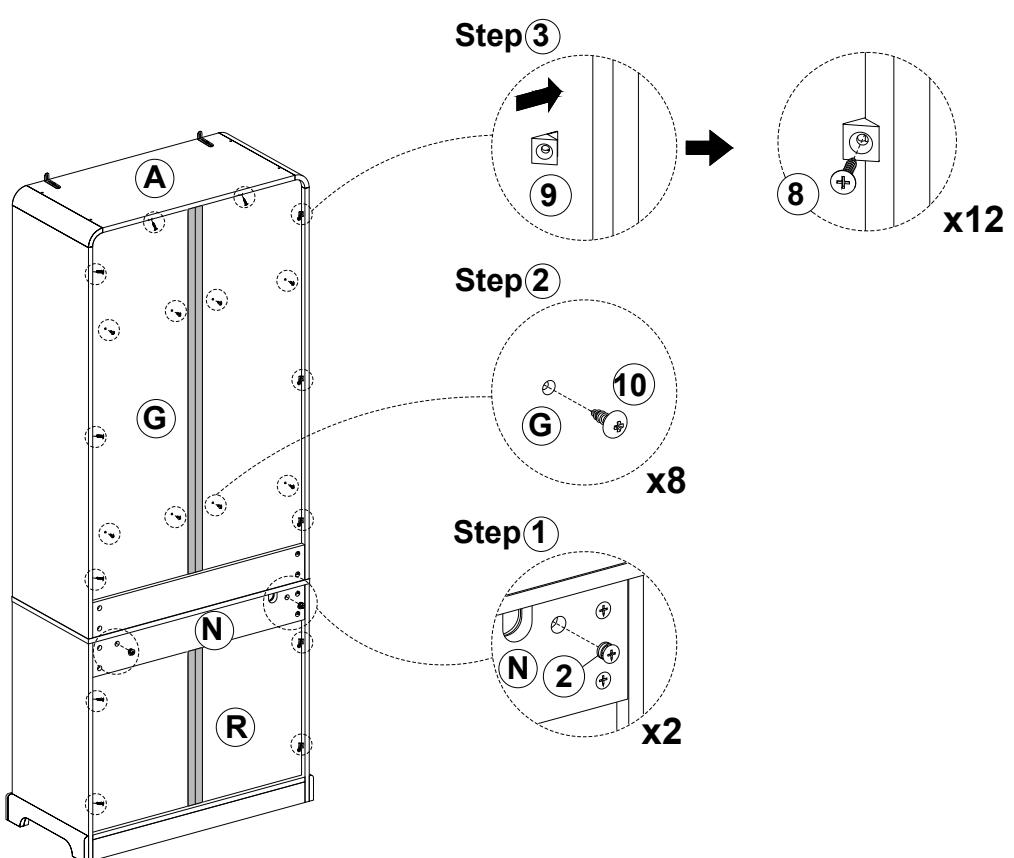

1. Insert cam lock (2) into the lower back cross rail (N) with tighten a screwdriver.
2. Fix the back panel using screws (10), as shown.
3. Insert the plastic wedge (9) and fix it with screws (8), and tighten them with a screwdriver, as shown.

STEP 17


14  x 1

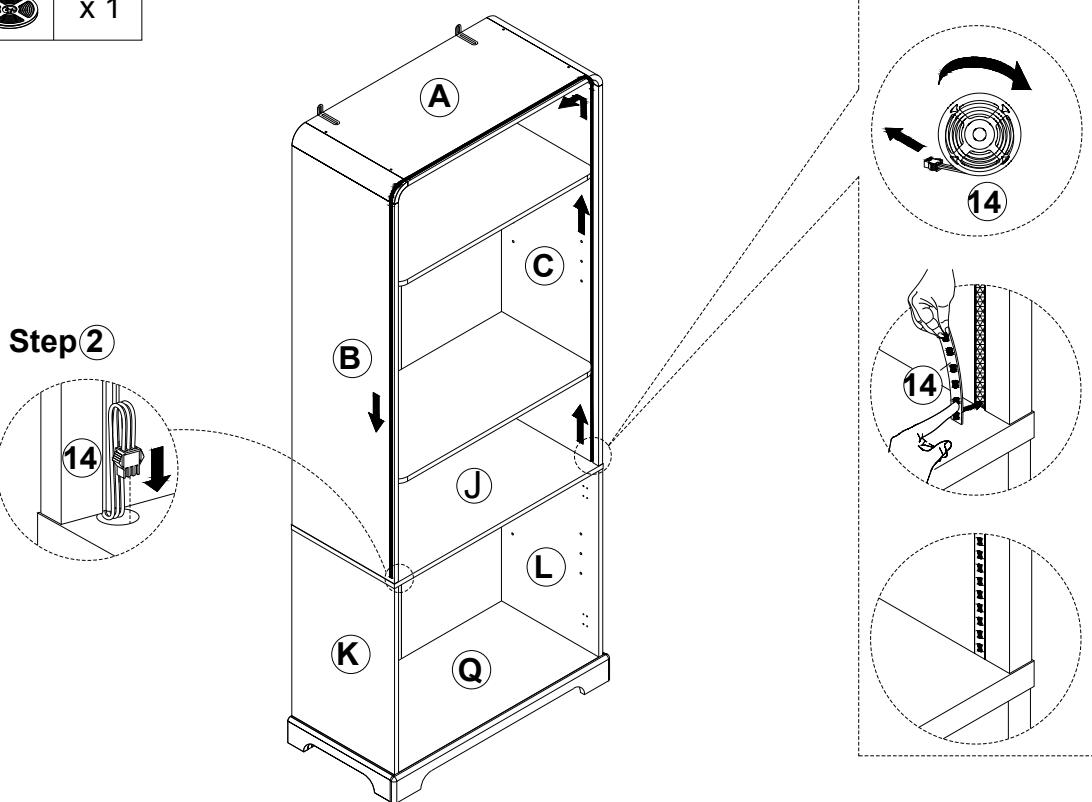

Install the LED strip (14) on the cabinet and pull it out through the hole of part (J), as shown.

STEP 18


8		x 2
15		x 1
22		x 2

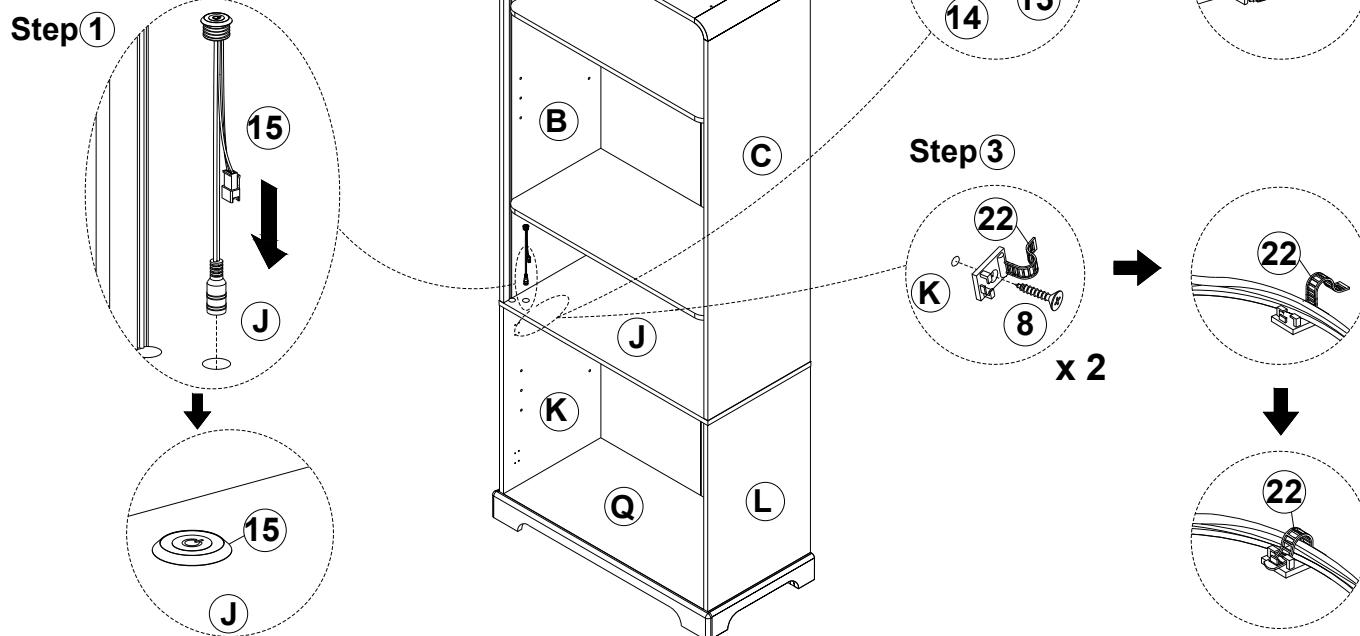

1. Install the LED switch(15) through the hole in the middle fixed panel (J) and secure it, as shown.
2. Connect the LED switch (15) and the LED light strip (14) as shown in the diagram, Secure with flat-head screws (8) and fix the wires with wire clips to the upper end of the lower left side panel(K) as shown.

STEP 19


11		x 8
----	---	-----

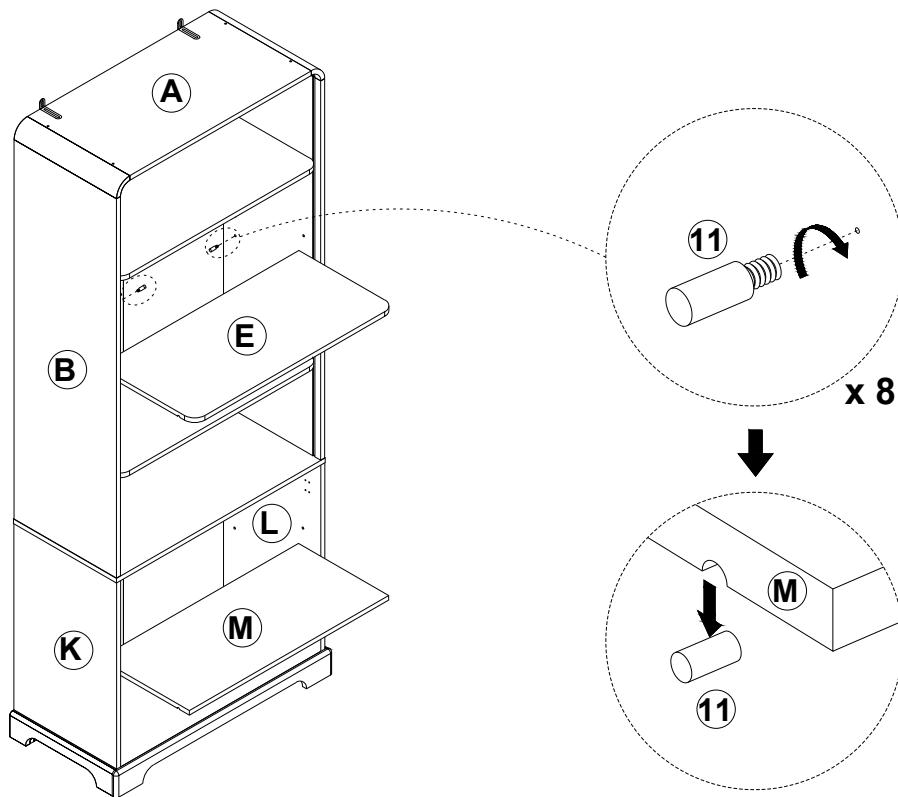

Tighten the shelf support (11) into the holes of side panel as show.

STEP 20

8		x 8
12		x 4

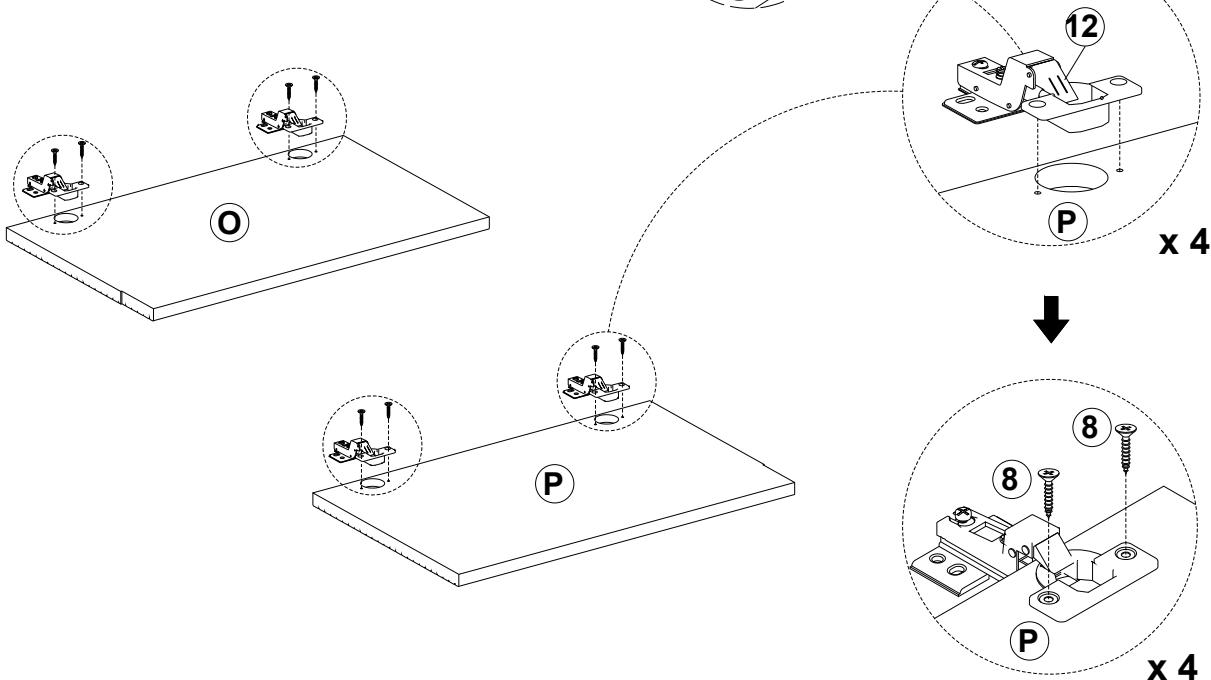


Install door hinges (12) onto door panel (O) and (P) using flat head screw (8) tighten with a screwdriver.

STEP 21


8		x 20
13		x 2

Step 1

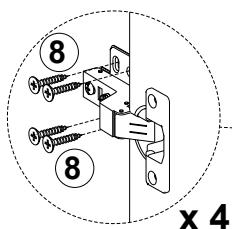


x 4

Step 2

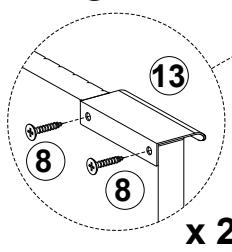


x 2

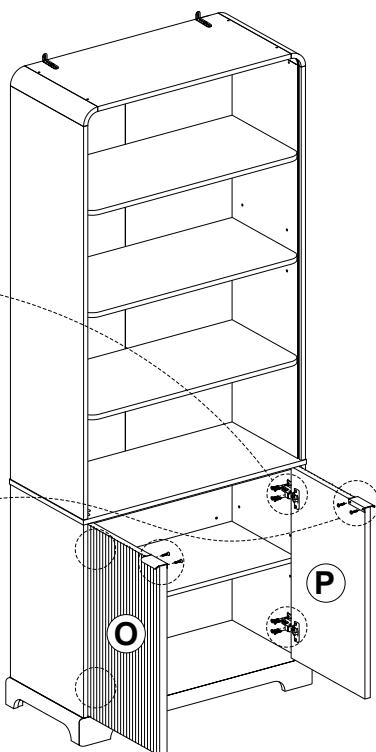


Close the door , if the doors are please adjust it as shown.


Concealed hinges are three-way adjustable.

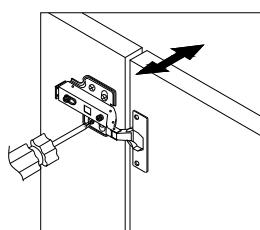

Horizontal by screw adjustment

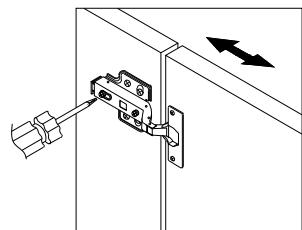

In-and-Out
by loosening the hinge-arm mounting screw or via cam adjustment

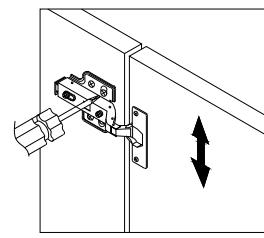



Vertical
Via slots in the mounting plate or via cam adjustment

1. Fix the door onto the cabinet using (8)screws as shown .
2. Then using screw (8) fix the handle onto the door as shown .


STEP 22

16		x 1
----	--	-----

Step 1

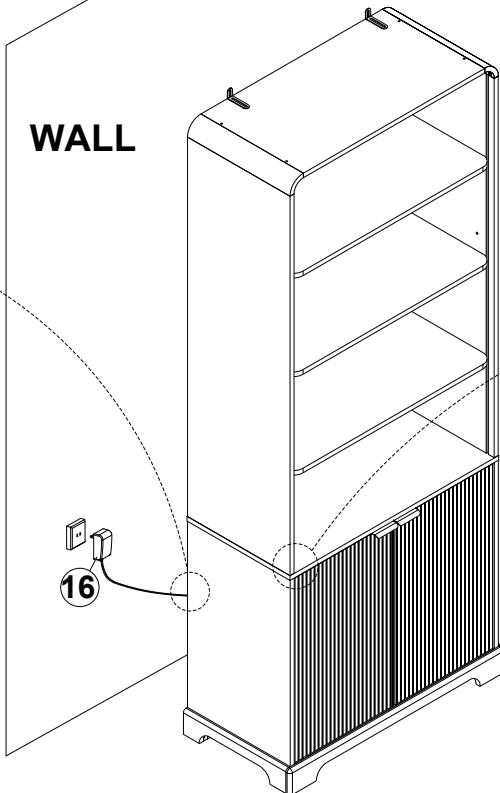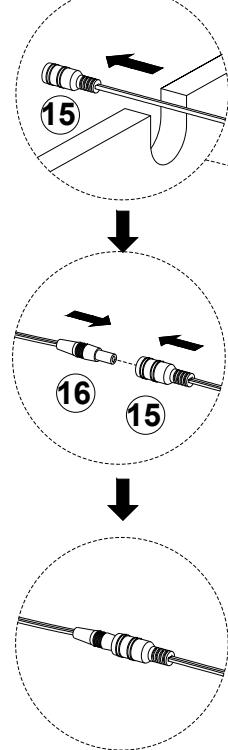

Step 2

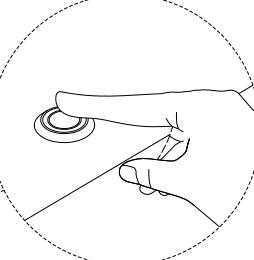

LED Touch Switch

Warm light



Neutral light



White light



OFF


Pull out the LED switch wire (15) and connect it to the power adapter (16) through on the upper back cross panel(N), as shown.

STEP 23


19		x 2
20		x 2




The anti tipping warning sign is located on the inside of the left door.

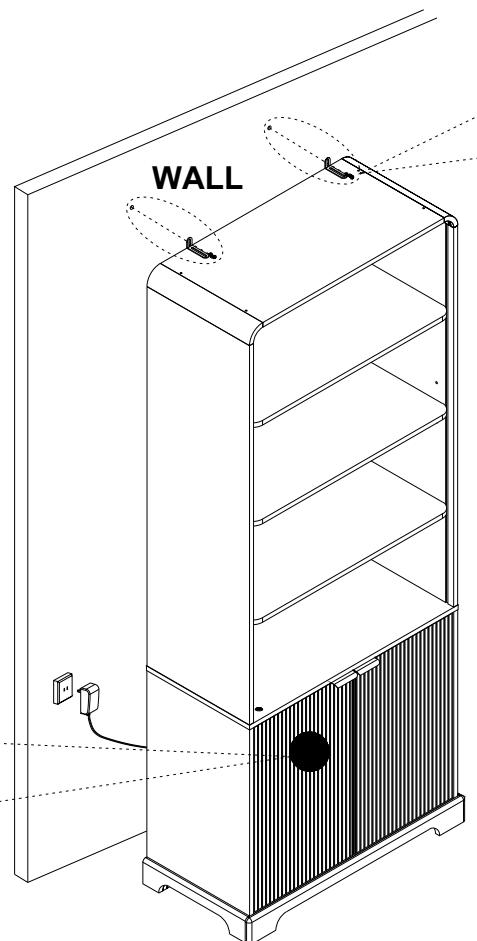


Step①

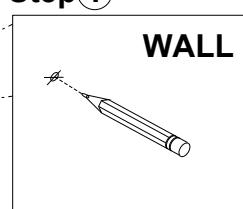


Step②

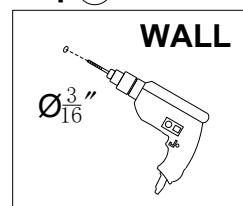

Step③

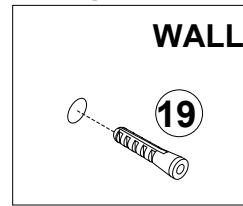


Step④

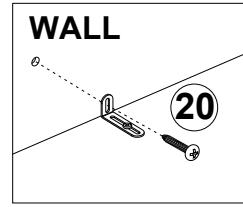

x 2

STEP 24

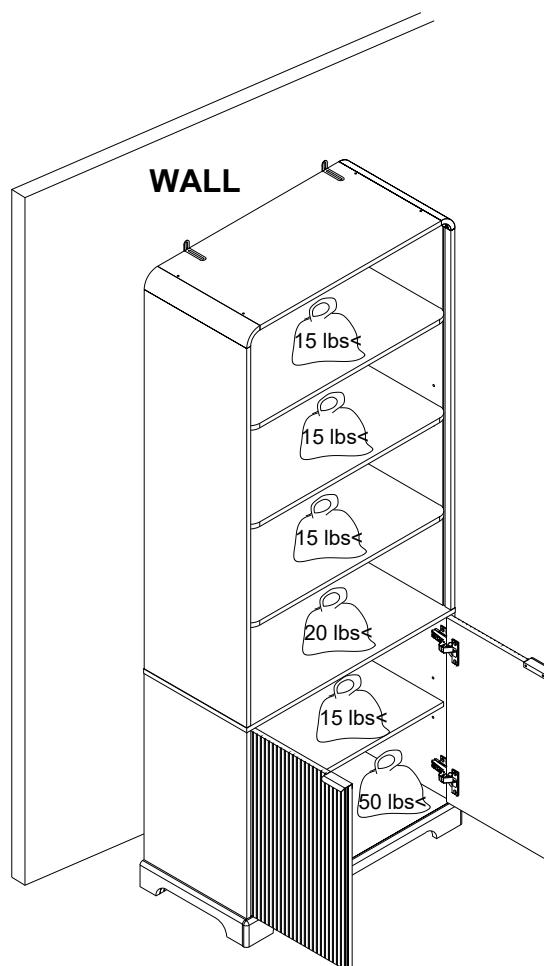

MAINTAINANCE AND WARNING



- Keep furniture away from heat.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry Cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, For residential use only.
- The maximum load is 130 LBS.

WARRANTY

We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

Are you having difficulty with assembly? Missing parts? Please send email with your order No to customerservice@hulalahome.com

For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!