


ITEM NO. Z6CBCH0584


Thank you for purchasing the cabinet . Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product. At hulalahome we are committed to making great products possible. From our in-house Design Team, to our Buyers, we work together to bring great designs to Our expert Product Technologists work collaboratively with our buyers and suppliers to assure the legality, safety and quality of the product we sell. We are all committed to designing and developing products to the highest industry standards. We hope you are happy with your product and welcome any feedback or comments you may have.

Exploded Diagram

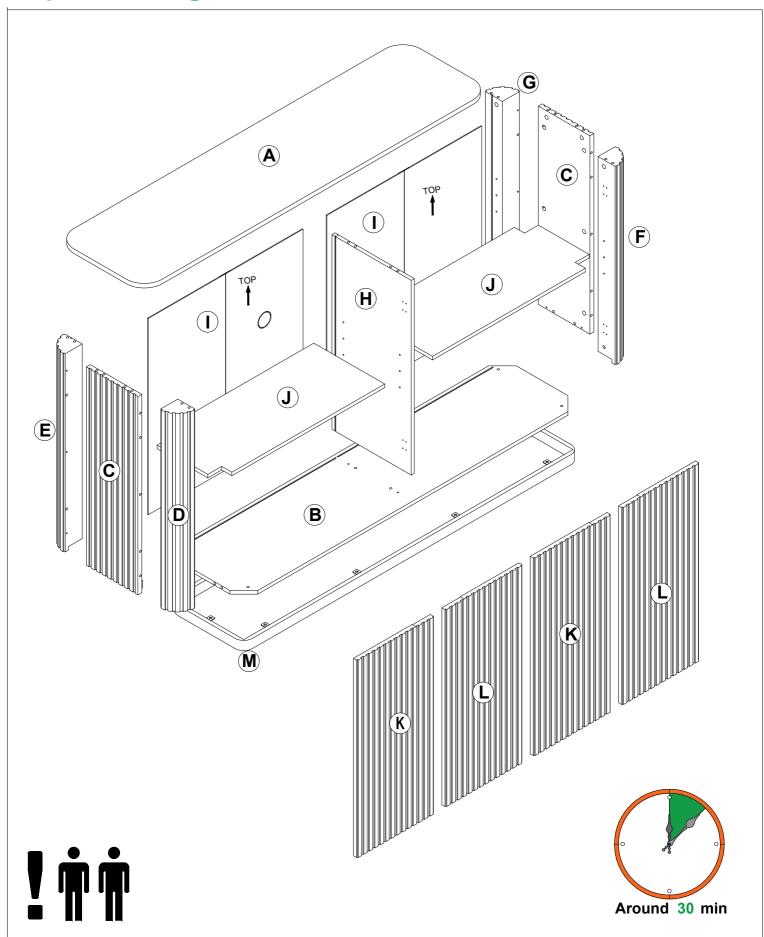


Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

PARTS LIST

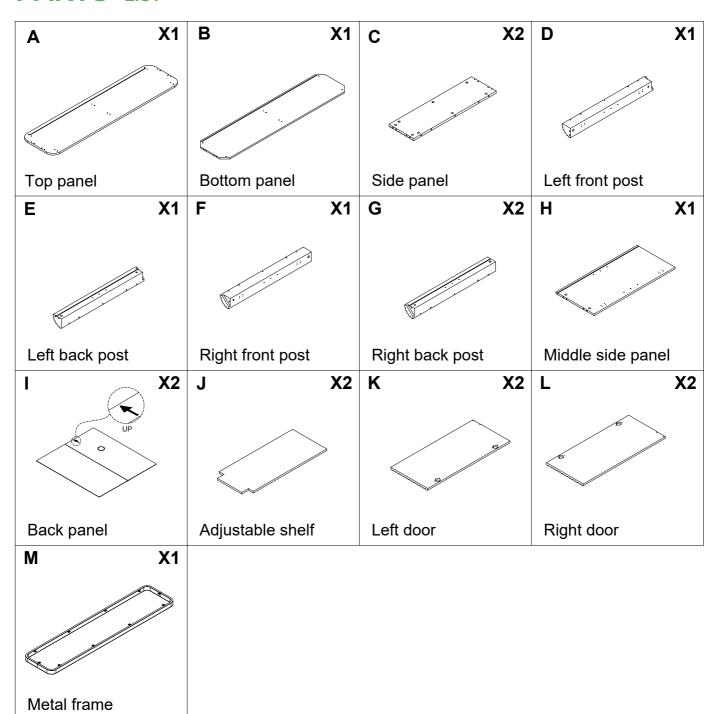


HARDWARE LIST

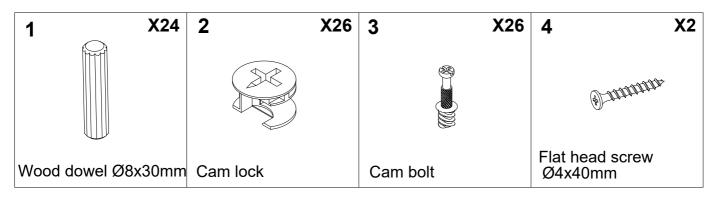

HARDWARE LIST

5 x6	6 x4	7 x8	8 x1
	0	A MANTE	
Sticker	Handle	Flat head screw Ø3x14mm	Wrench 4mm
9 x10	10 x4	11 x12	12 x12
Bolt Ø1/4x12mm	Nut	Plastic Wedge	Flat head screw Ø3x16mm
13 x4	14 x4	15 x48	16 x4
		Dimin	@
Small bend hinge Ø35mm	Big bend hinge Ø35mm	Flat Head Screw Ø3.5x12mm	Bolt Ø1/4x55mm
17 x2	18 x2	19 x2	20 x2
		0	
Round head screw Ø4x12mm	Round head screw Ø4x25mm	Plastic strap	Anchor
21 x8	22 x26		
Shelf support	Cover		

SPARE LIST

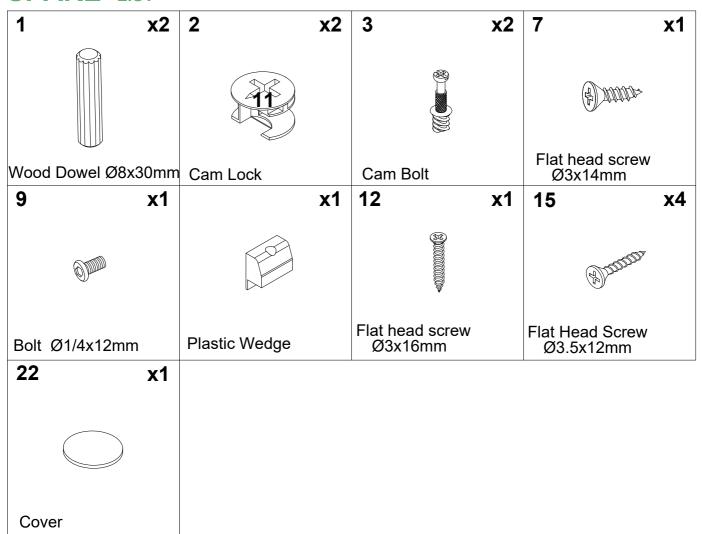


Before your installation, please make sure that you have all the parts listed on the manual. If you find something missing, stop installing and contact your supplier immediately.


NOTE: Please do not completely tighten all the hardware until the entire assembly is completed! Be sure to tighten all the hardware once the assembly completed.

NOTE: Should be assembled on soft surface to keep balance.

 
IF HAVE THIS ACCESSORY




It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

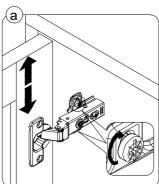


To adjust the door vertically loosen the screw asshown and move up and down as needed.

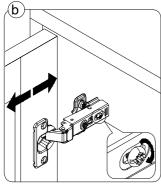

To adjust the gap from the door to the main frame turn the screw clockwiseoranti -clockwiseas needed.

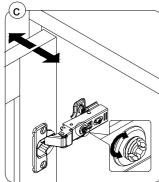


To adjust the door laterally adjust the screw as shown by turning clockwiseor anti-clockwise.

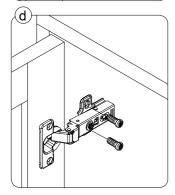


Please fix other screws.


IF HAVE THIS ACCESSORY

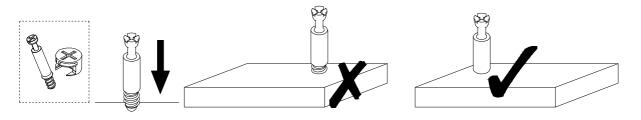


QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

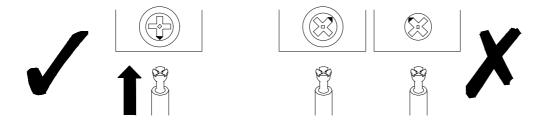


CAM LOCK:When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

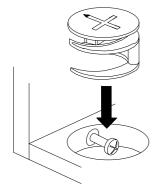


Quickfit head should be in the centre of the cam lock when the two panels are joined.

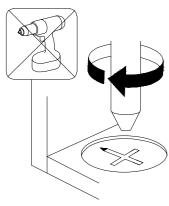


Turn cam lock clockwise to tighten.

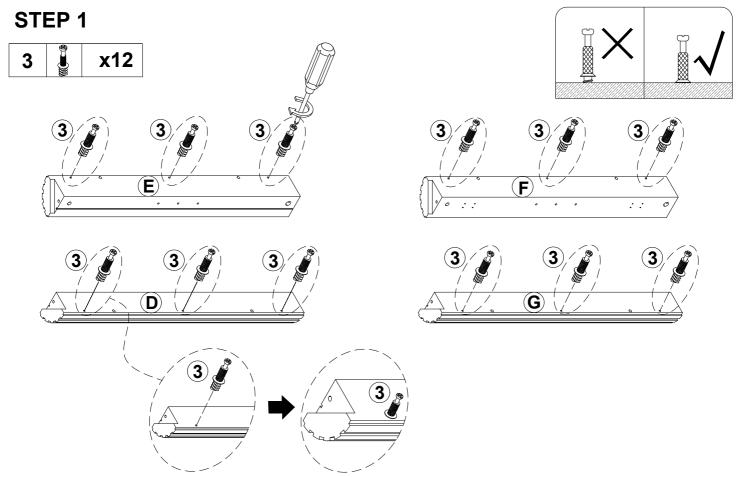


Insert the cam bolts (3) into the post (D &E & F & G) and tighten it with a screwdriver (not included) as shown.

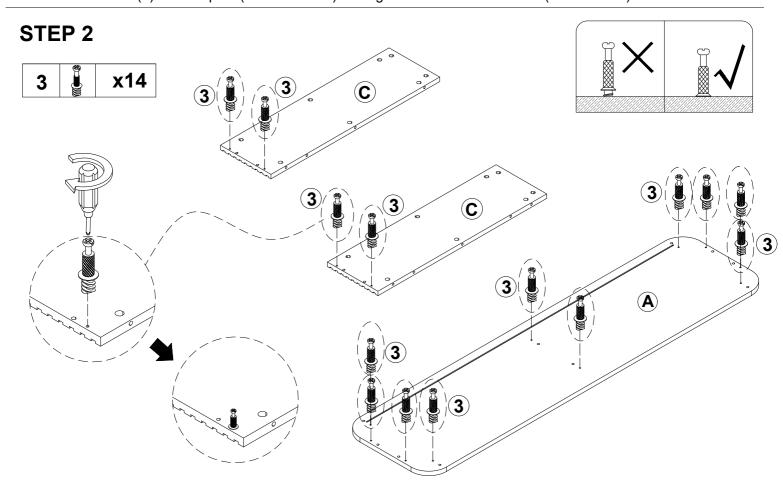


Insert the cam bolts (3) into the top panel (A) ,side panel (C) and tighten it with a screwdriver (not included) as shown.

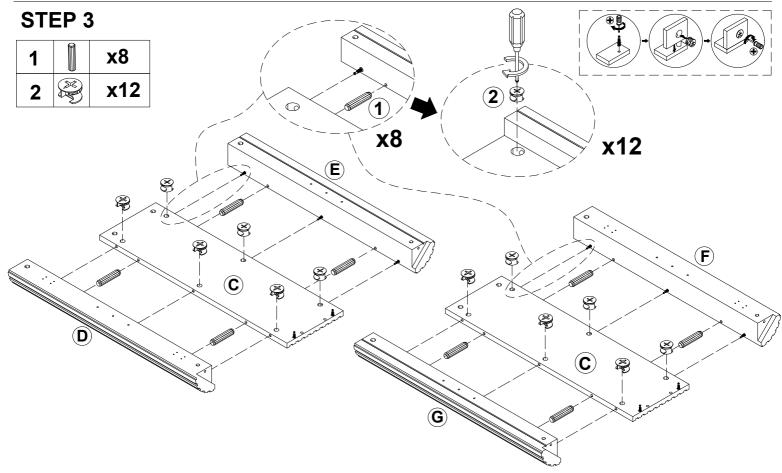


- 1.Insert the wood dowel(1) into the hole of the side panel (C)and connect it to the post(E&D&F&G),
- 2. Then insert the cam lock (2) into the hole of the side panel (C) and tighten it with a screwdriver as shown .

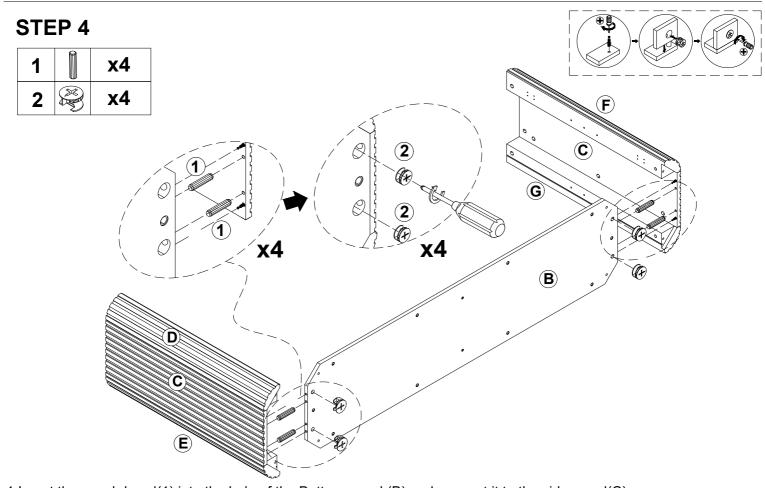


- 1.Insert the wood dowel(1) into the hole of the Bottom panel (B) and connect it to the side panel(C),
- 2. Then insert the cam lock (2) into the hole of the Bottom panel (B) and tighten it with a screwdriver as shown .

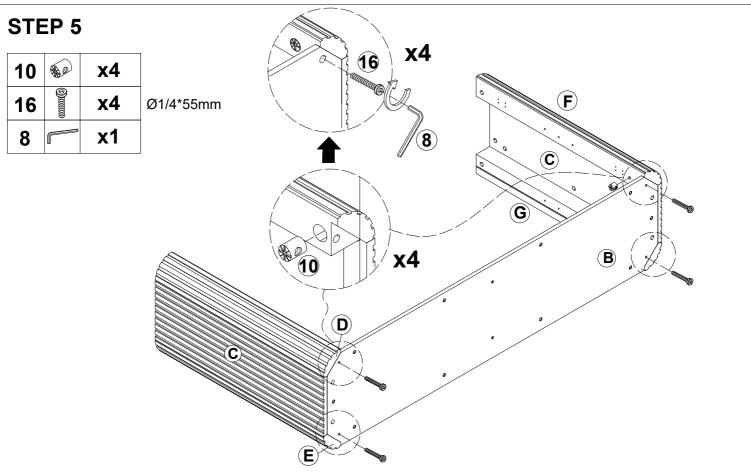

- 1.Insert the nut (10) into the hole of the post (E&D&F&G),
- 2. Then insert the bolt (16) into the hole of the bottom panel(B) and tighten it with a allen wrench(8) as shown.

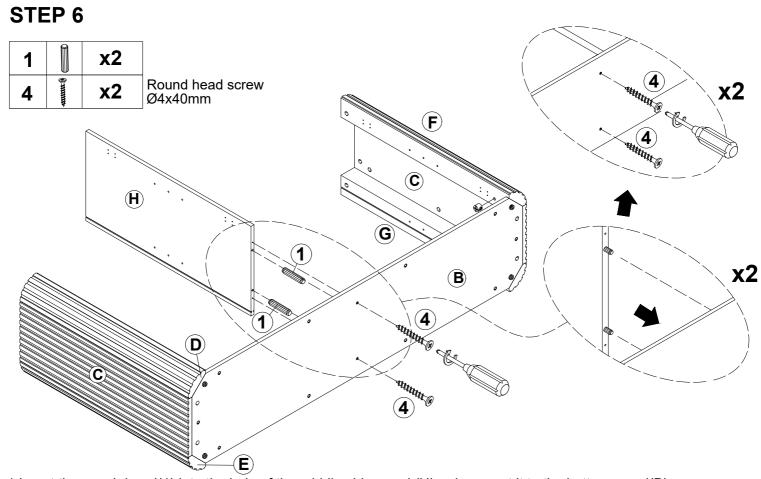


- 1.Insert the wood dowel(1) into the hole of the middle side panel (H)and connect it to the bottom panel(B),
- 2. Then insert the flat head screw (4) into the hole of the bottom panel(B) and tighten it with a screwdriver as shown .

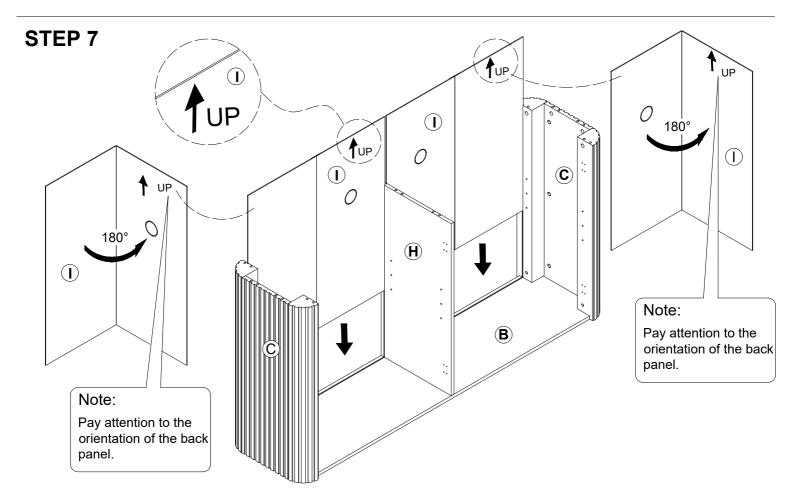


Open the folded back panel, Then align it and insert back panel(I) into the slot as shown.


STEP 8

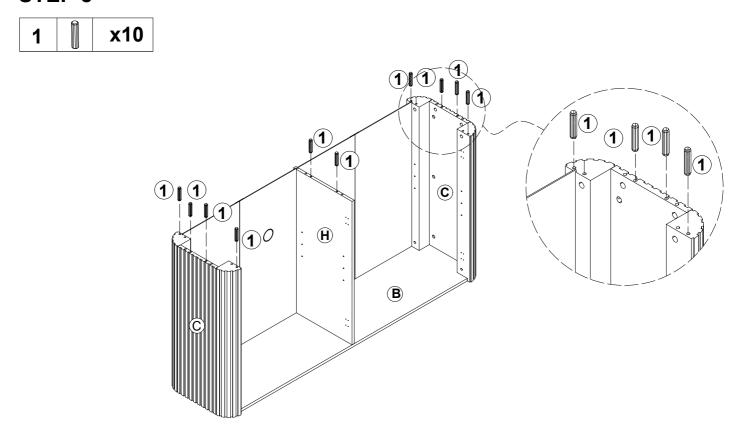


1. Insert the wood dowel(1) into the hole of pre-assembled frame top as shown .

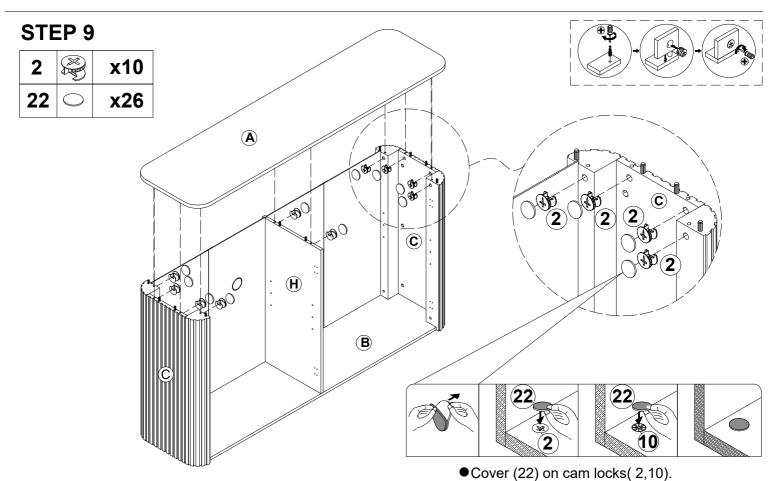


- 1.Attached the top panel(A) to the top of the pre-assembled frame.
- 2. Then insert the cam lock (2) into the hole of the pre-assembled frame and tighten it with a screwdriver as shown .

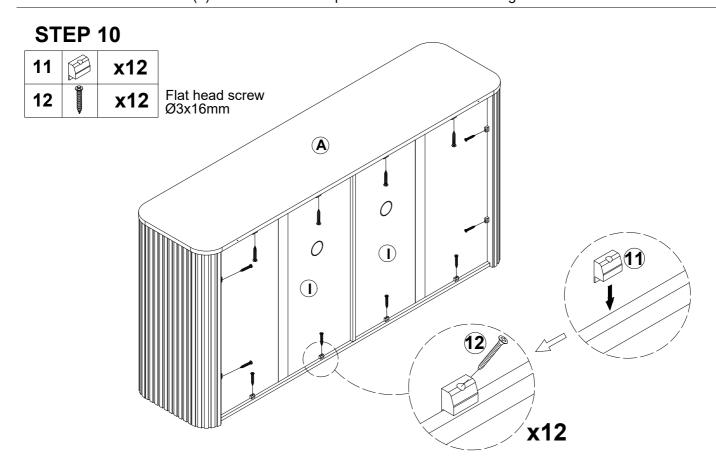


Insert plastic wedge(11) into the gap at the edge of the back panel (I) and then insert the flat head screw (12) into the hole of the plastic wedge(11) tighten it with a screwdriver as shown.

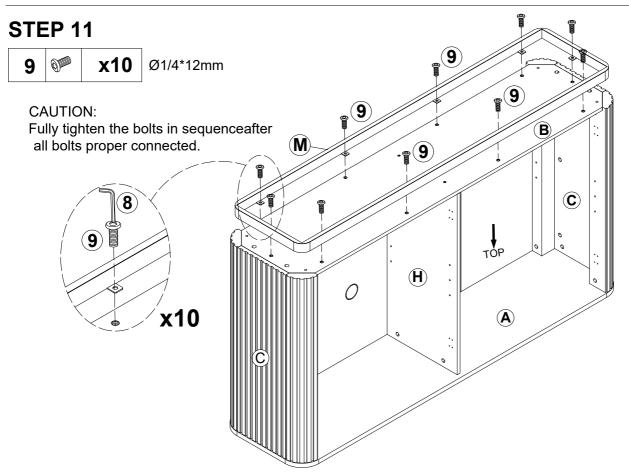



Attached metal frame (M) to the pre-assembled frame, Then insert the bolt (9) into the hole of metal frame (M) and tighten it with a allen wrench(8) as shown

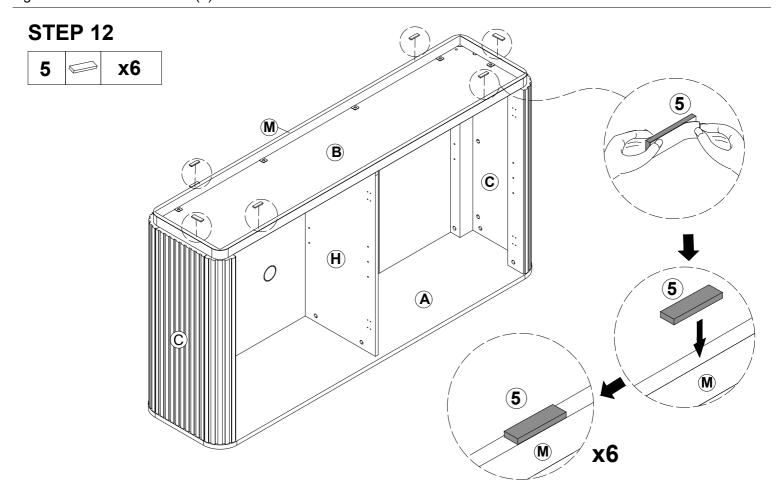


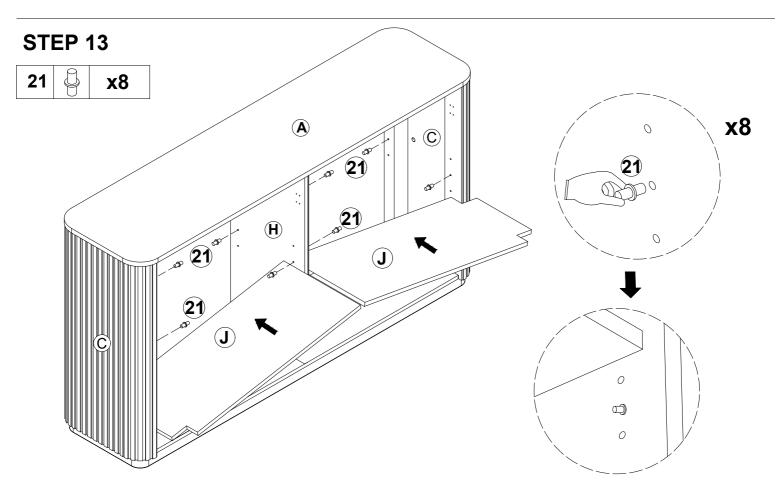

Insert shelf support (21) into the hole of inside pre-assembled cabinet and then tilt the adjustable shelf(J) and place it on the shelf support (21)

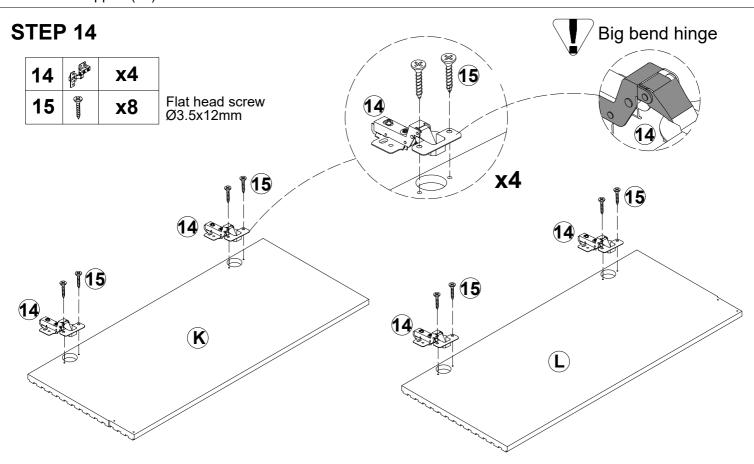


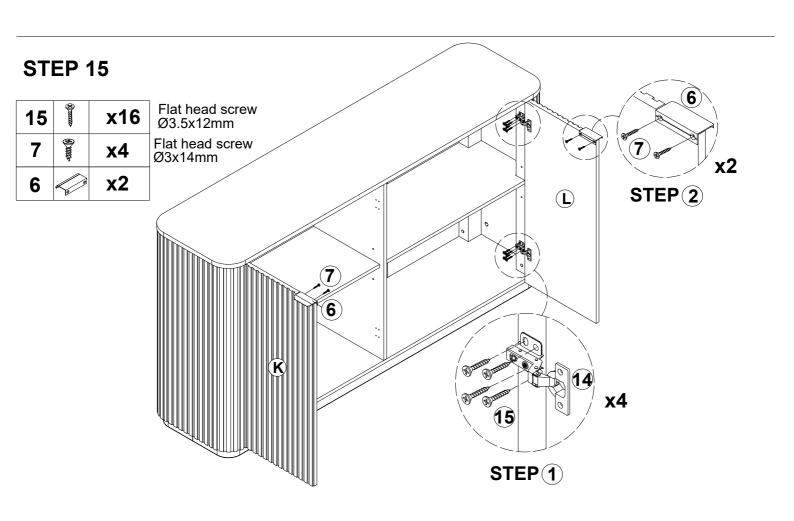


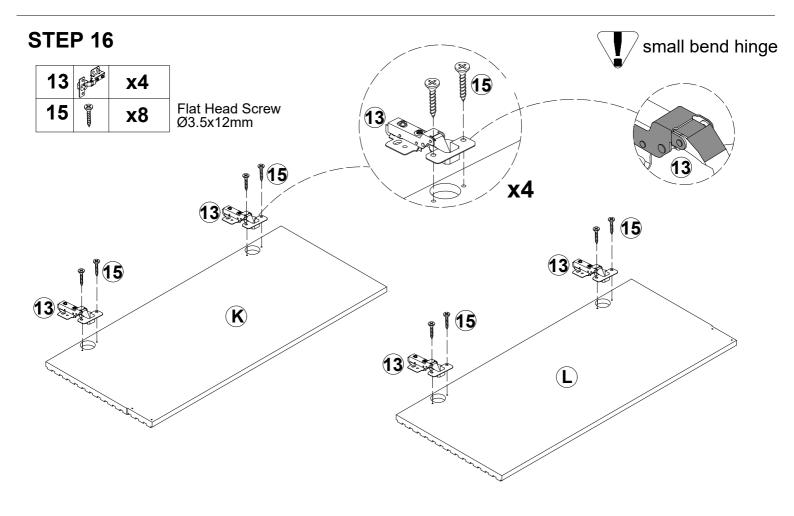


STEP 17



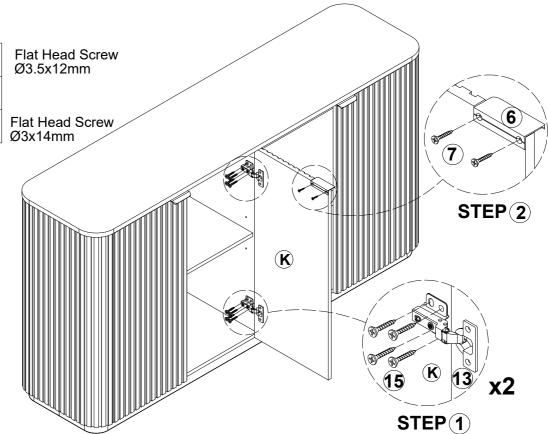

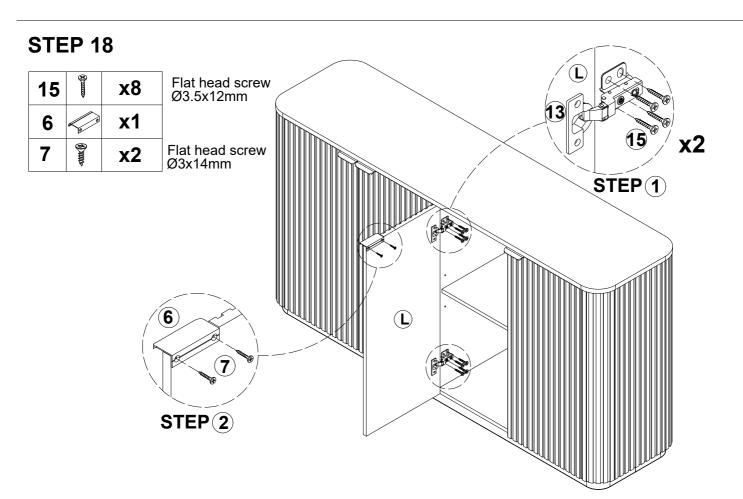




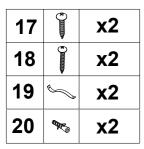


  Round head screw Ø4x12mm
Round head screw Ø4x25mm











Step 3



 Step 4




Step (4)

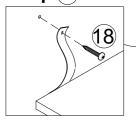

WARNING

Serious or fatal crushing injuries can occur from furniture tipover. To prevent tipover:

- * Install tipover restraint provided
- * place heaviest items in the lowest drawers
- * Unless specifically designed to accomodate, do not set TV or other heavy objects on the top of this product
- * Never allow children to climb or hang on drawers, door, or shelves. Use of tipover restarints may only reduce, but not eliminate the risk of tipover

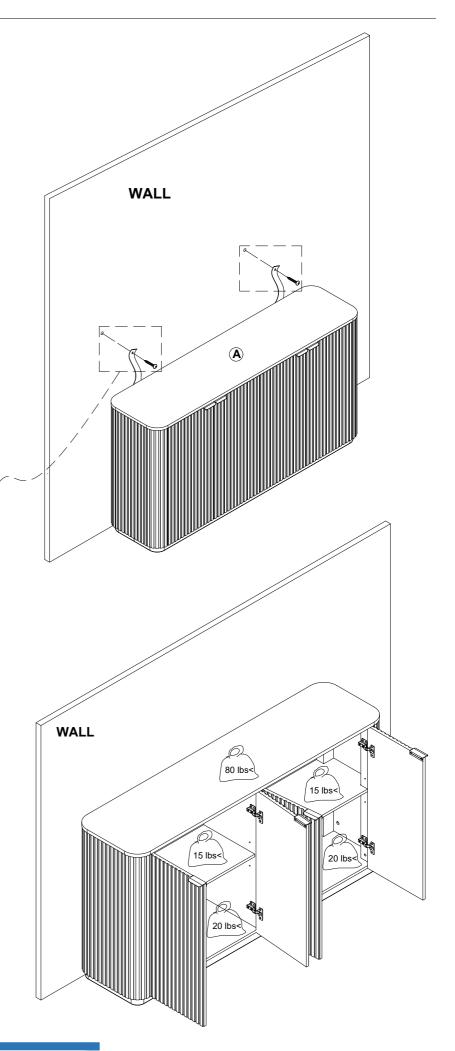

MAINTAINANCE AND WARNING

- Keep furniture away from heat.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents,
 Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry Cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, For residential use only.
- The maximum load is 80 LBS

WARRANTY

We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item

receipt for any items that are out of the warranty period you may also still receive

replacement parts by purchasing them with our company if they are available.

Are you having difficulty with assembly? Missing parts? Please send email with your order No to customerservice@hulalahome.com

For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!