
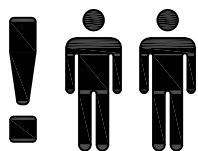


ITEM NO. Z6DKGR0517


Thank you for purchasing this Writing Desk.

Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product. At HULALA home we are committed to making great products possible. From our in-house Design Team, to our Buyers, we work together to bring great designs to life. Our expert Product Technologists work collaboratively with our buyers and suppliers to assure the legality, safety and quality of the product we sell. We are all committed to designing and developing products to the highest industry standards. We hope you are happy with your product and welcome any feedback or comments you may have.

Exploded Diagram

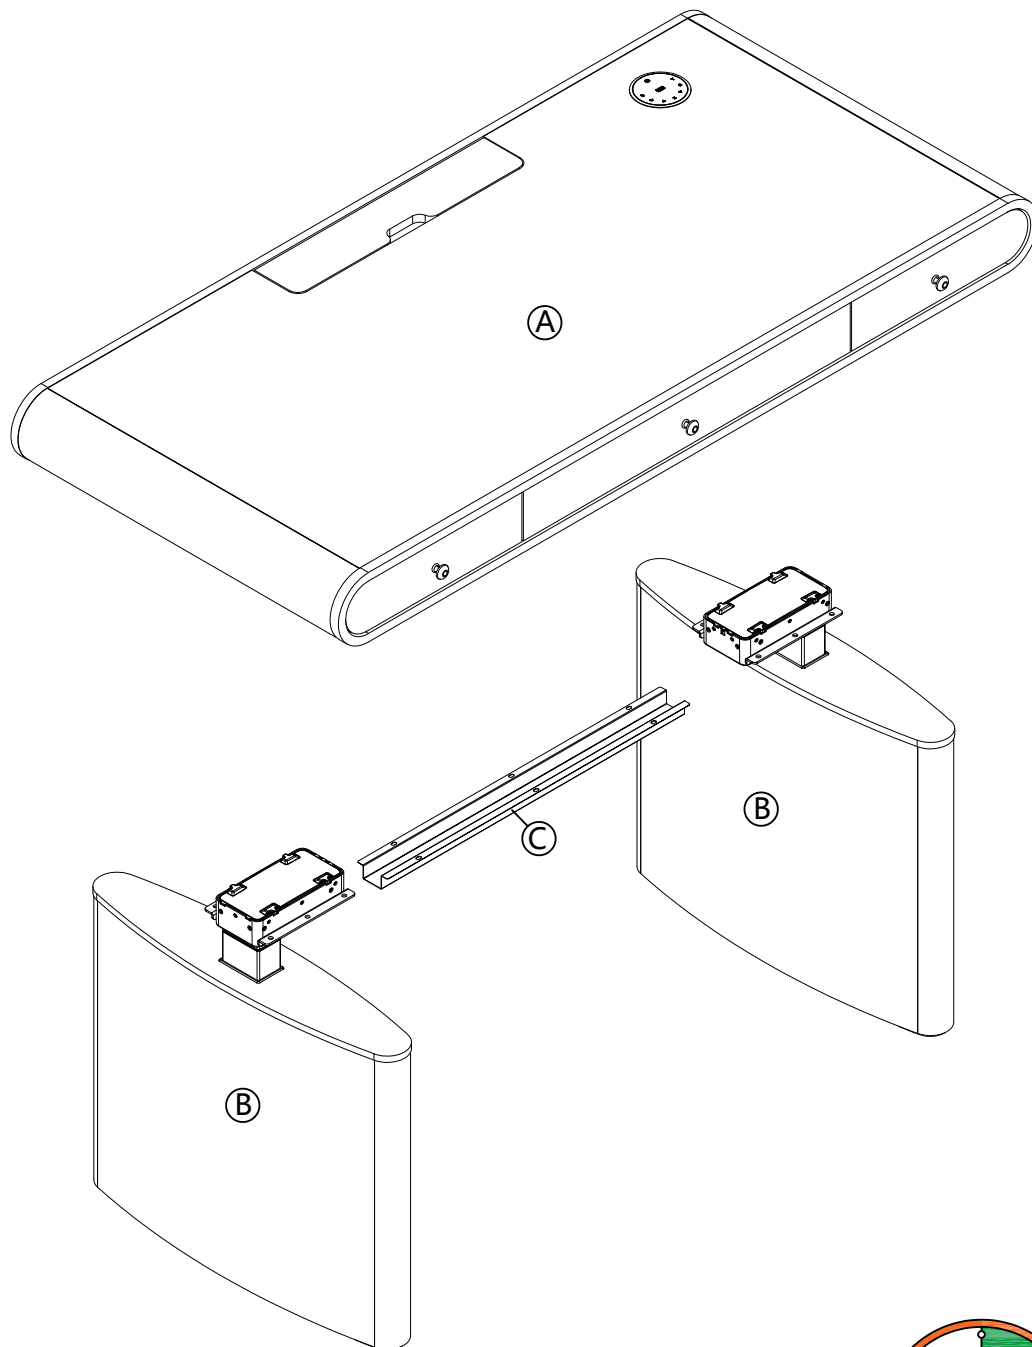


Requires 2 adults for assembly

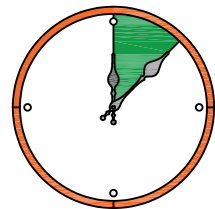



Around 30 min

Ensure you check all packing materials carefully for small parts, which may have shifted during shipment.







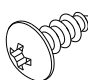
PARTS LIST (Carton A)
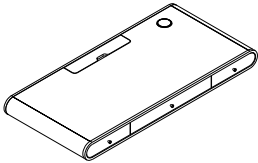
<div><div>A</div><div></div><div>x 1</div></div> <div>Top Panel</div>			
--	--	--	--




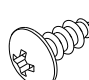
PARTS LIST (Carton B)
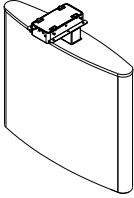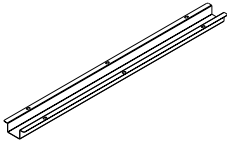
<div><div>B</div><div></div><div>x 2</div></div> <div>Foot Frame</div>	<div><div>C</div><div></div><div>x 1</div></div> <div>Cable Tray</div>		
---	---	--	--

HARDWARE LIST (Carton A)

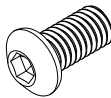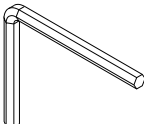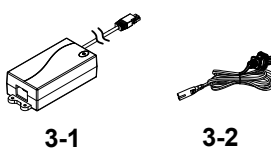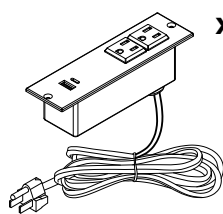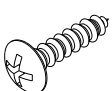1 x 12  Bolt 1/4"x12mm	2 x 1  Wrench 4*80*80mm	3 x 1  Power Adapter	4 x 1  Sockets
5 x 4  Round Head Screw Ø4x16mm	6 x 2  Flat Head Screw Ø3.5x12mm	7 x 6  Round Head Screw Ø4x12mm	

SPARE LIST

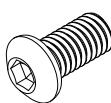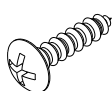1 x 1  Bolt 1/4"x12mm	5 x 1  Round Head Screw Ø4x16mm	6 x 1  Flat Head Screw Ø3.5x12mm	7 x 1  Round Head Screw Ø4x12mm
--	---	---	---



Before your installation, please make sure that you have all the parts listed on the manual. If you find something missing, stop installing and contact your supplier immediately.

NOTE: Please do not completely tighten all the hardware until the entire assembly is completed! Be sure to tighten all the hardware once the assembly completed.

NOTE: Should be assembled on soft surface to keep balance.



STEP 1

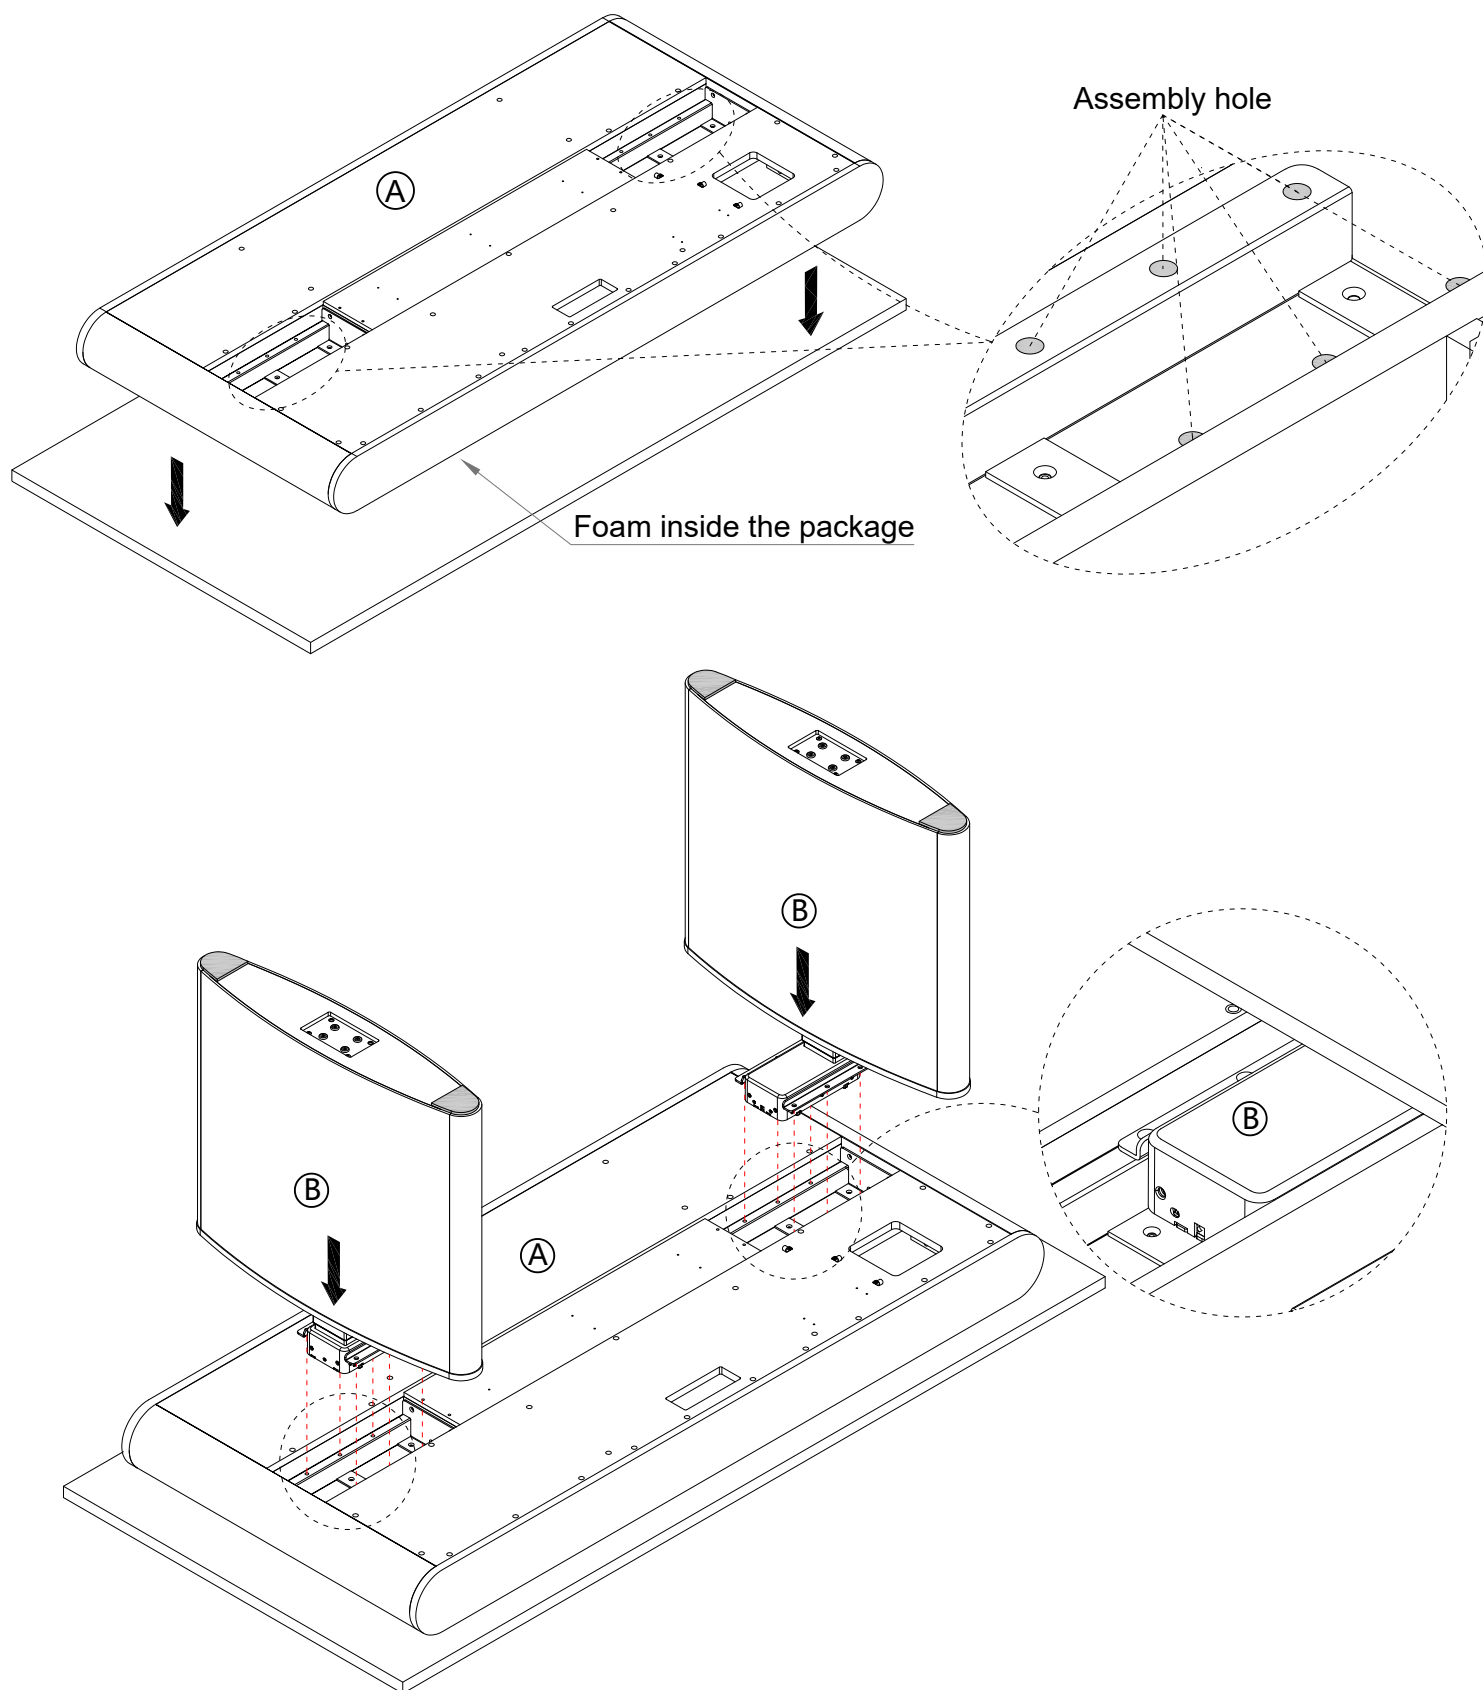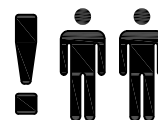
Note:
The operation takes two
adults to complete.



1. Place the foam taken out of the packing box under the table as shown.
2. Align the foot box (B) downwards with the hole added to the top panel frame as shown.




STEP 2

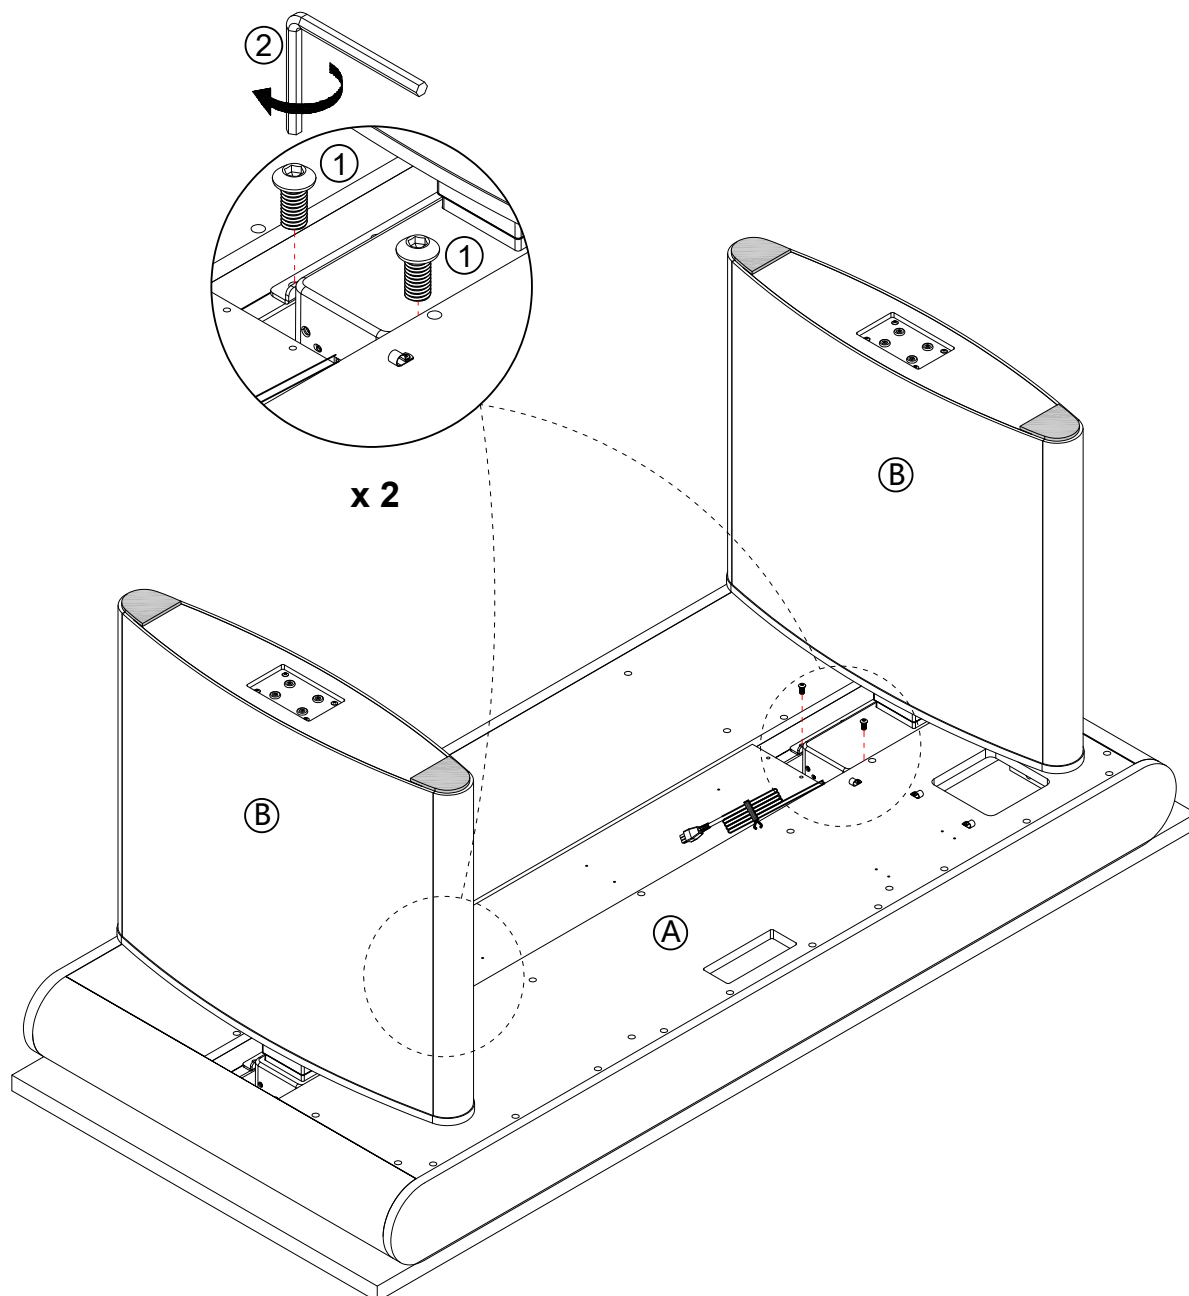
1		x 4
2		x 1



Use bolts (1) to attach the foot box (B) to the frame of the top panel (A). Tighten with wrench (2) as shown.


STEP 3

3-1		x 1
3-2		x 1
5		x 4

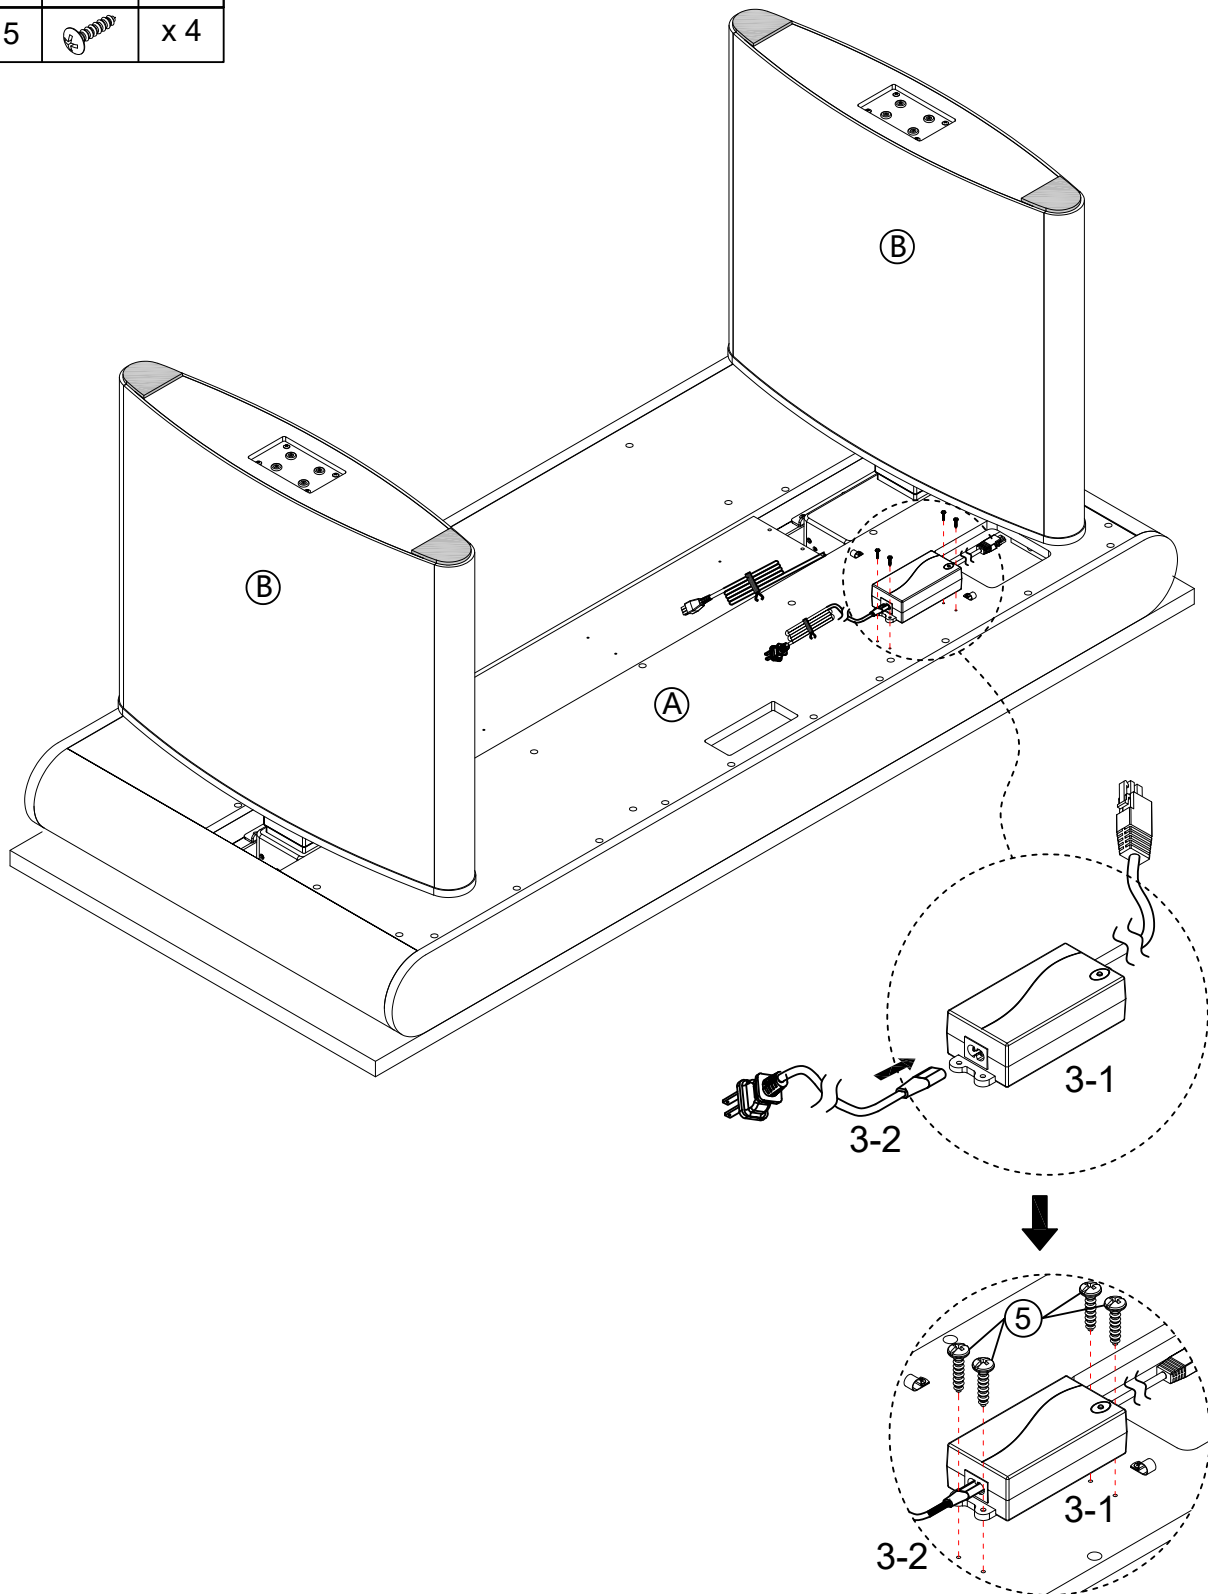


1. Connect the power cords (3-2) to the power adapter as shown.
2. Use round head screws (5) to fix the power adapter (3-1) on the back of the top panel as shown.

STEP 4

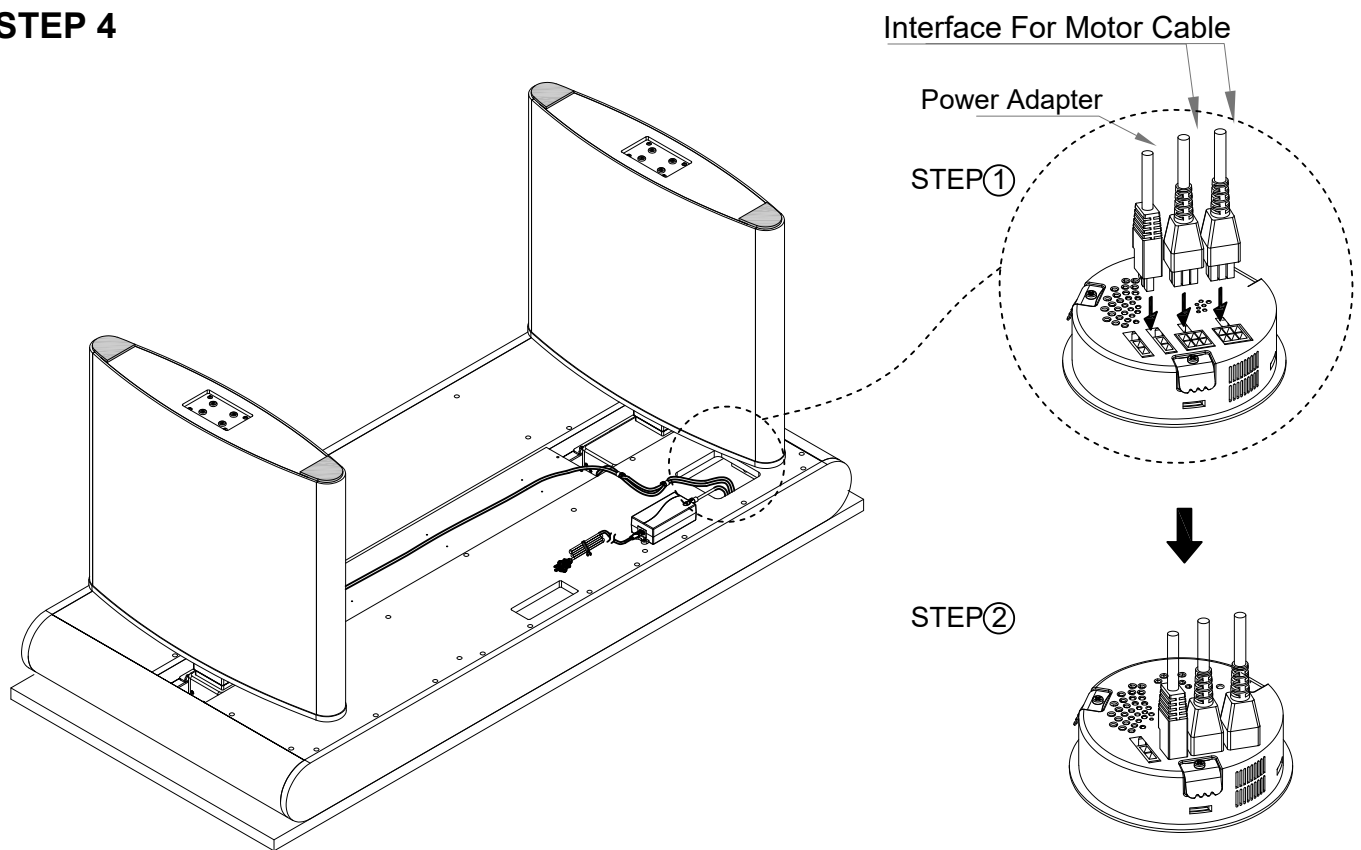

Connect the motor and adapter wires to the control box as shown.


STEP 5

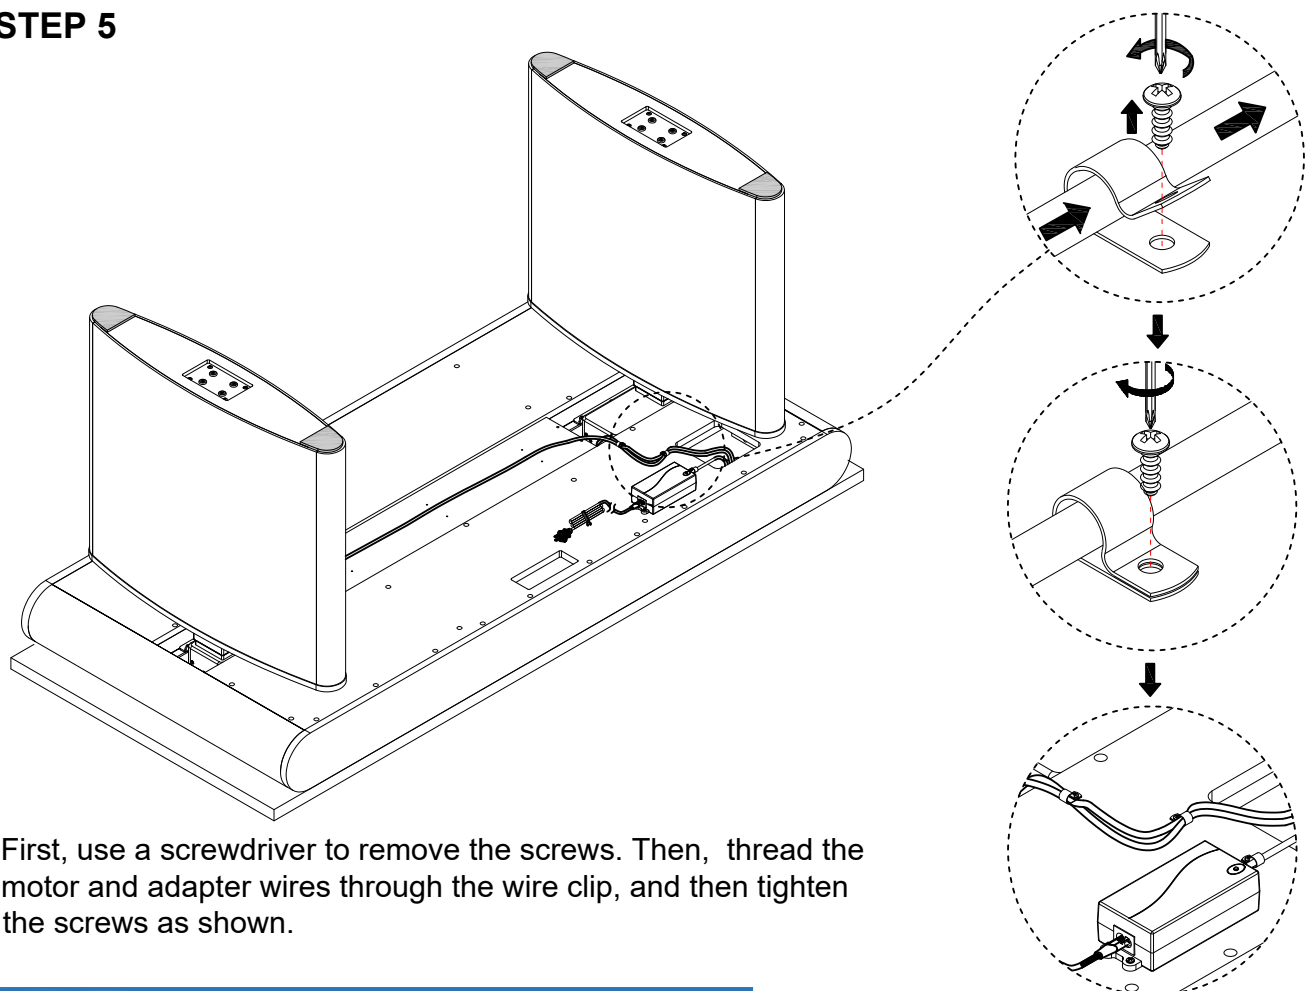

First, use a screwdriver to remove the screws. Then, thread the motor and adapter wires through the wire clip, and then tighten the screws as shown.



STEP 6


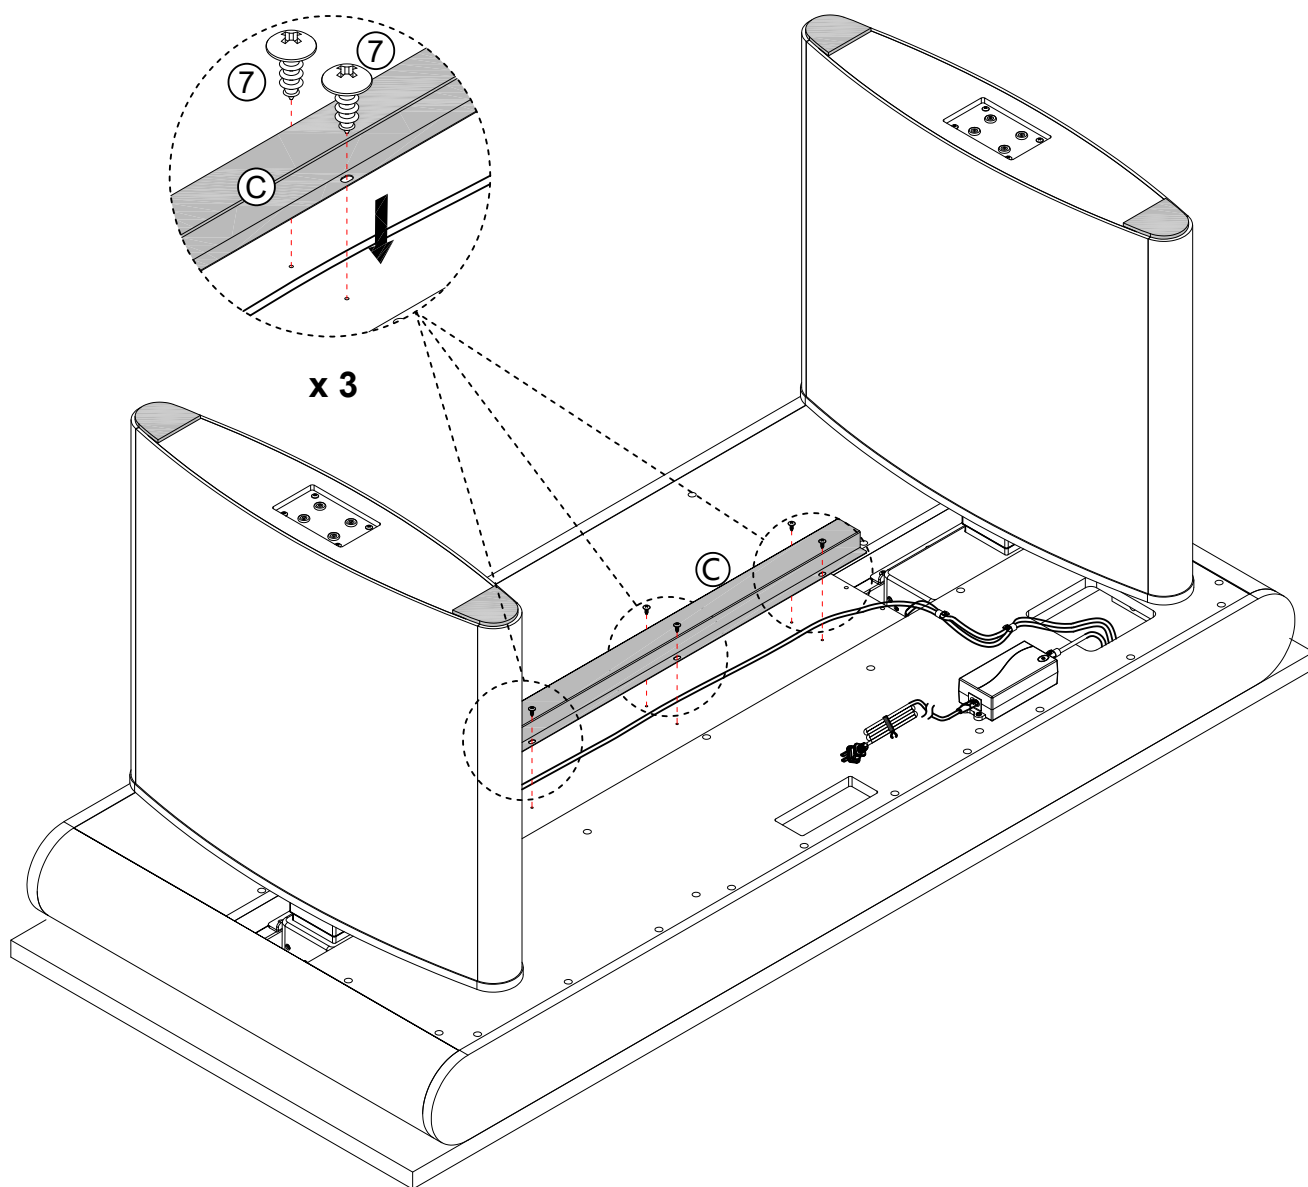
7		x 6
---	---	-----





Cover the wires with cable tray and tighten them with round head screws (7) as shown.

STEP 7

4		x 1
6		x 2

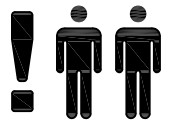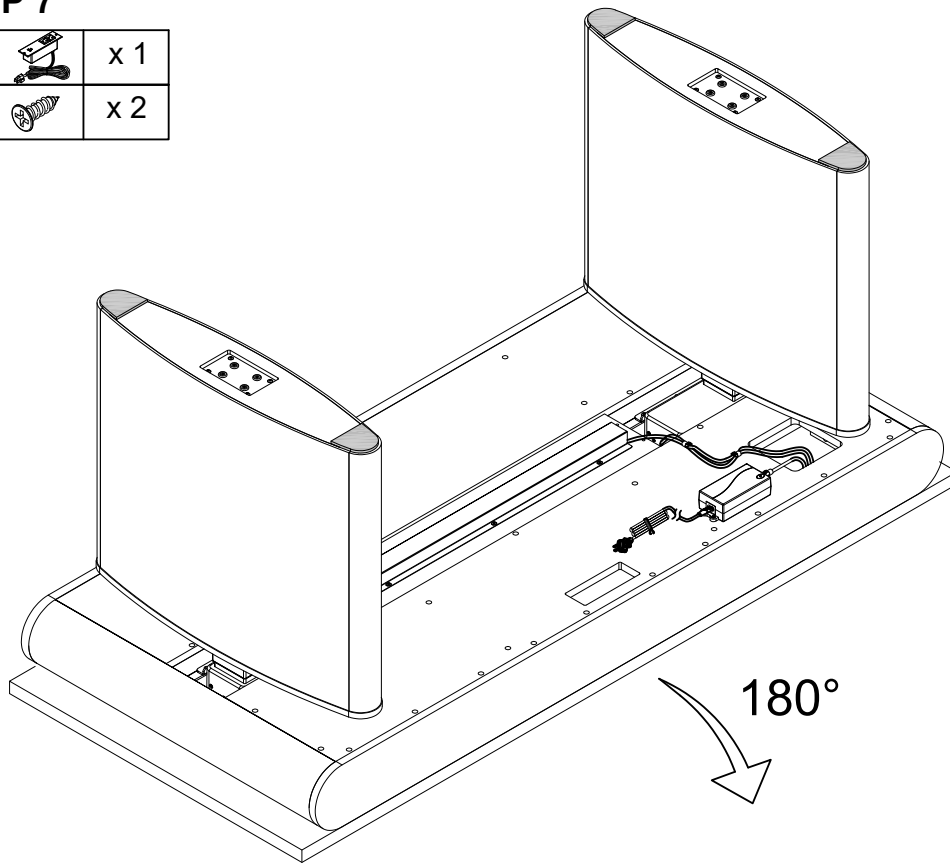


Note:
The operation takes two adults to complete.

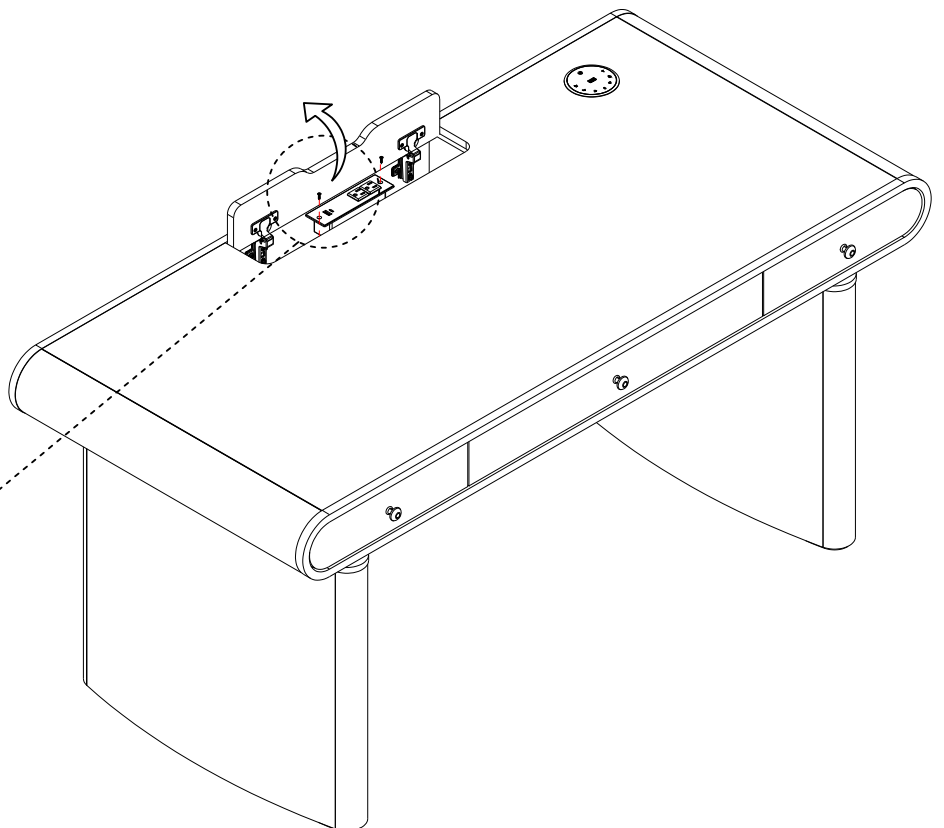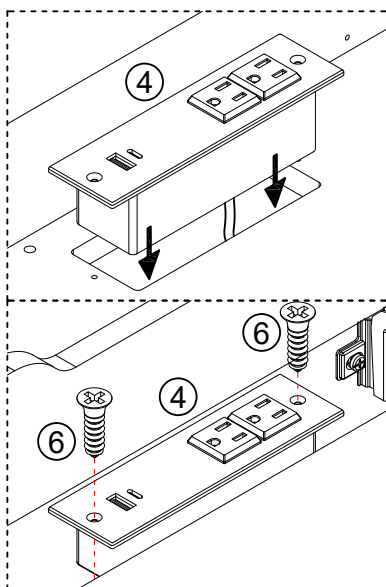


1. Flip the table upside down in order as shown in the picture, which requires two adults to complete.
2. Open the small flip board on the desktop, insert the socket into the hole, and tighten it with flat head screws (6) .


STEP 8

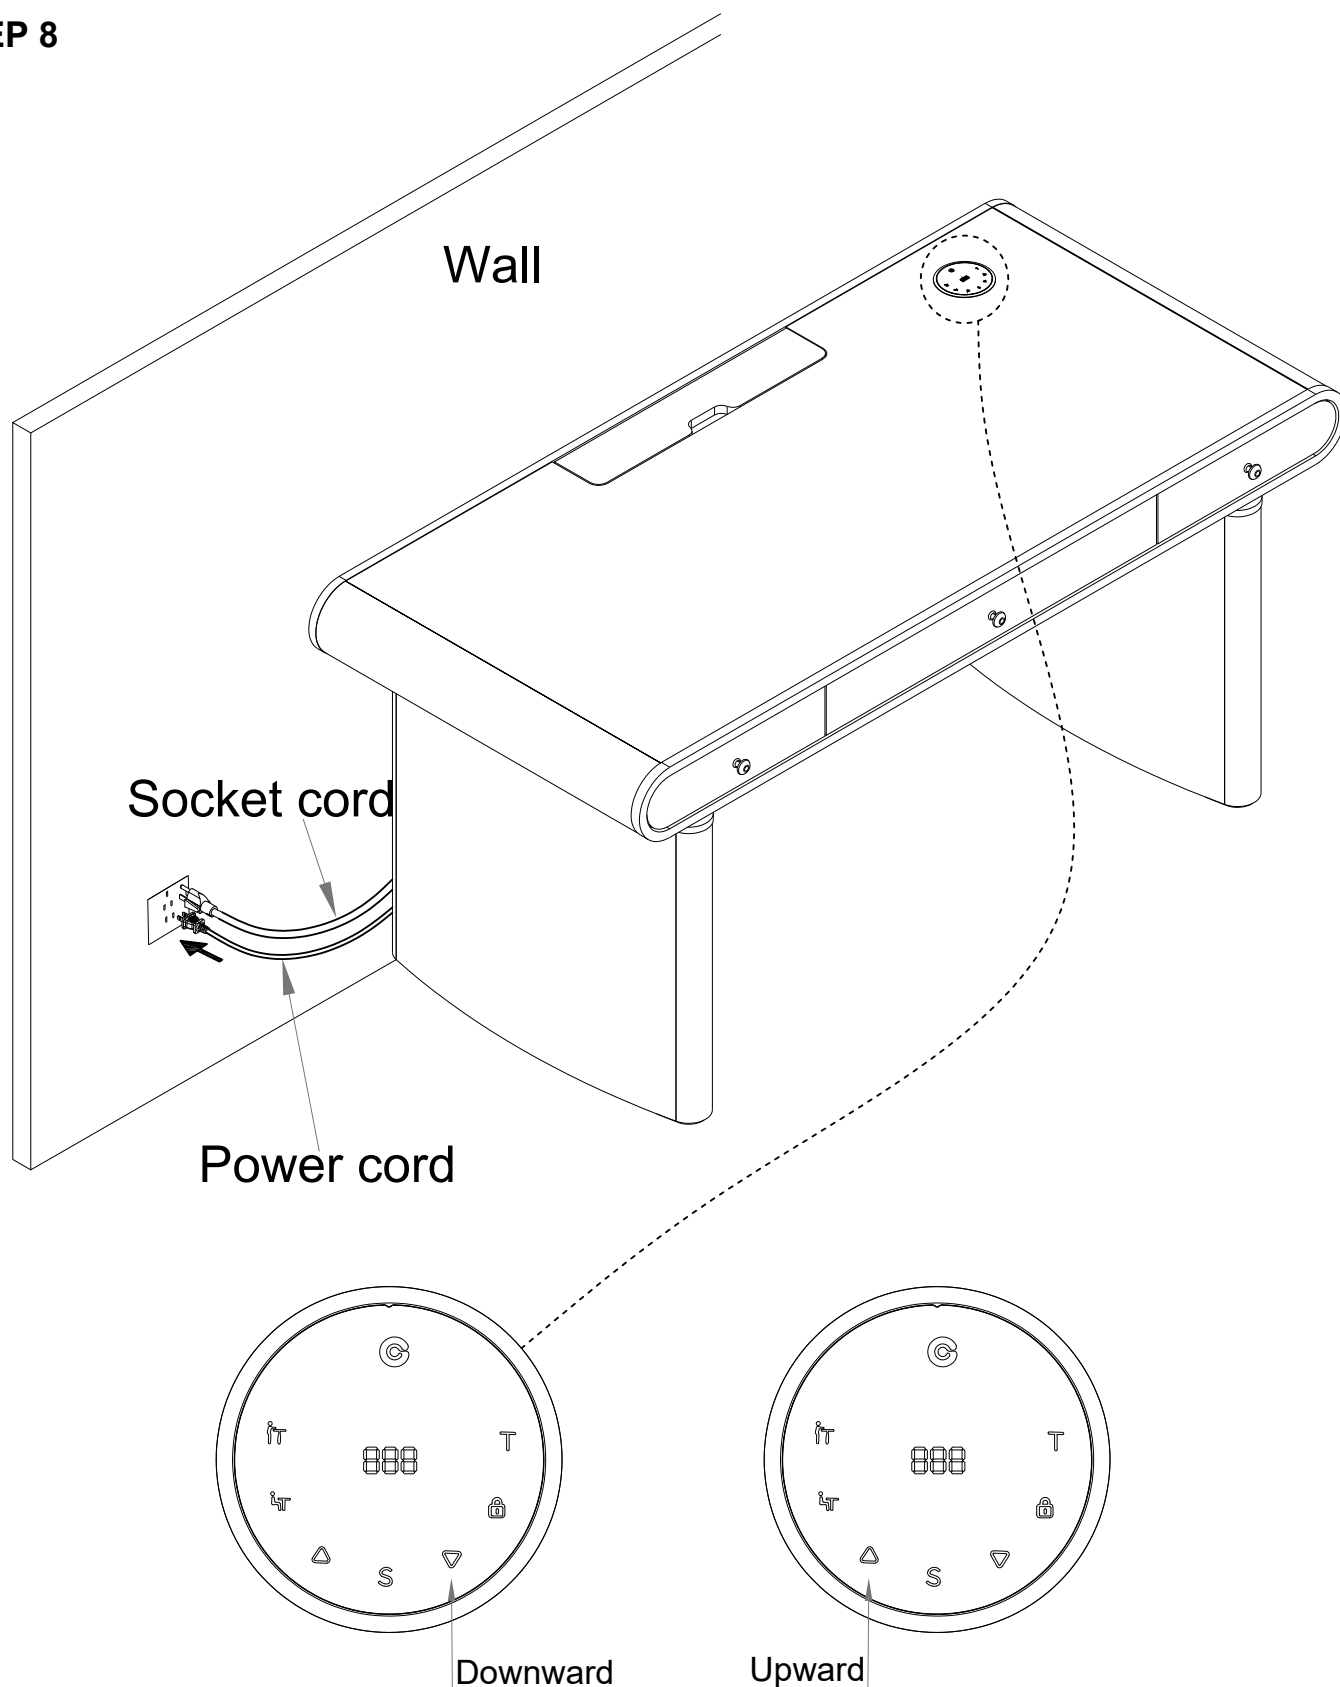

- 1.As shown in the figure, first connect the adapter to the power supply and turn it on.
- 2.The first operation of the controller requires a reset, which stops when the down button displays "LOW".
- 3.After resetting, press the "Up" button to raise the desktop to its highest position.


STEP 9

1		x 8
---	---	-----

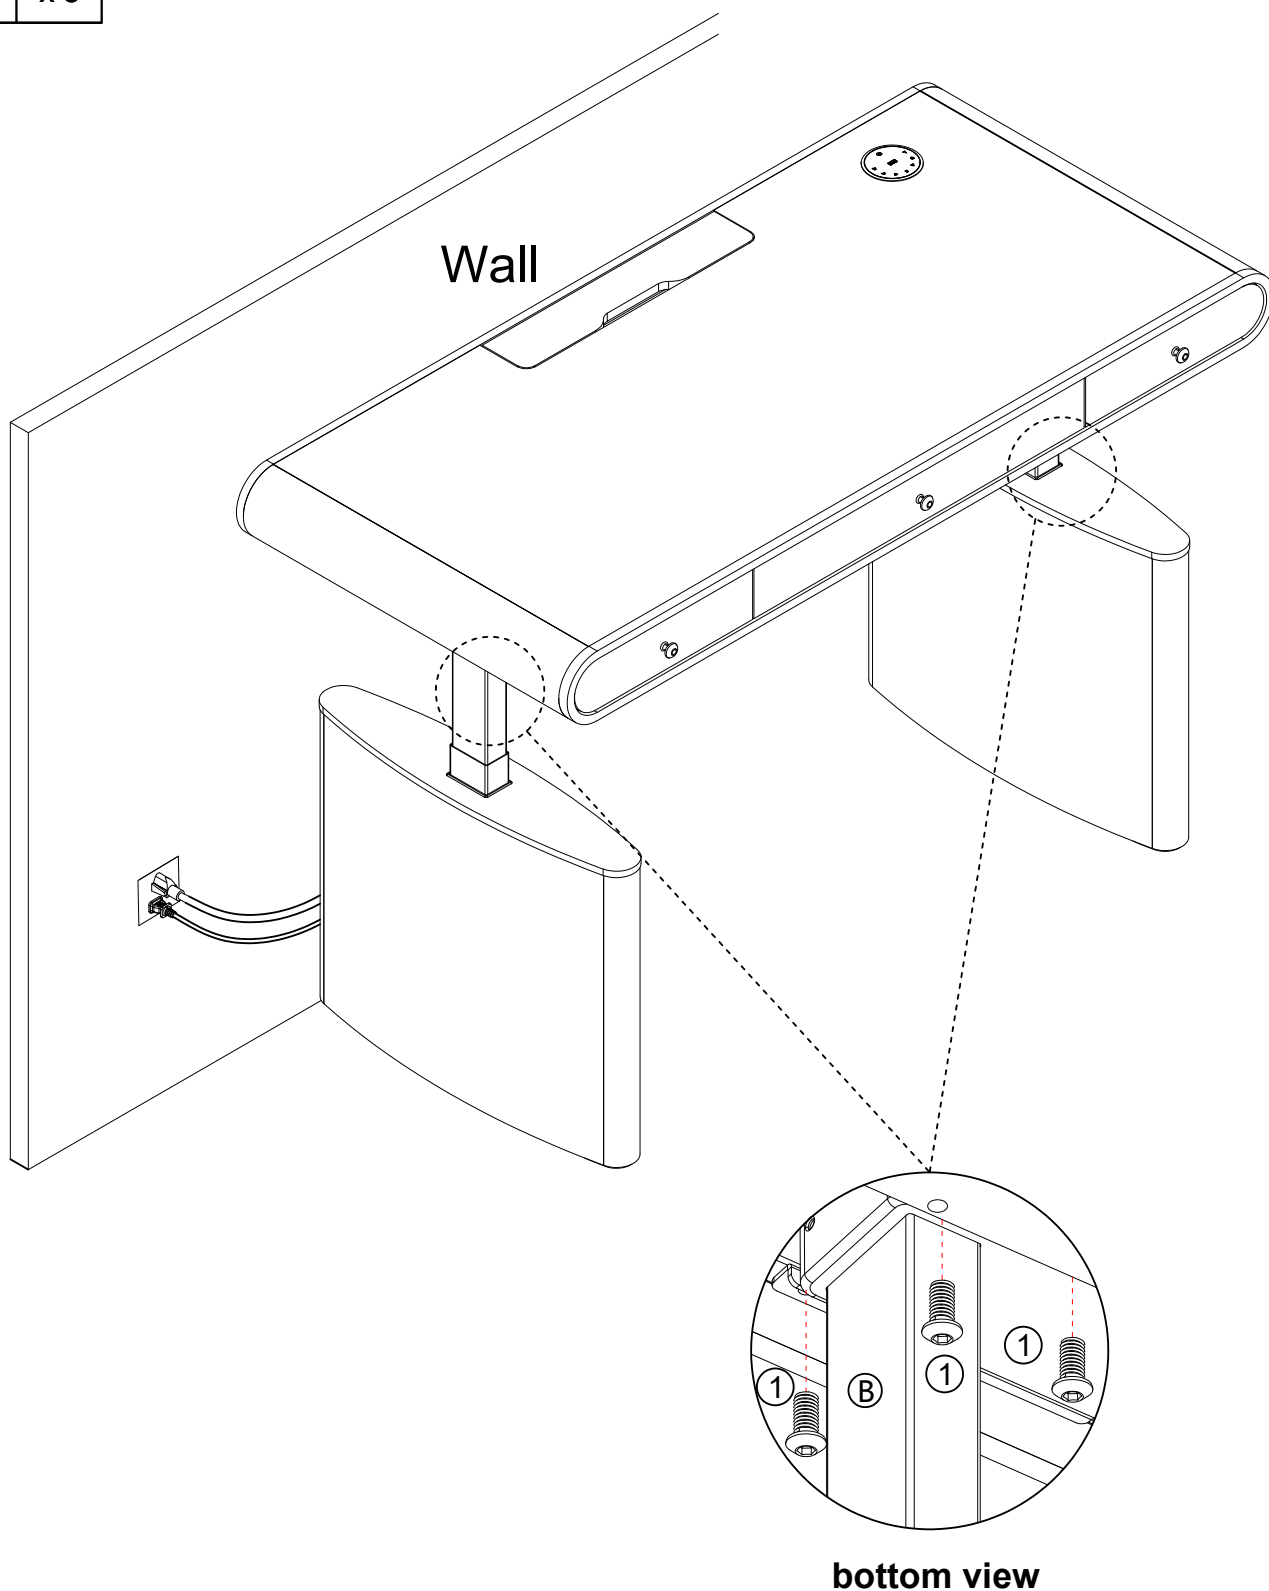


Align the motor holes on the foot box with the assembly holes on the desktop frame as shown in the picture, and use screws (1) to fully tighten with a wrench (2).

STEP 10

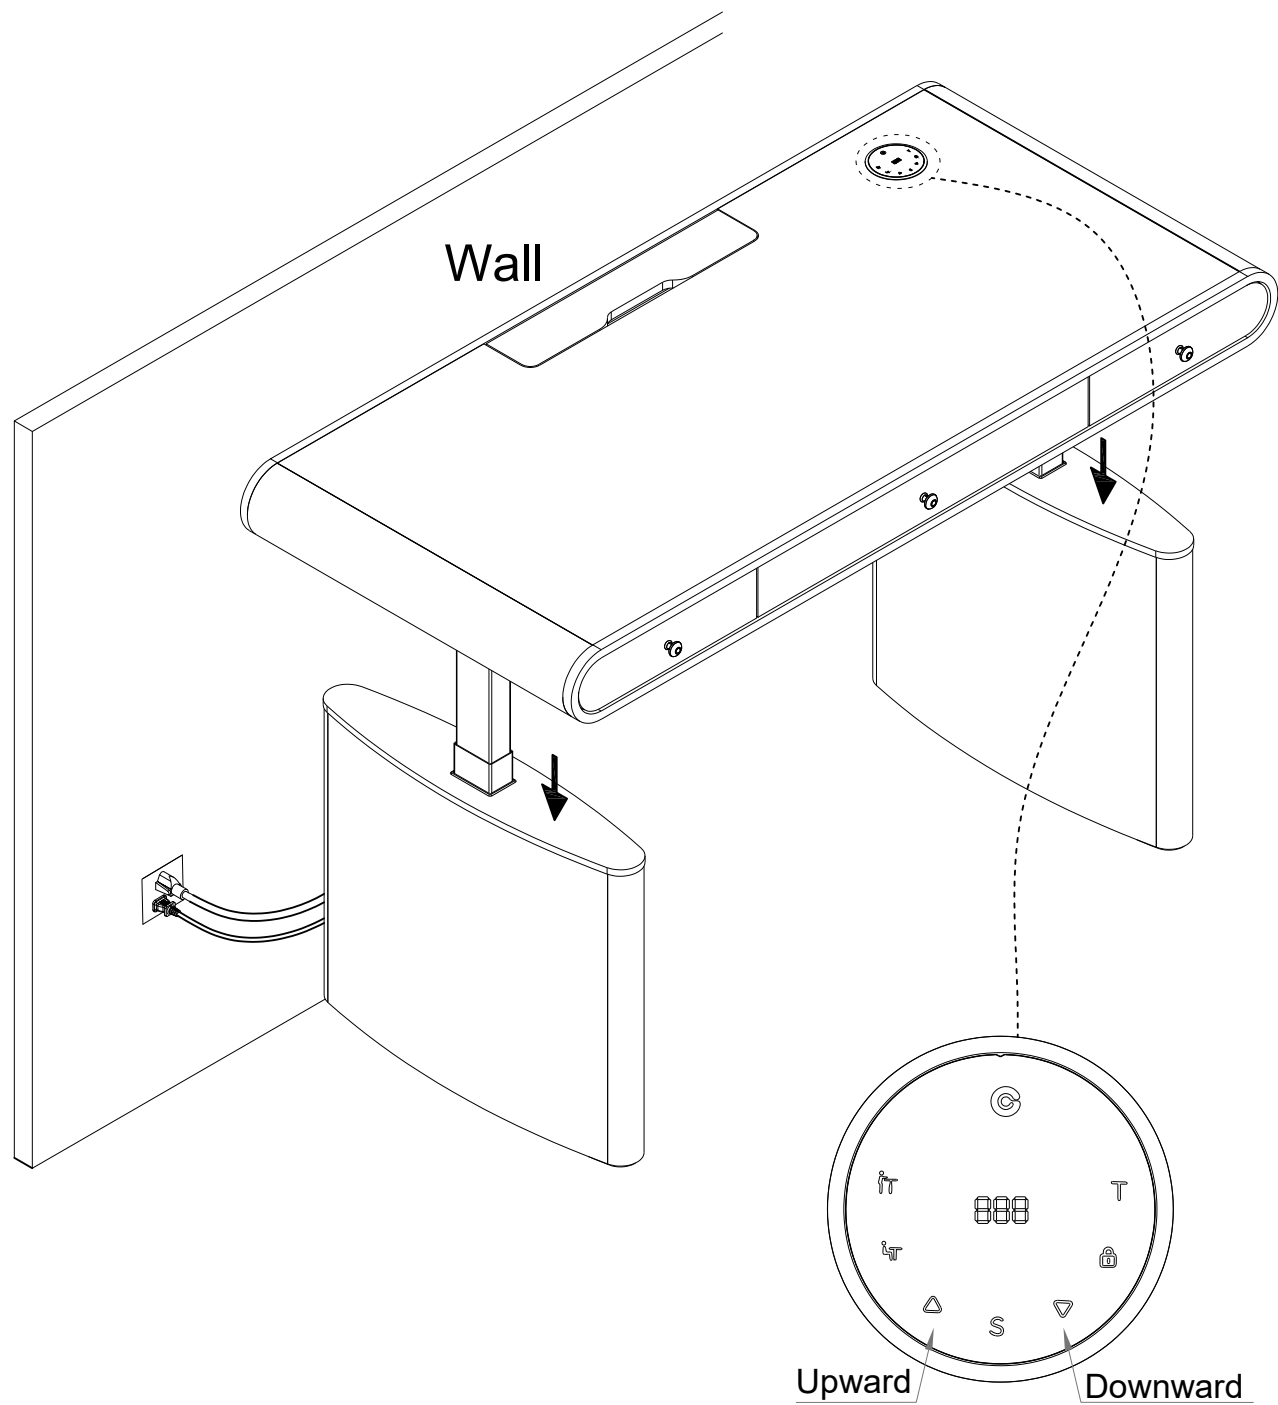

For more operational functions, please read the instructions on page 15 in detail.

STEP 11

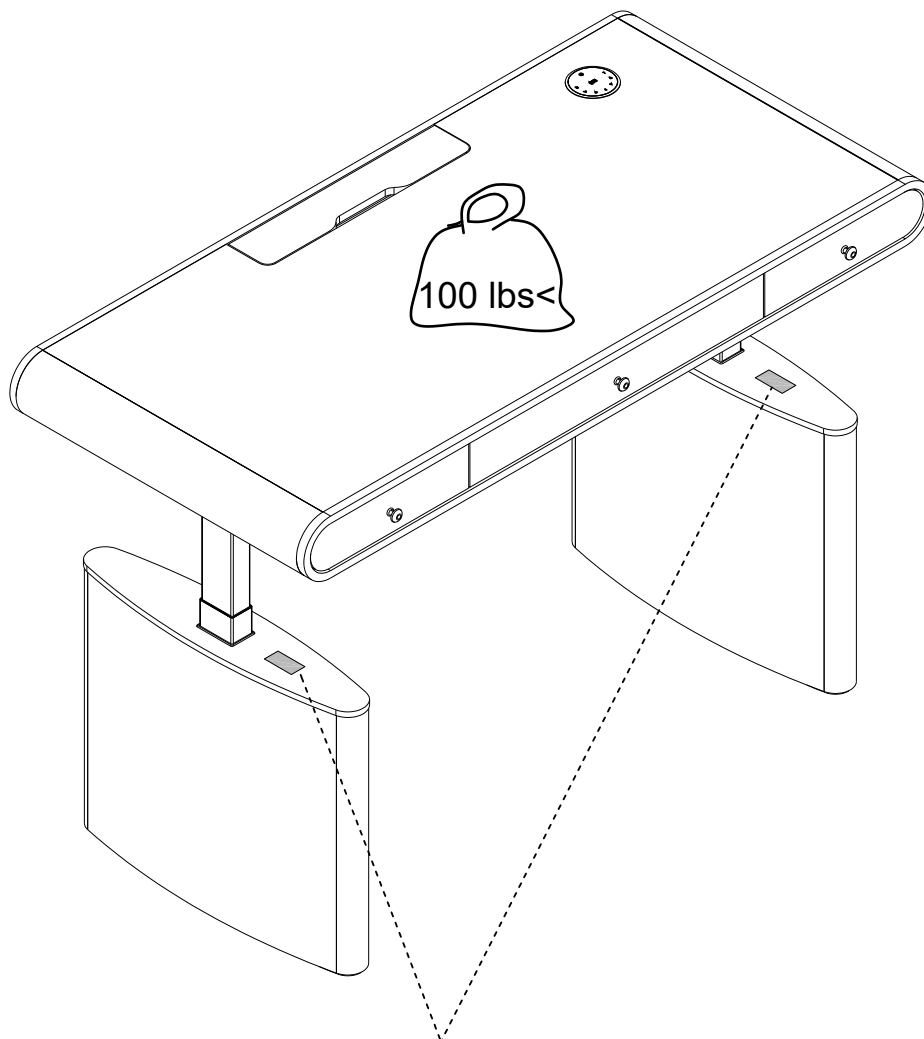

WARNING:

Do not place hands or objects on top to prevent injury or danger !










CAUTION:


The sound you hear when activating the lifting function is normal and is caused by the high speed of the motor.



WARNING:

- 1.The load of the lifting table must be less than 100 LBS!
- 2.When raising or lowering the tabletop, ensure that the tabletop remains stationary and does not move!

button							
Initial value	up	down	H1 45In / 1143mm	H2 30In / 762mm	Set	Child locks	Chronograph

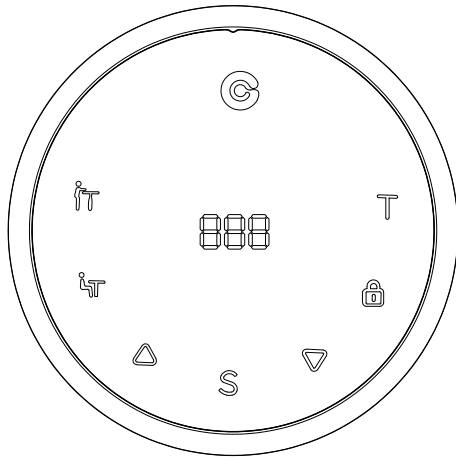

Instructions for 0517 Desk Control Panel

1.Desk Elevation

Press and hold the up or down button to control the desk's rise or fall.
When pressing the up button, the height displayed on the display panel will increase. Similarly, pressing the down button will decrease the height displayed.

2.Memory Height Setting

In the height display mode, press a number key to set the desired height, and the desk will automatically move to the saved position.

To save a height, press the memory button "S" briefly; the height number will start flashing. At this point, press sit or stand image button to save the current height to sit or down button. If no action within 6 seconds, it will exit memory mode.

3.Wake Up from Sleep Mode

After the control panel goes to sleep, press any key to light up the display.

4.Sedentary Reminder

1. In the height display mode, press the "T" key, and the screen will flash "0.5h".
2. Use the up (▲) or down (▼) buttons to adjust the reminder time in increments of 0.5 hours. The range is from 0.0 to 3.0 hours.
3. Press the "S" key to confirm and set the reminder for the selected duration.
4. If the reminder is set to 0.0 hours, the reminder function is disabled.
5. Changing the desk height during the set time will reset the reminder timer.

5. Child Lock

1. Press and hold the lock button "🔒" for 3 seconds in the height display mode, and the screen will display "LoC", locking other functions (sedentary reminders will still work). Press and hold again for 3 seconds "🔒" to unlock.
2. The screen will lock automatically if there is no operation for a long time.

6. Parameter Settings

1. Press and hold the settings button for 3 seconds to display "S--",
2. And press again to enter the settings mode. Parameters that can be set include:
 - Height display unit: Metric (SI) or Imperial (In);
 - Collision protection force: Light, Normal, Heavy, or Off;
 - Tilt protection level: Light, Normal, Heavy, or Off;

Use the back, toggle, and confirm buttons to navigate and save settings.

Main Menu Interface	Submenu Interface	Description
Unit	SI Metric	After entering, it will display the last set height unit value. Use the up (▲) and down (▼) buttons to toggle between options (SI, In). After selecting, press the "S" button to save the current selection. The current option will be displayed for 2 seconds before exiting the settings mode.
	Inch	
Collision Force	Off	After entering, it will display the last set collision force level. Use the up (▲) and down (▼) buttons to toggle between options (Off, L, N, H). After selecting, press the "S" button to save the current selection. The current option will be displayed for 2 seconds before exiting the settings mode.
	Light	
	Normal	
	Heavy	
Slope	Off	After entering, it will display the last set slope protection level. Use the up (▲) and down (▼) buttons to toggle between options (Off, L, N, H). After selecting, press the "S" button to save the current selection. The current option will be displayed for 2 seconds before exiting the settings mode.
	Light	
	Normal	
	Heavy	

7.Charging and Display

- 1.Wireless charging will be disabled when the screen is active.
- 2.After the screen turns off, placing a phone on the charger will show "**AC**", indicating charging is in progress. All buttons will be disabled during charging.
- 3.The screen will turn off after charging is complete.

8.Protection and Alarms

- 1.**Obstacle Detection:** Displays "**E02**". If the desk collides with something or tilts, the desk will stop and reverse.
- 2.**Overheat Protection:** Displays "**Hot**". Wait at least 18 minutes before resuming operation.
- 3.**Motor Malfunction:** Displays "**E10**". Check motor connections.
- 4.**Overload Protection:** Displays "**E20**". If triggered during upward movement, reduce the load.
- 5.**Undervoltage/Overvoltage Protection:** Displays "**E31**" or "**E32**". Check power connections.
- 6.**Step Loss Protection:** Displays "**E60**". Check motor consistency and connections.

9.Reset

In the case of alarms "E10", "E20", or "E60", or when the desk reaches its lowest height, press and hold the reset button for 3 seconds until "E5" (Reset) is displayed. The desk will lower to the minimum height and rebound slightly, completing the reset process.

Recycling and Disposal



This product cannot be disposed of as household waste. To prevent damage to the environment, this product should be recycled. Please use the relevant recycling systems available to you or contact the distributor or manufacturer for recycling assistance.

MAINTAINANCE AND WARNING

- Keep furniture away from heat.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry Cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, For residential use only.
- The maximum load is 100 LBS.

WARRANTY

We strive to offer high- quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

Are you having difficulty with assembly? Missing parts? Please send email with your order No to customerservice@hulalahome.com

For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!