

#### **ITEM NO.NSPZ0916**

#### NOTE:


This brochure contains IMPORTANT safty info. Please read and keep for future reference.

#### **MAINTAINANCE AND WARNING**

- 1. Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents, solvents, abrasives, spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills (Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight, material will possibly fade over time.
- 4.Do not use on site dry cleaning machine. Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protected by a padded barrier.
- 6. Not for commercial use, only for residential use.




## **EXPLOSIVE VIEW**

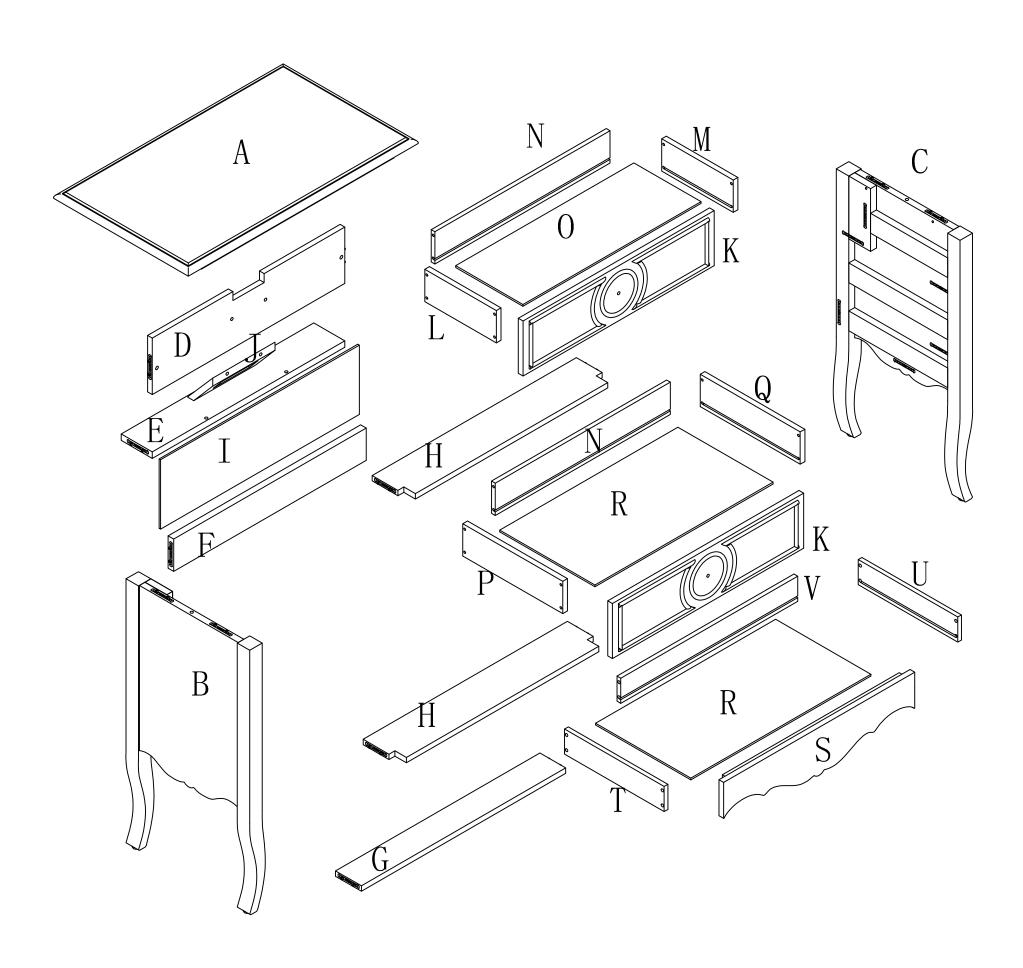






## **PARTS LIST**

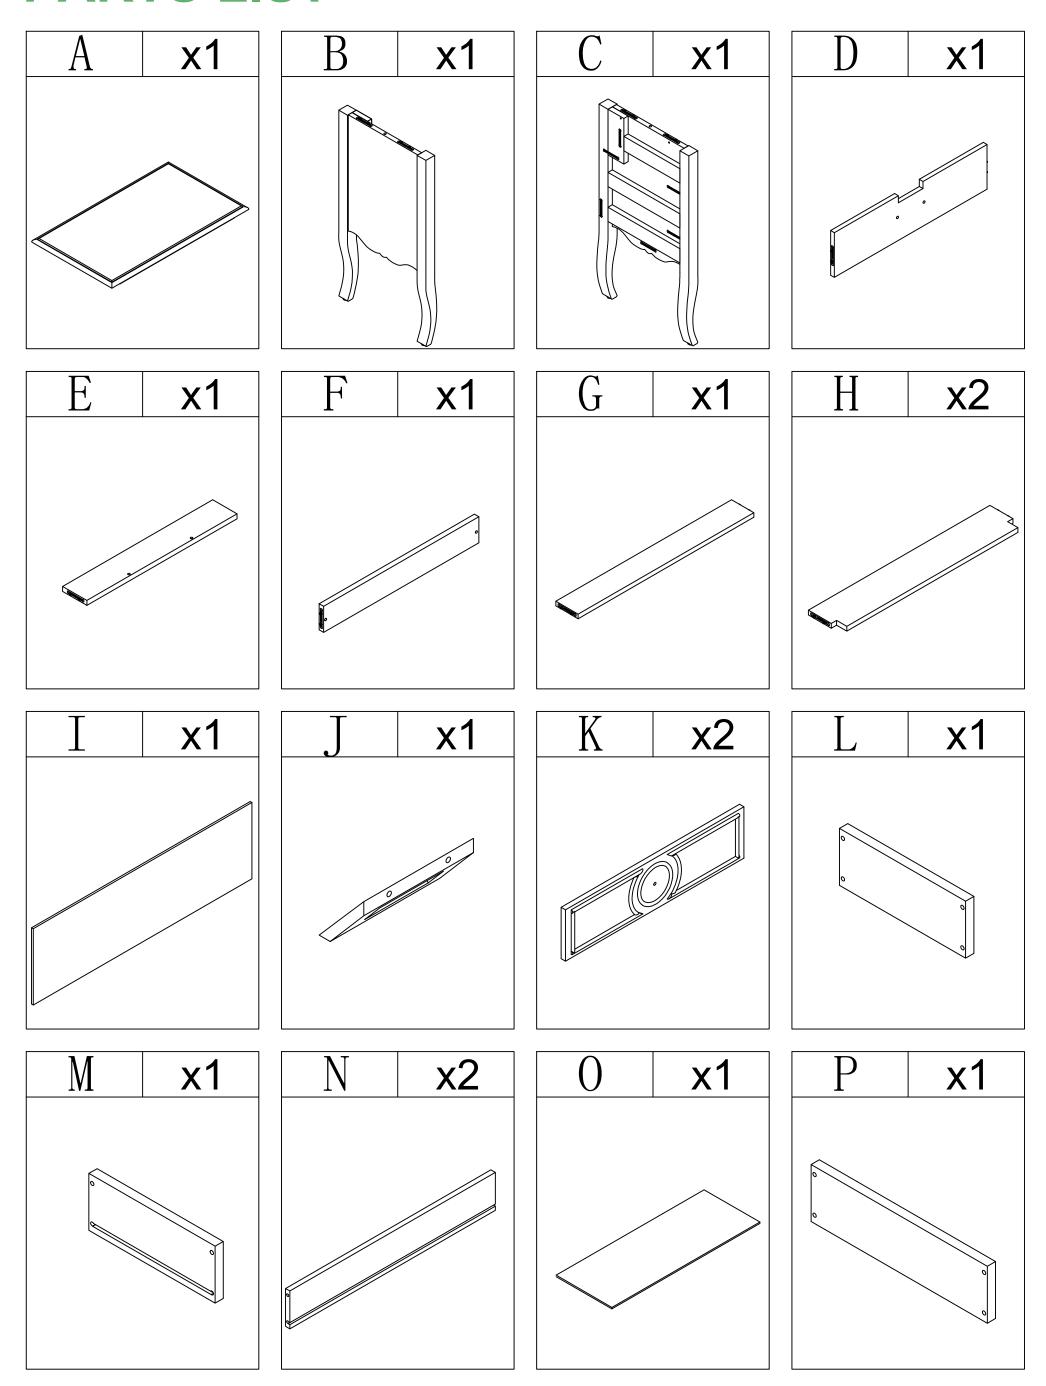



## **PARTS LIST**

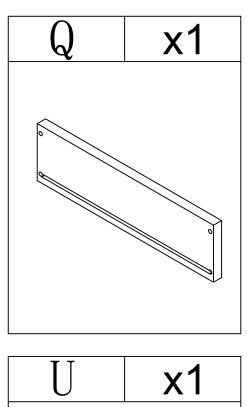


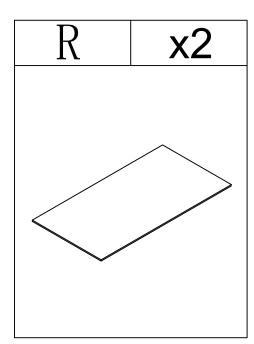

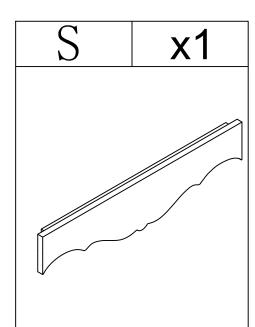


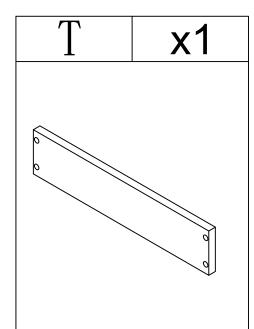

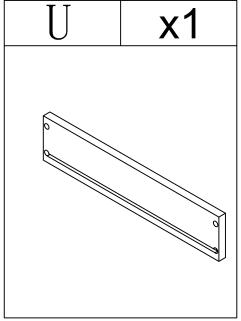


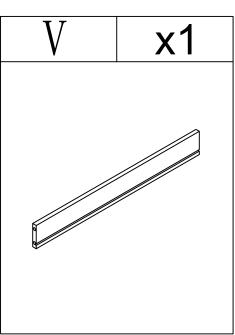


## **HARDWARE LIST**

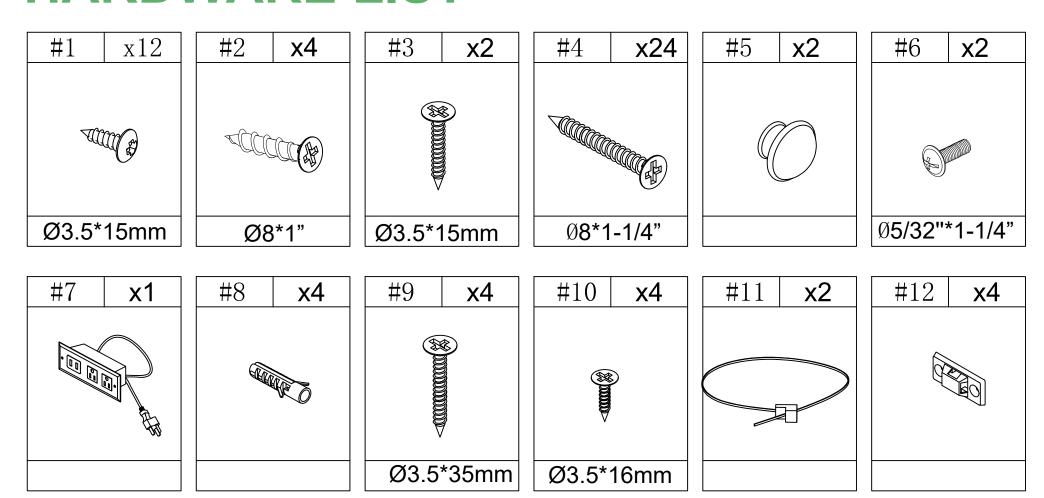

## **TOOL LIST**

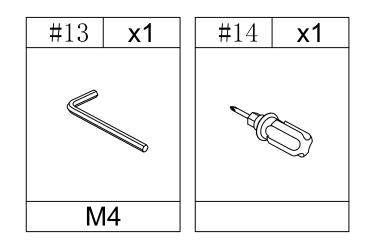


#### HARDWARE SPARE LIST

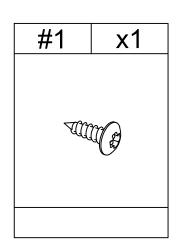


#### STEP-1


- 1.Insert part (D) into part (E), make sure all holes align.
- 2.Insert panel (F&D&E) into panel (C),make sure all holes aligned and then tighten it with allen key #13 as picture show.

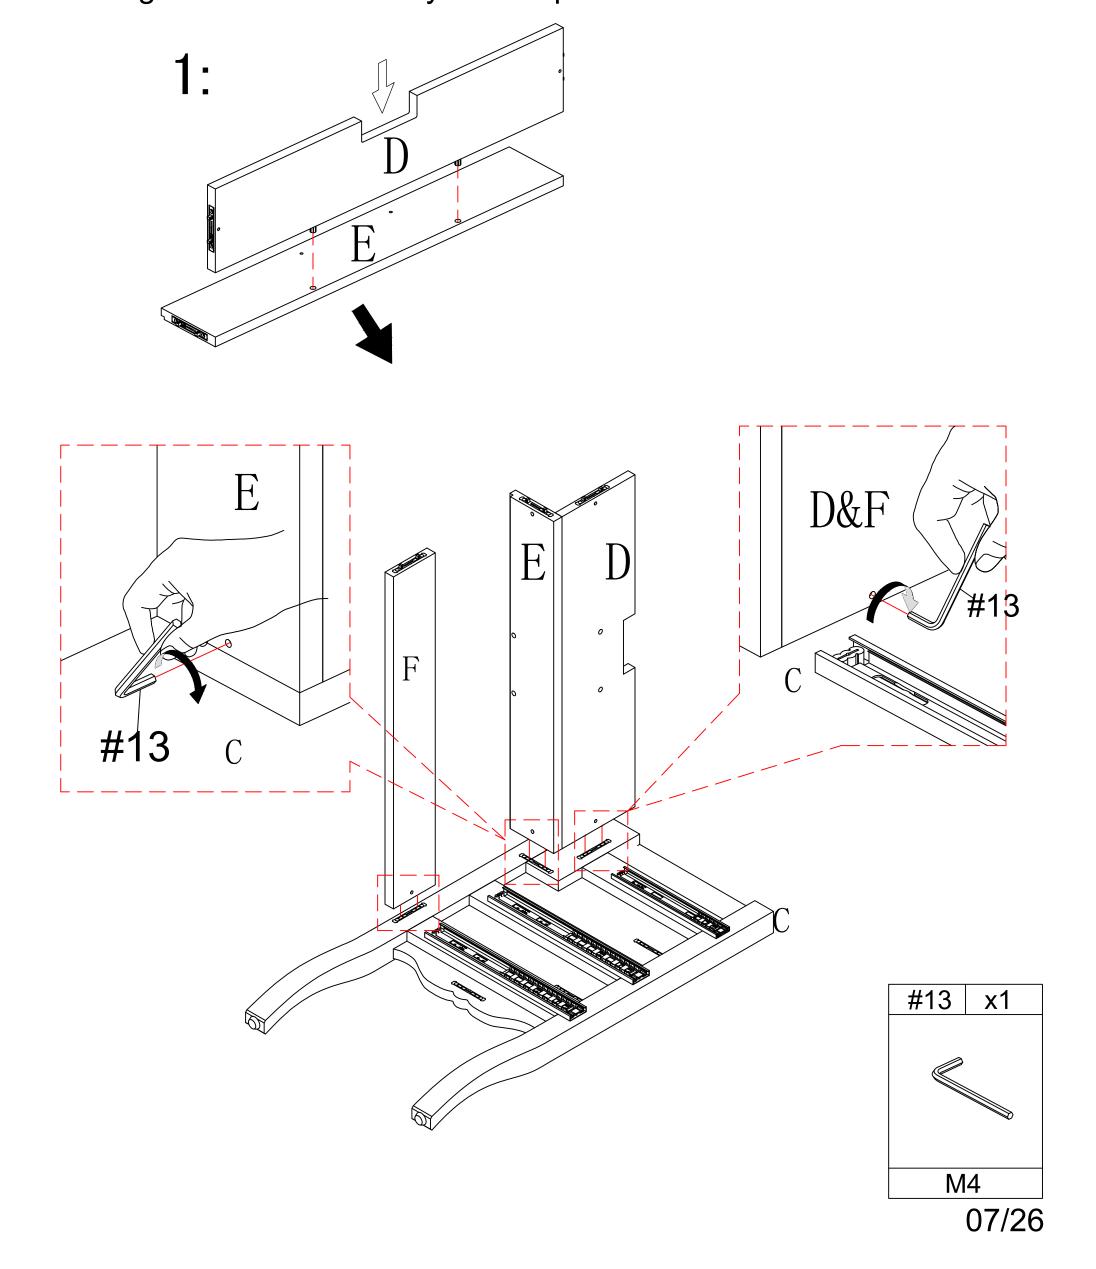

#### STEP-2


Insert panel (H&G) into panel (C),make sure all holes aligned and then tighten it with allen key #13 as picture show.

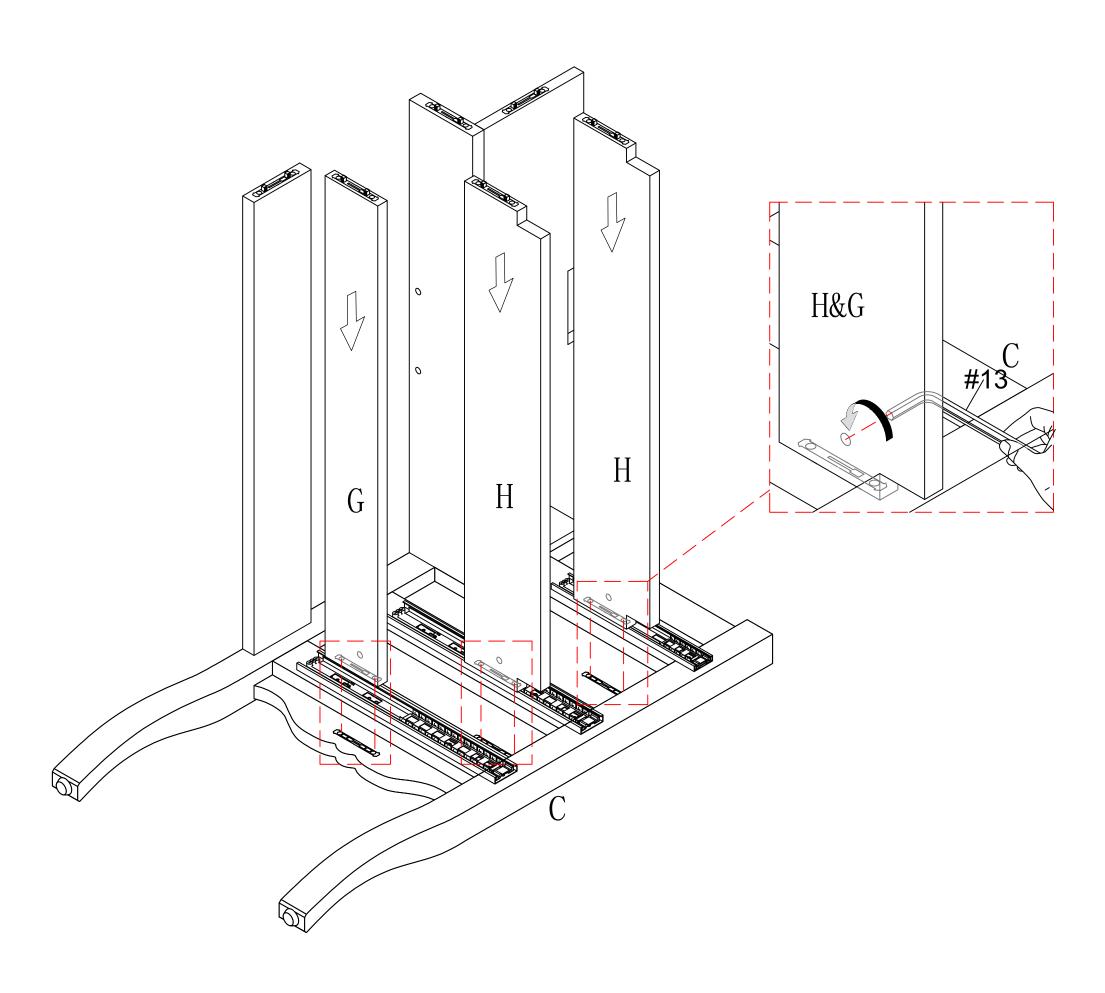


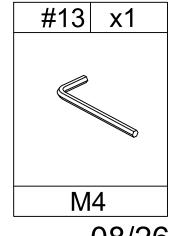

#### STEP-3


1.Insert side panel (B) into the corresponding hole of preassembled step 2, make sure all holes aligned and use allen key #13 to tighten it as picture show.

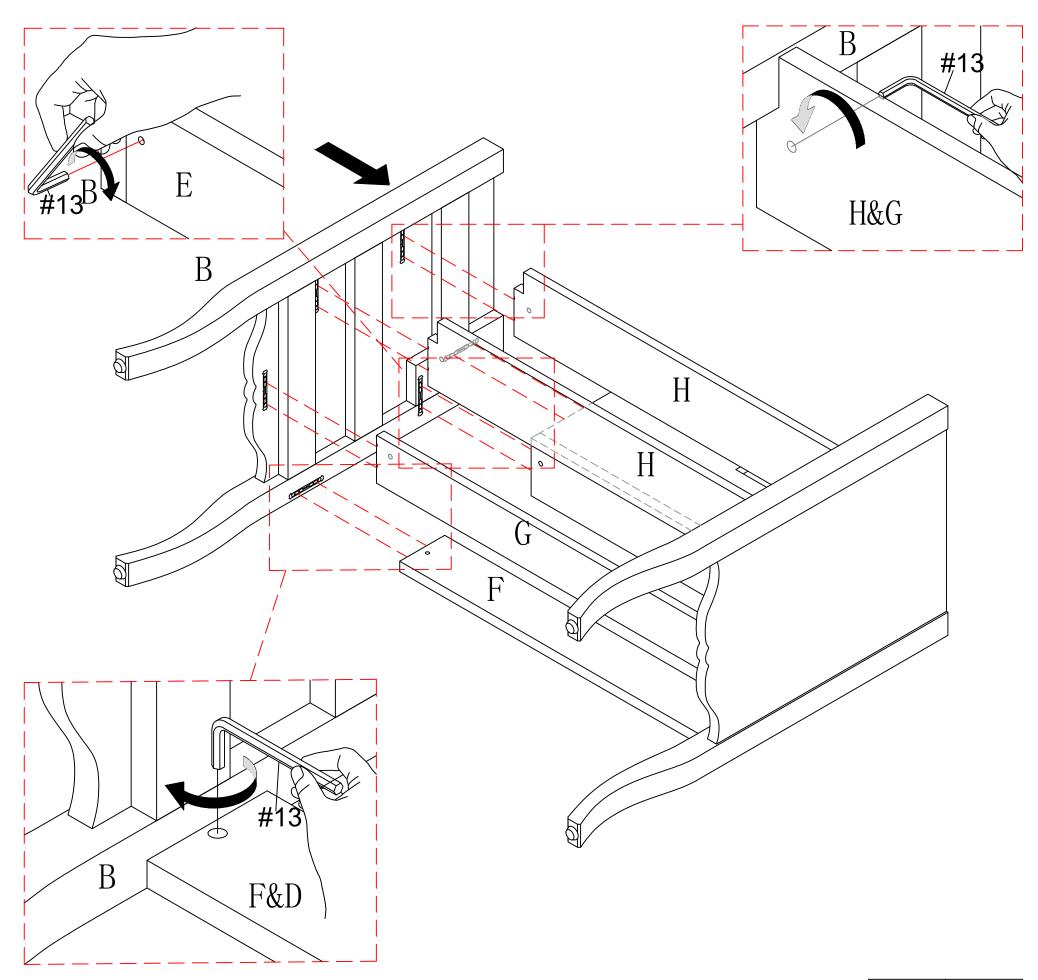

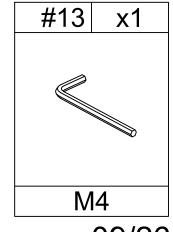


#### STEP-4

1.insert back panel (I) into the groove of preassembled step 3,make sure all holes aligned and use screw#1 to attach them, tighten screw #1 with screwdriver#14.

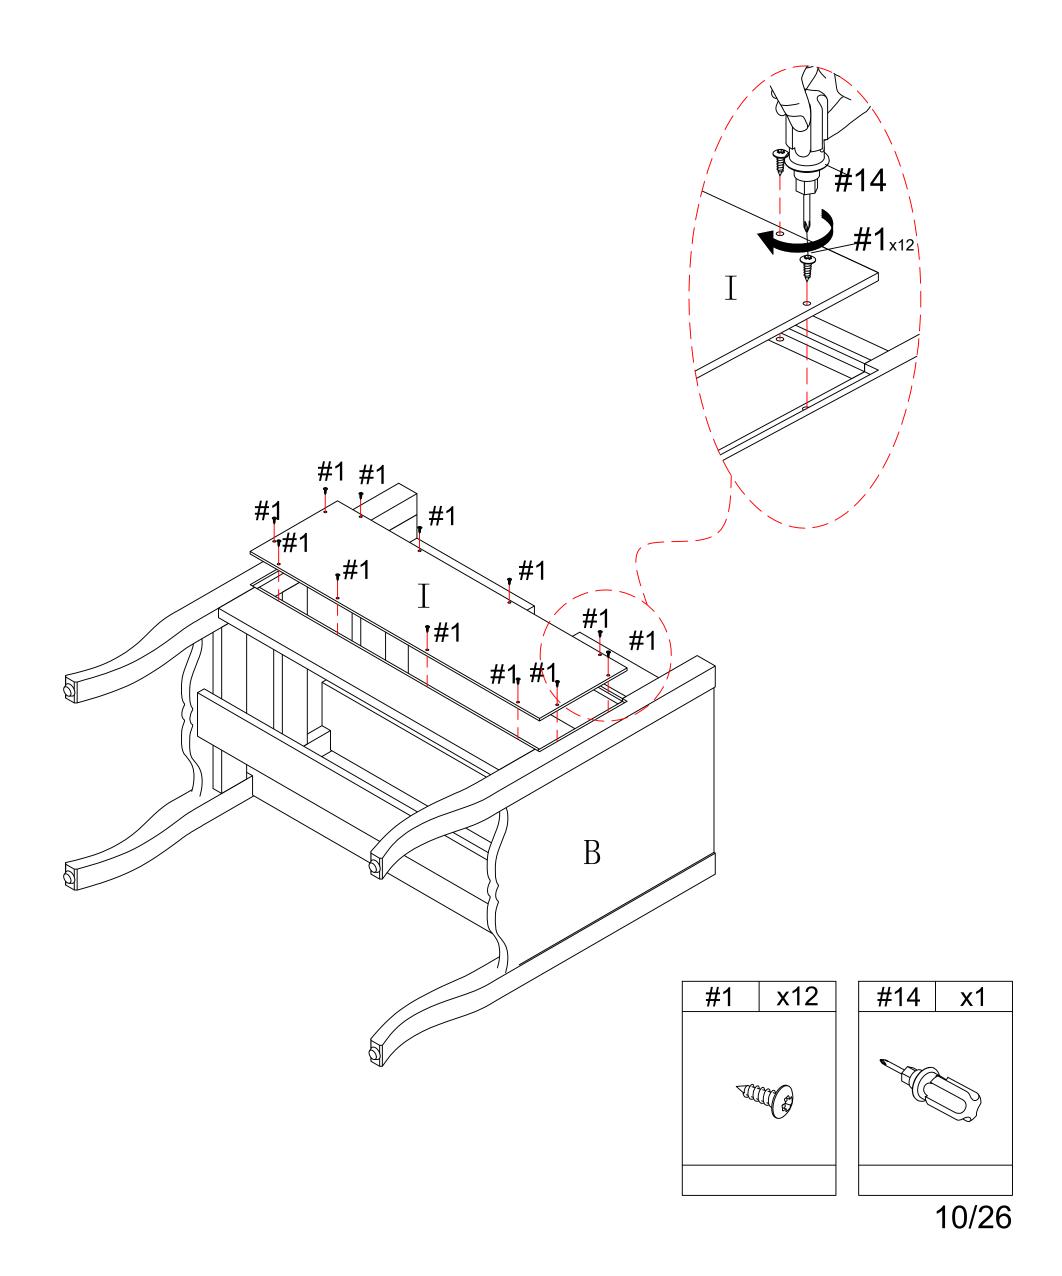


#### STEP-5

1.insert part (J) into the preassembled step 4,make sure all holes aligned and use screw#2 to attach them, tighten screw #2 with screwdriver #14.

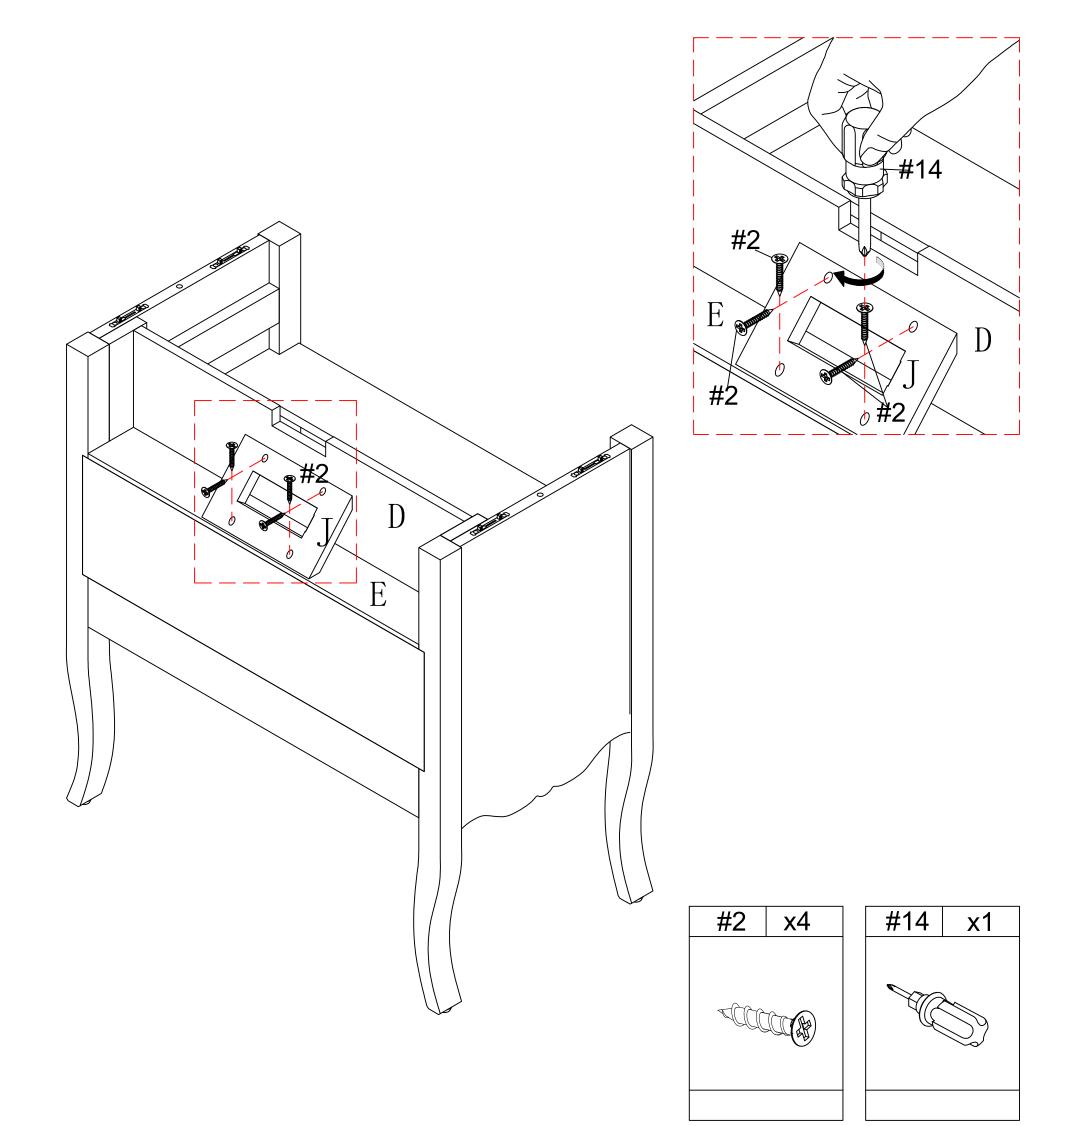


#### STEP-6


1.insert part #7 into the preassembled step 2,make sure all holes aligned and use screw #3 to attach them, tighten screw #3 with screwdriver#14.

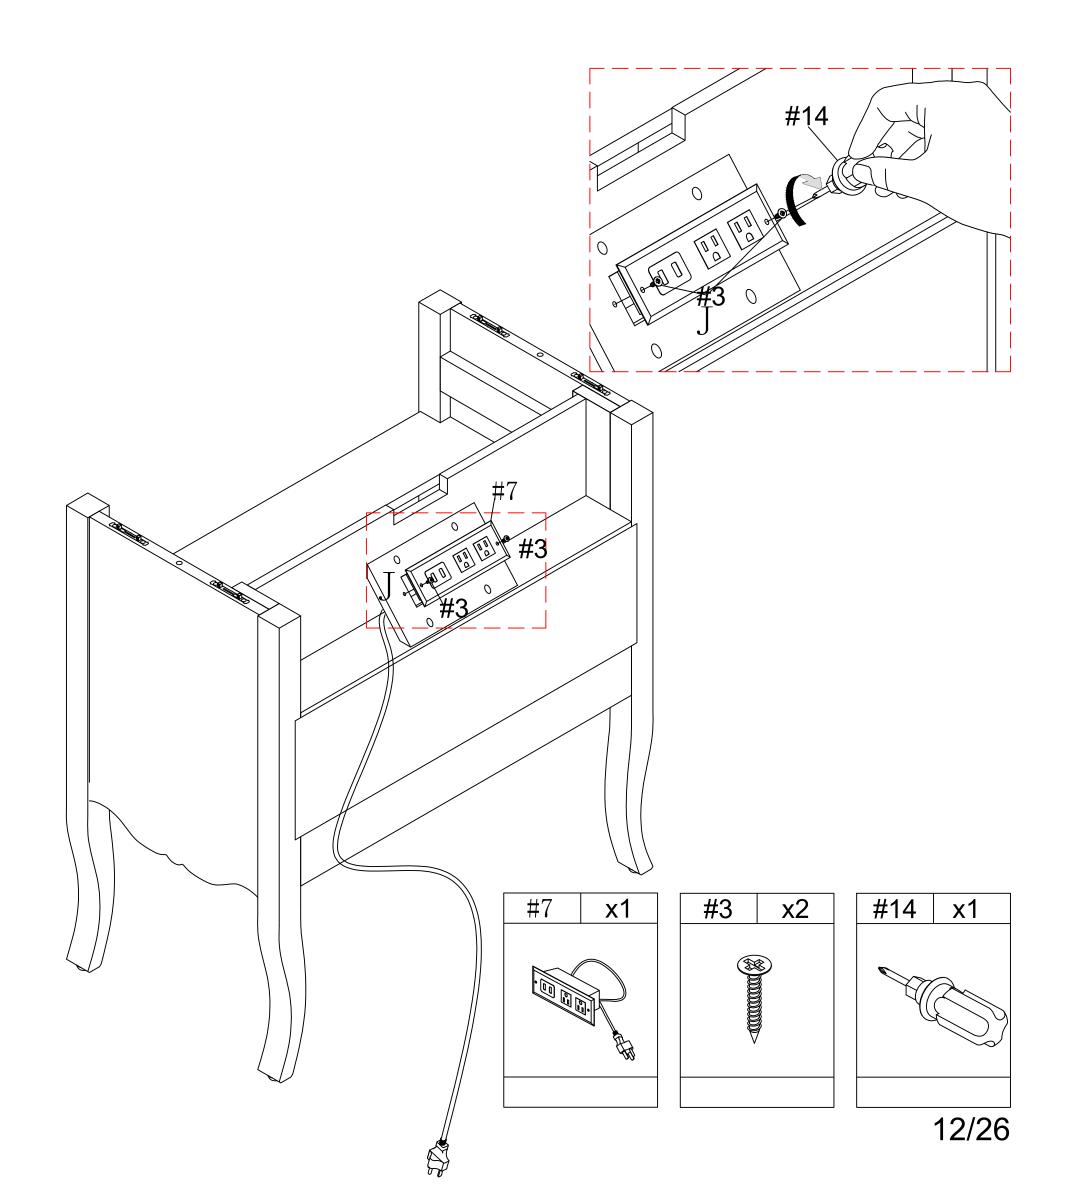

#### STEP-7


1.Insert top panel (A) into the corresponding hole of preassembled step 6, make sure all holes aligned and use allen key #13 to tighten it as picture show.

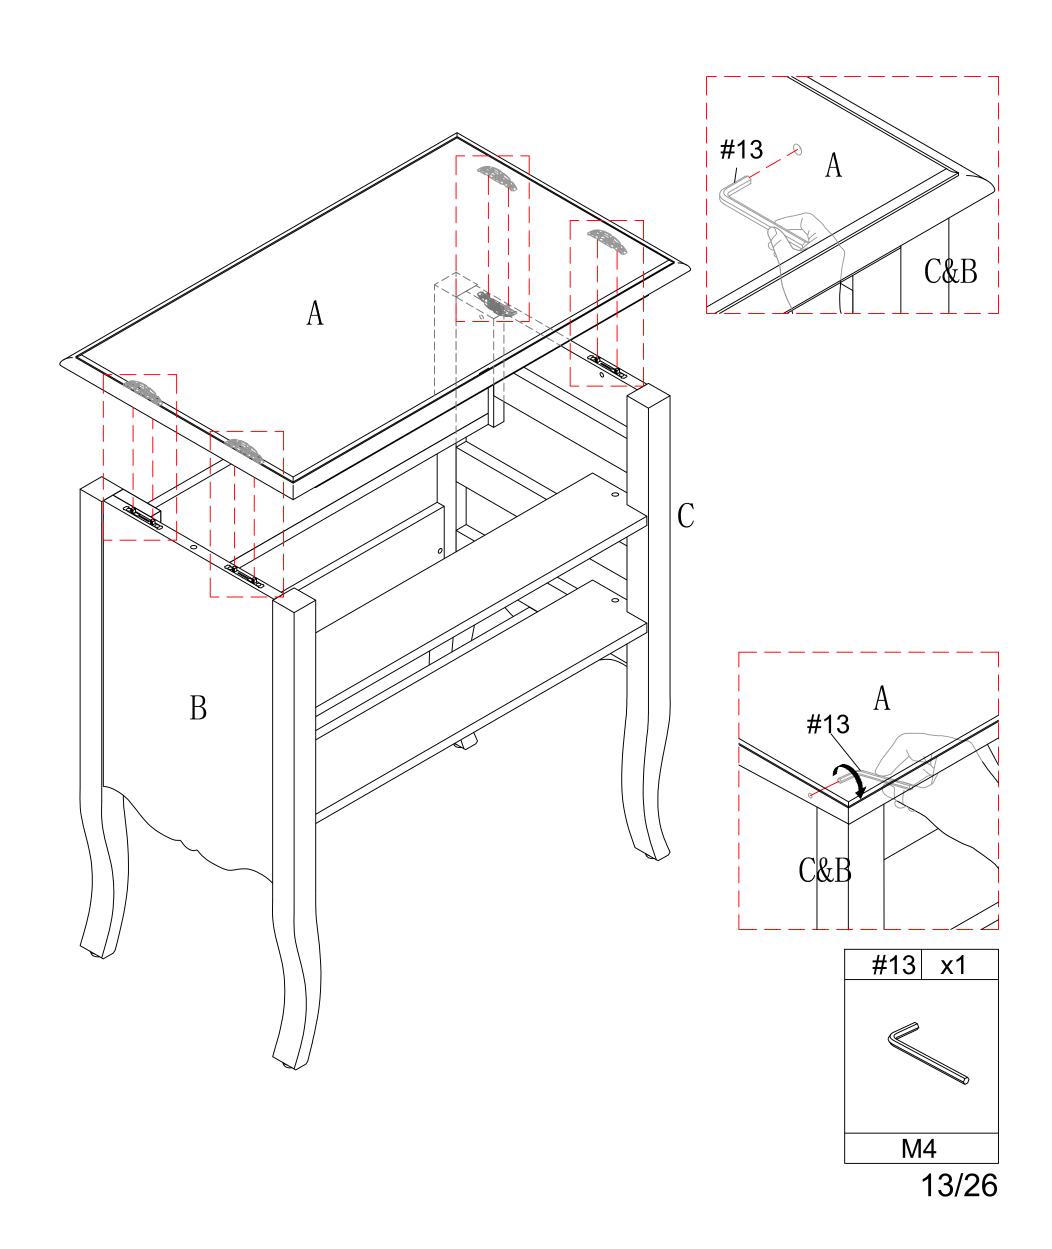

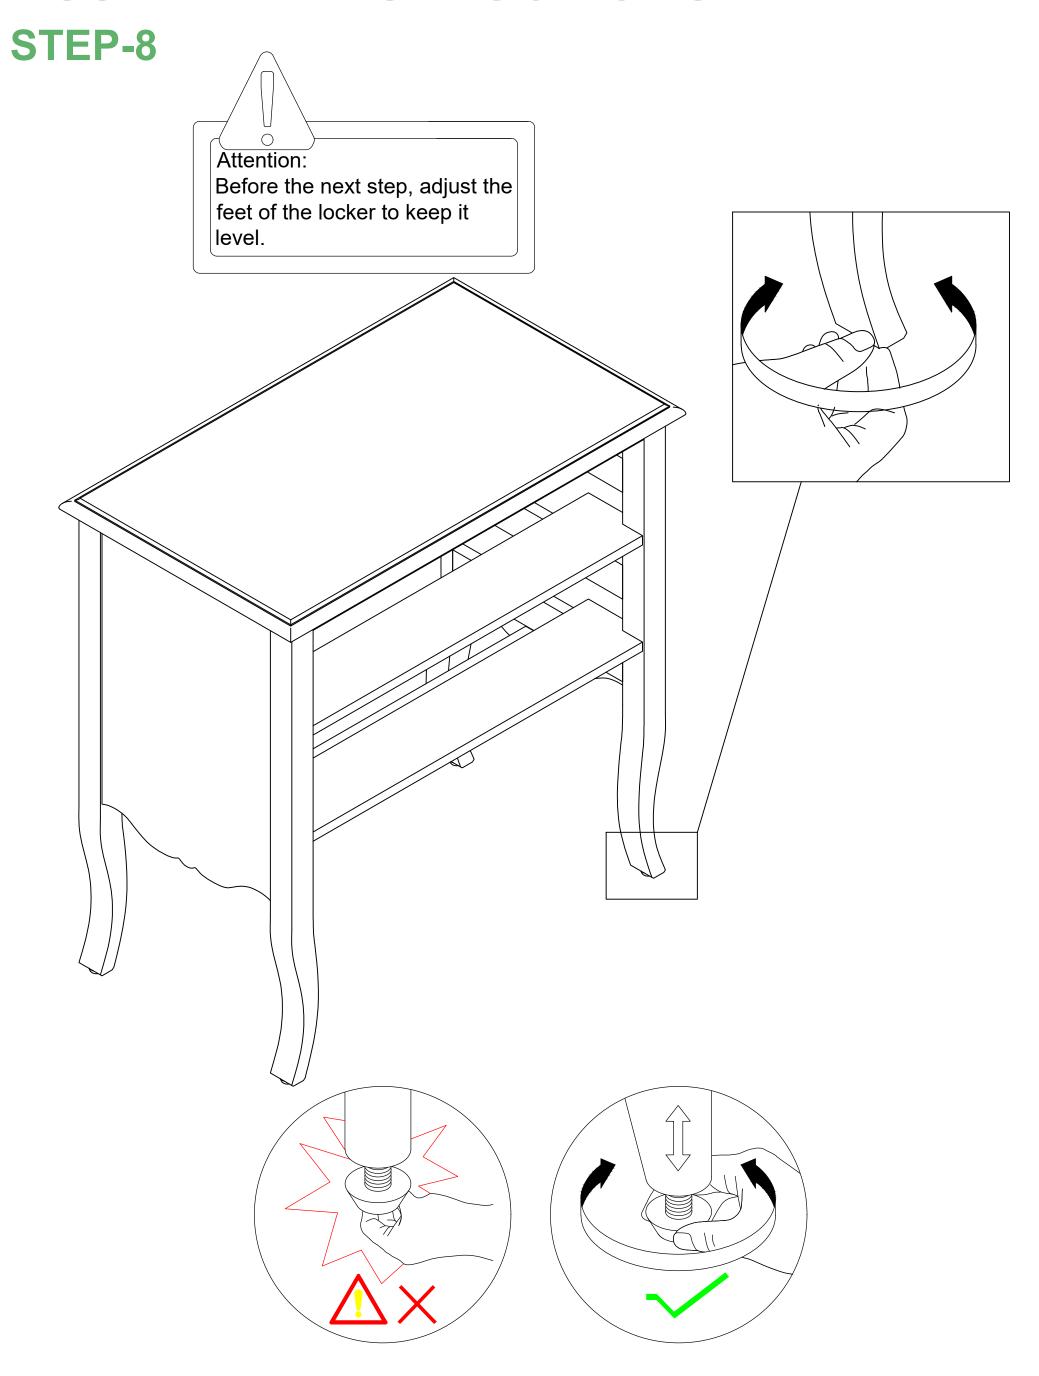

#### STEP-9


1.Connect part (L&M) to part N using screw #4 and tighten it with screwdriver #14.Slide in the part (O) into the groove in part (L&M). make sure they are also in groove in part (N).

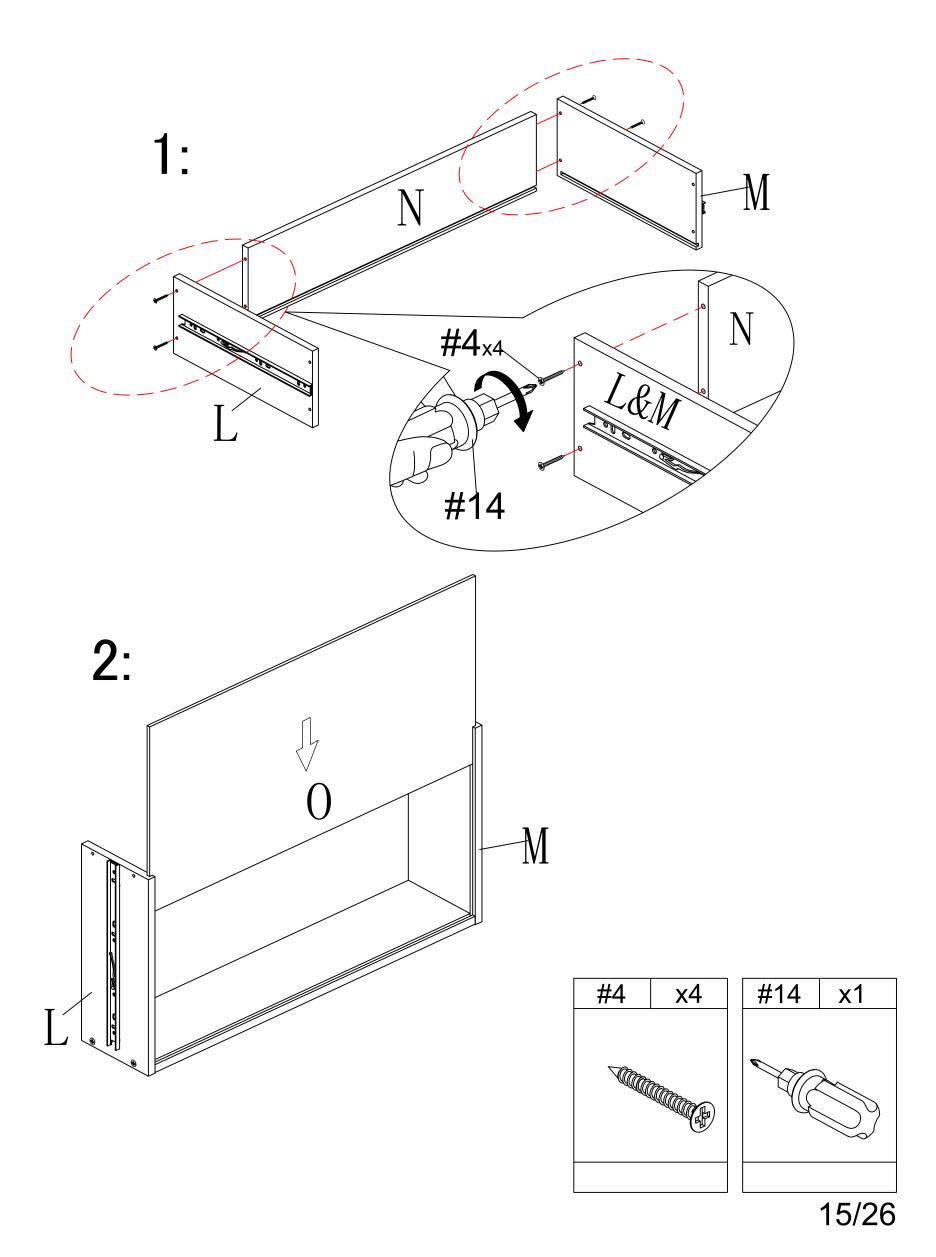


#### STEP-10

Connect the (K) connection (L&M) using screw #4, and tighten it with screwdriver #14.

Use screw #6 to attach the handle #5 to panel K, tighten screws with screwdriver #14.

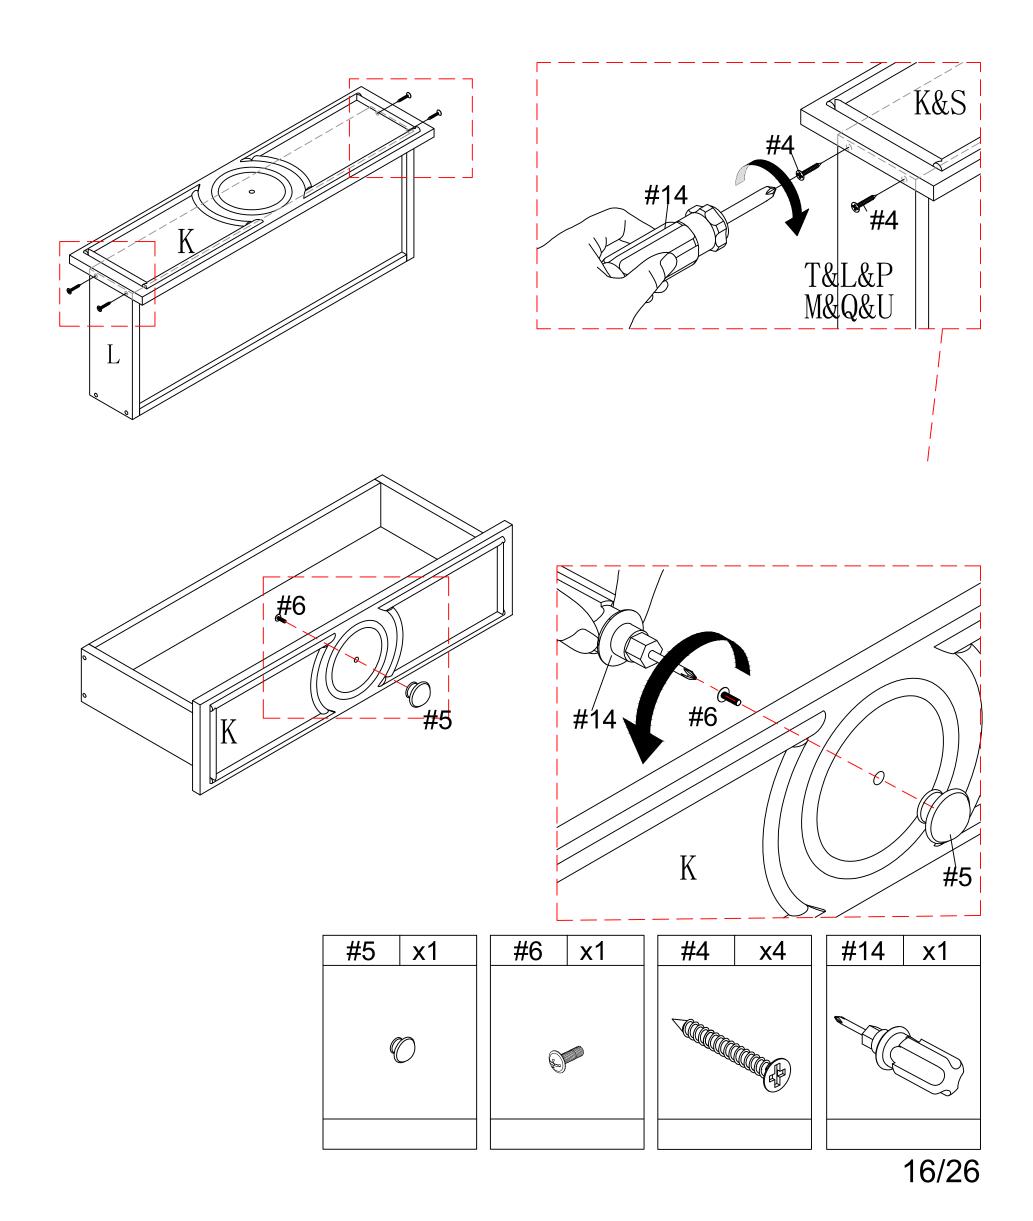


# **ASSEMBLY INSTRUCTIONS**STEP-11

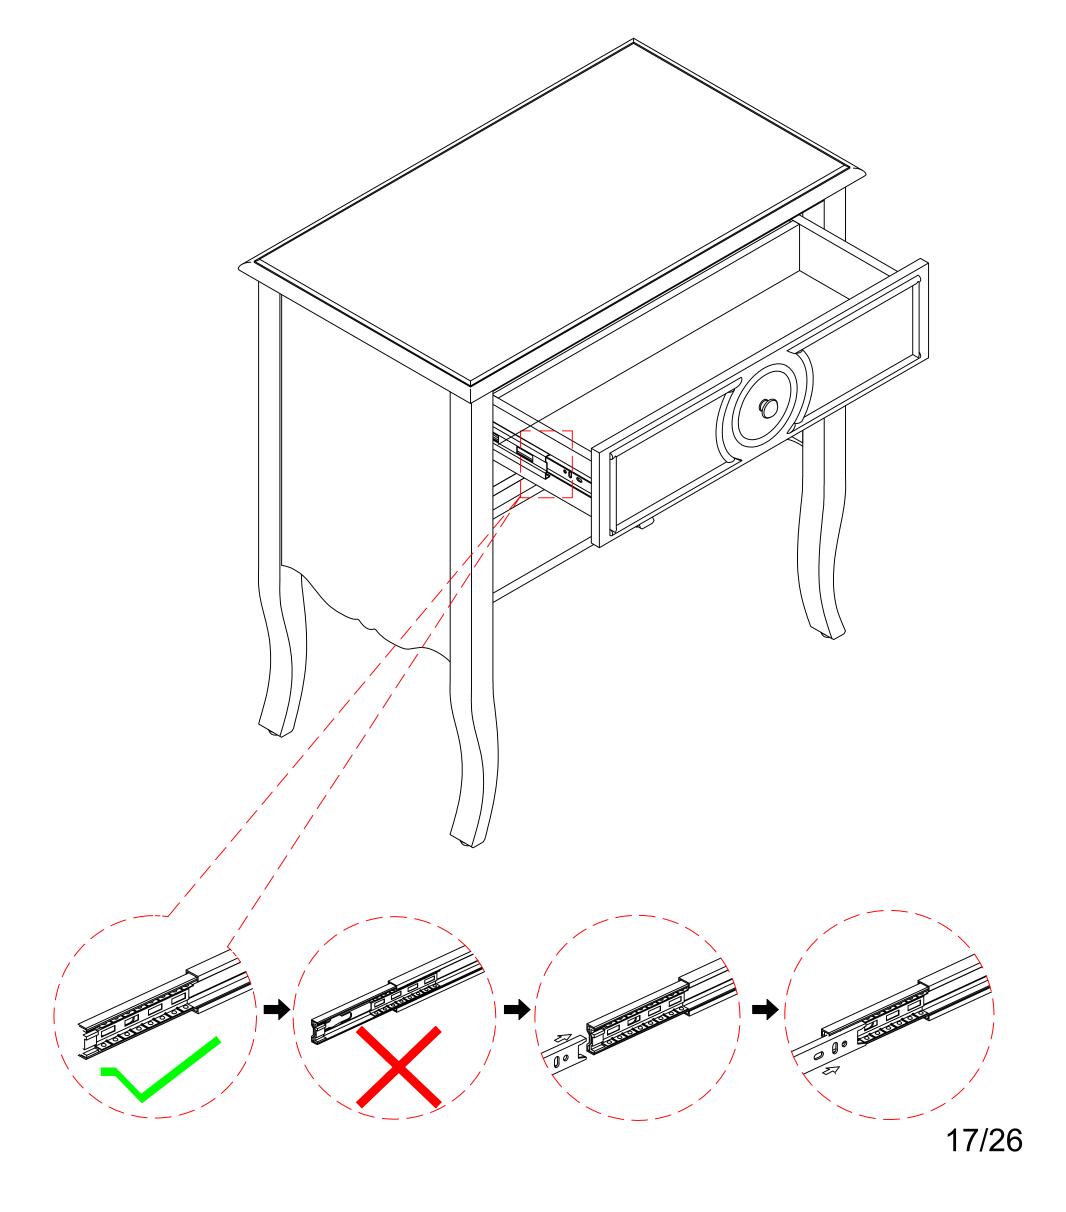

#### **STEP-12**


1.Connect part (P&Q) to part N using screw #4 and tighten it with screwdriver #14.Slide in the part (R) into the groove in part (P&Q). make sure they are also in groove in part (N).

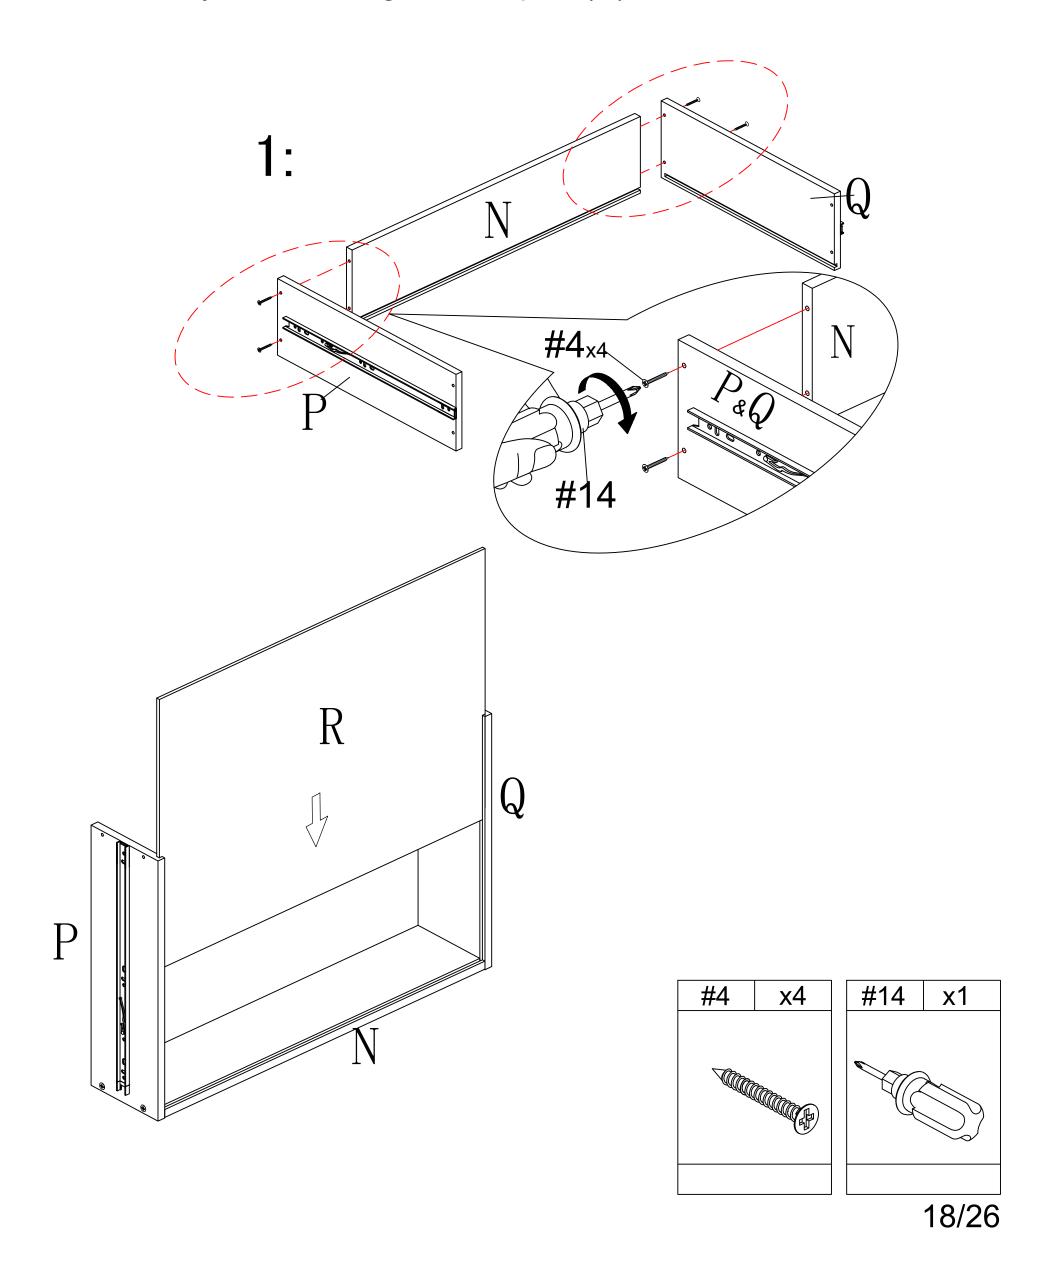

#### STEP-13


Connect the (K) to part (P&Q) using screw #4, and tighten it with screwdriver #14.

Use screw #6 to attach the handle #5 to panel K, tighten screws with screwdriver #14.

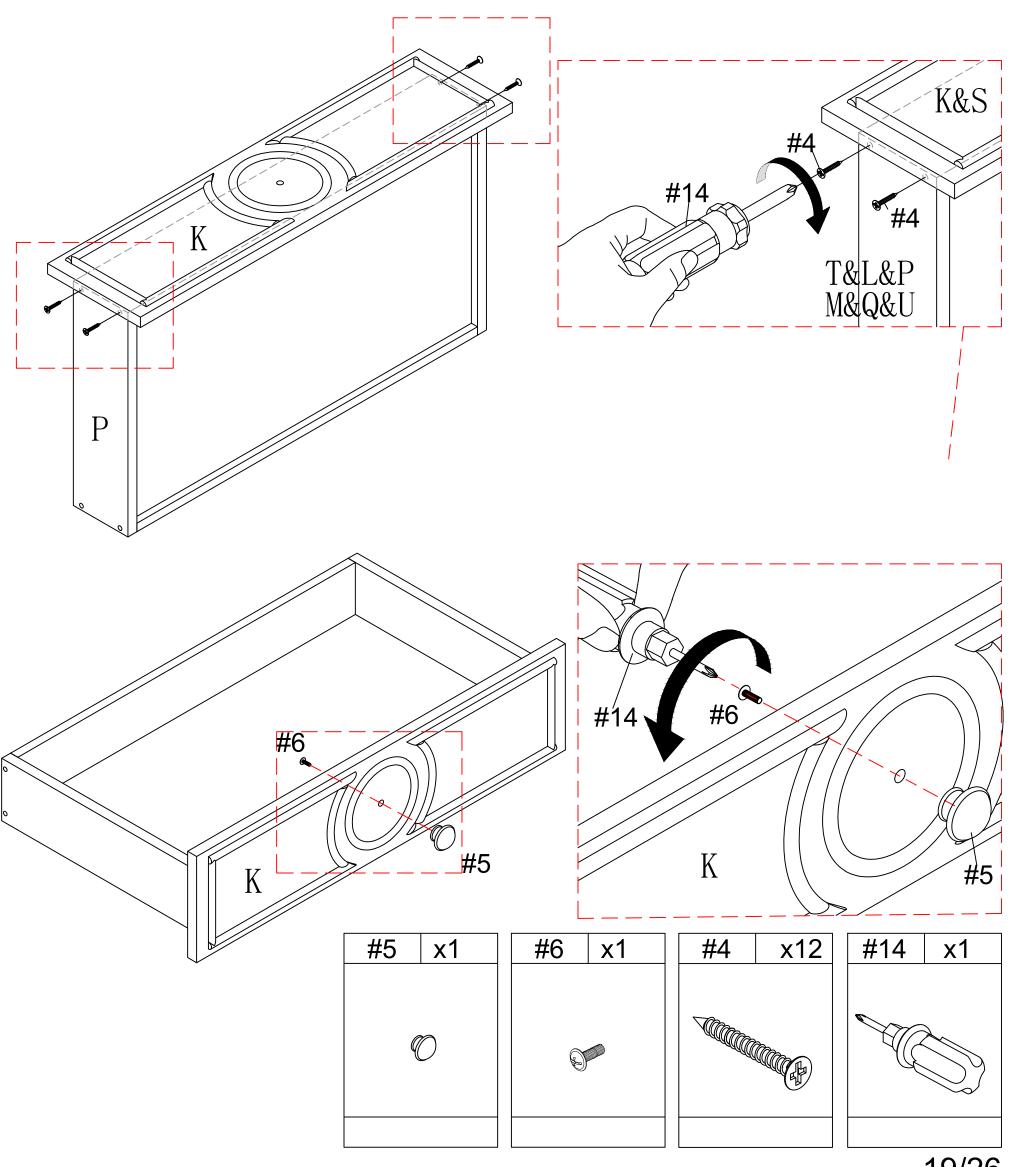


#### STEP-14


1.Connect part (T&U) to part V using screw #4 and tighten it with screwdriver #14.Slide in the part (R) into the groove in part (T&U). make sure they are also in groove in part (V).

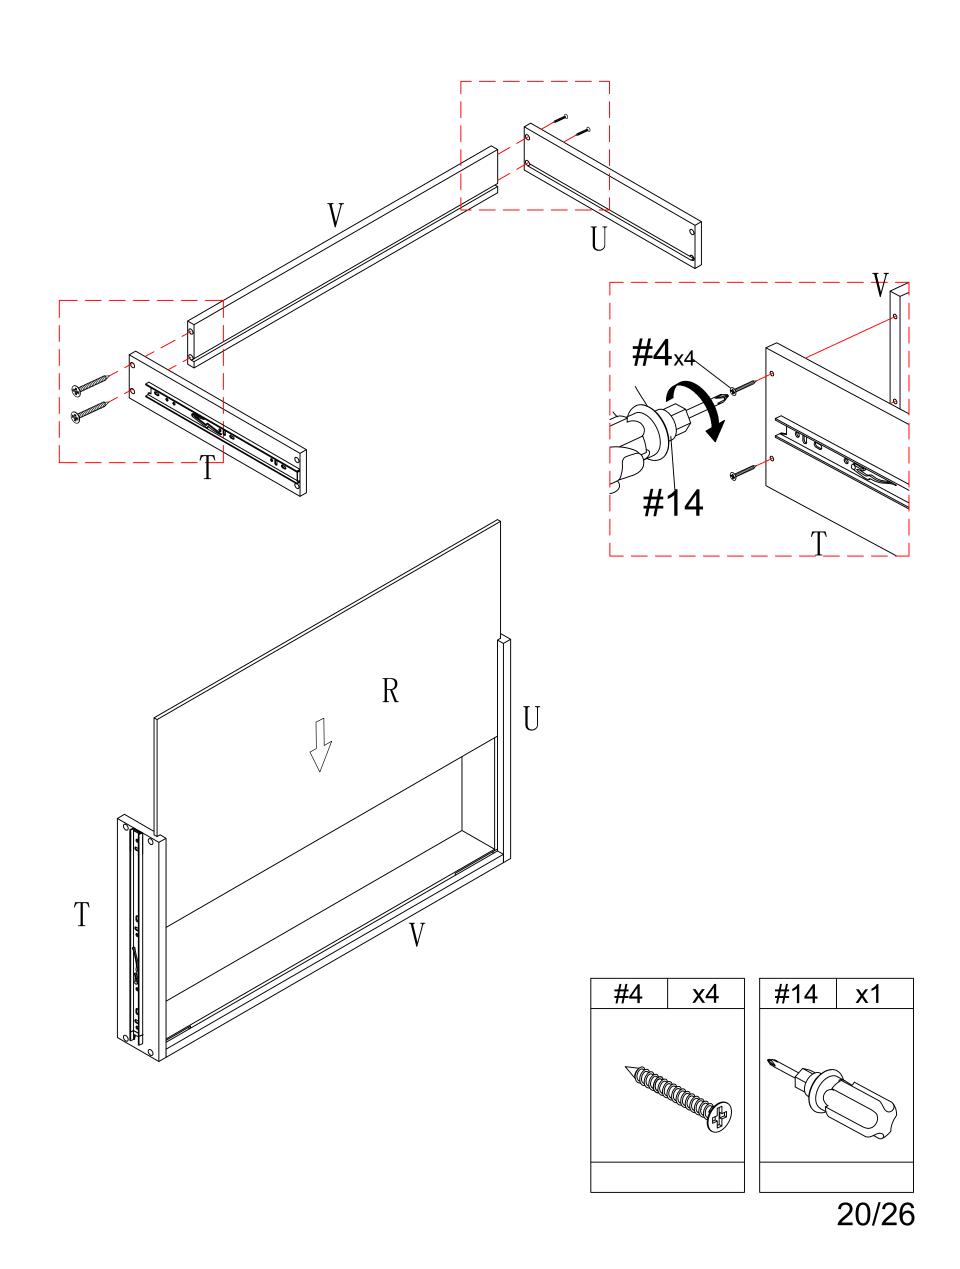


#### **STEP-15**


1. Connect the (S) connection (T&U) using screw #4, and tighten it with screwdriver #14.

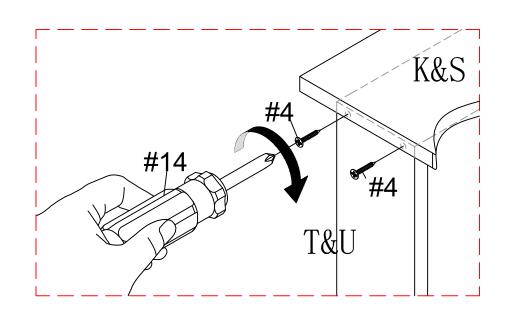


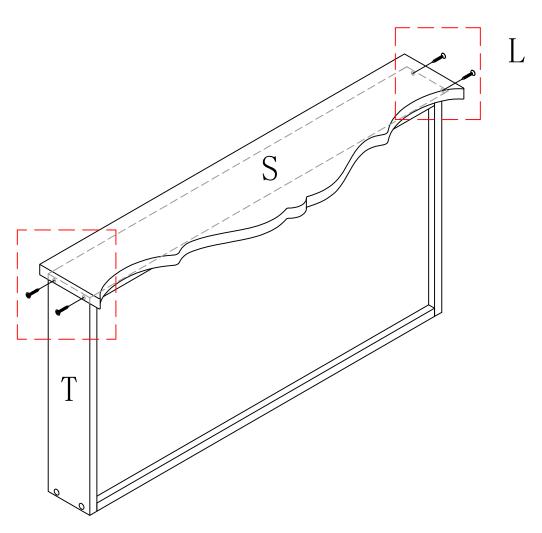


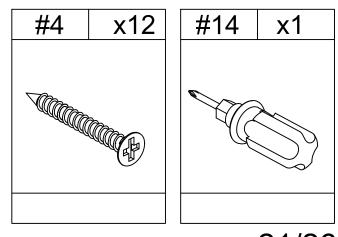

# **ASSEMBLY INSTRUCTIONS**STEP-16

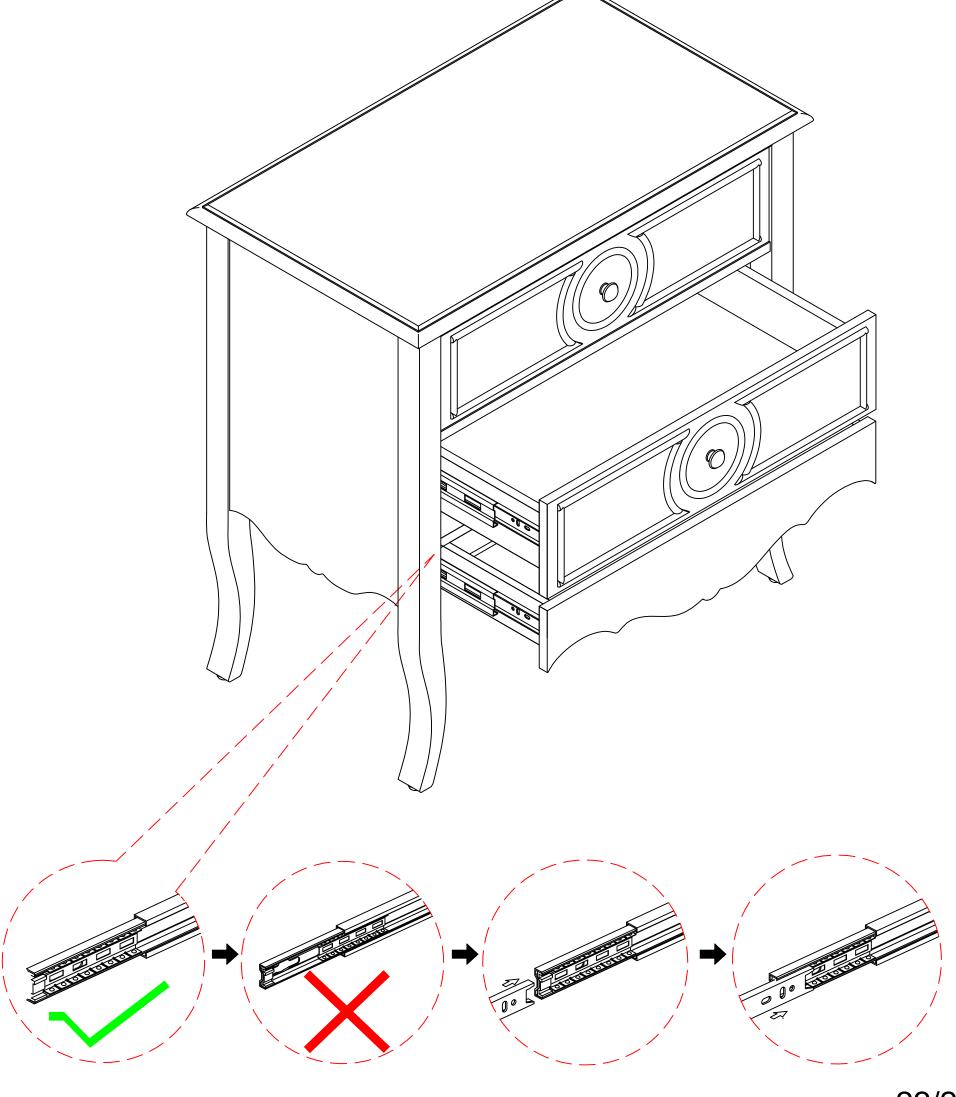


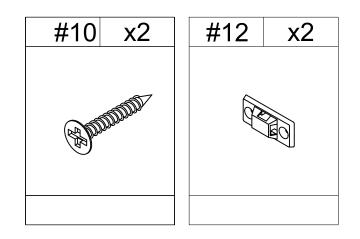


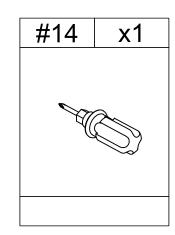


#### **STEP-17**

1.Use screw #10 to attach part #12 to pre-assemble unit at step 16 , tighten screws with screwdriver #14.

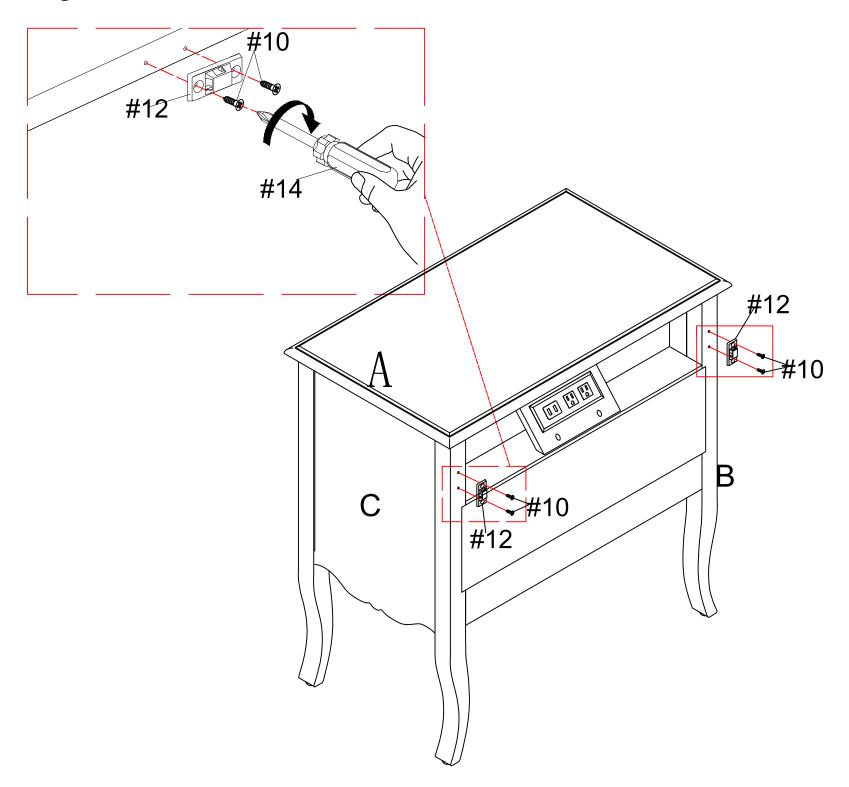


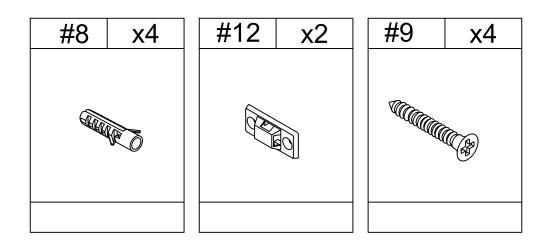


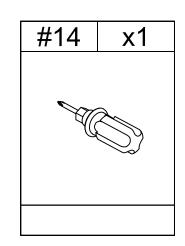

#### STEP-18


- 1.Install the anti-collapse device.
- 2.Mark the position on the wall, that corresponds to the location of part#12 on the of side panel (B&C); Drill and insert the expandable screw #8 by hammer.
- 3.Assemble the part #12 to the wall. Align the hole in the part #12 with the expandable screw #8, use screw #9 to attach it and tighten by screwdriver#14.

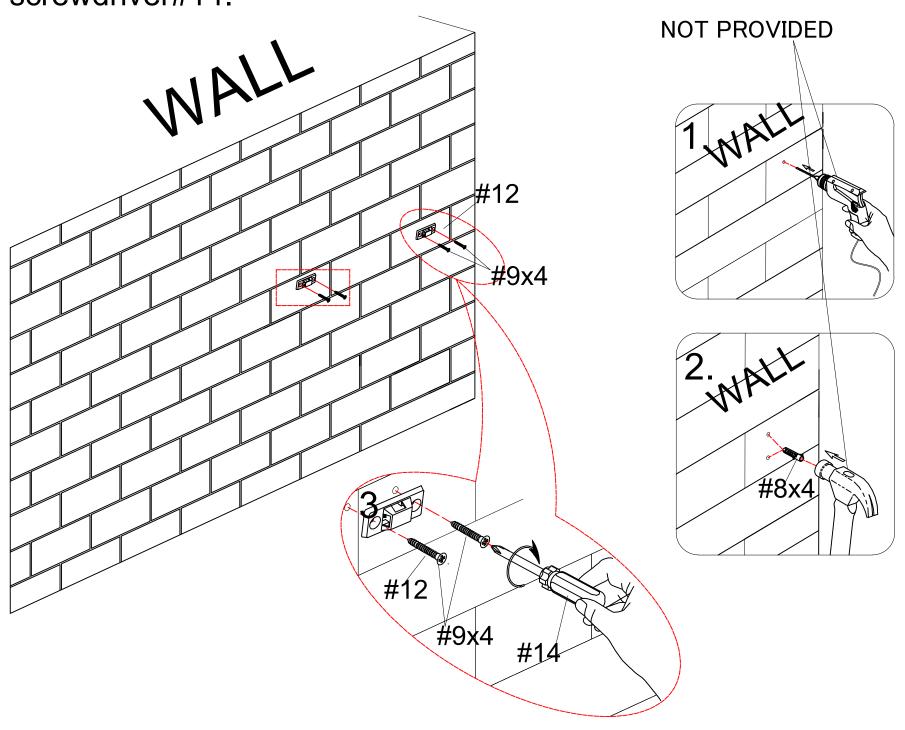

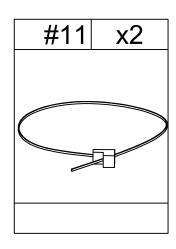

#### **STEP-19**

1.Let the plastic belt #11 pass through the both part #12 and pull tightly.

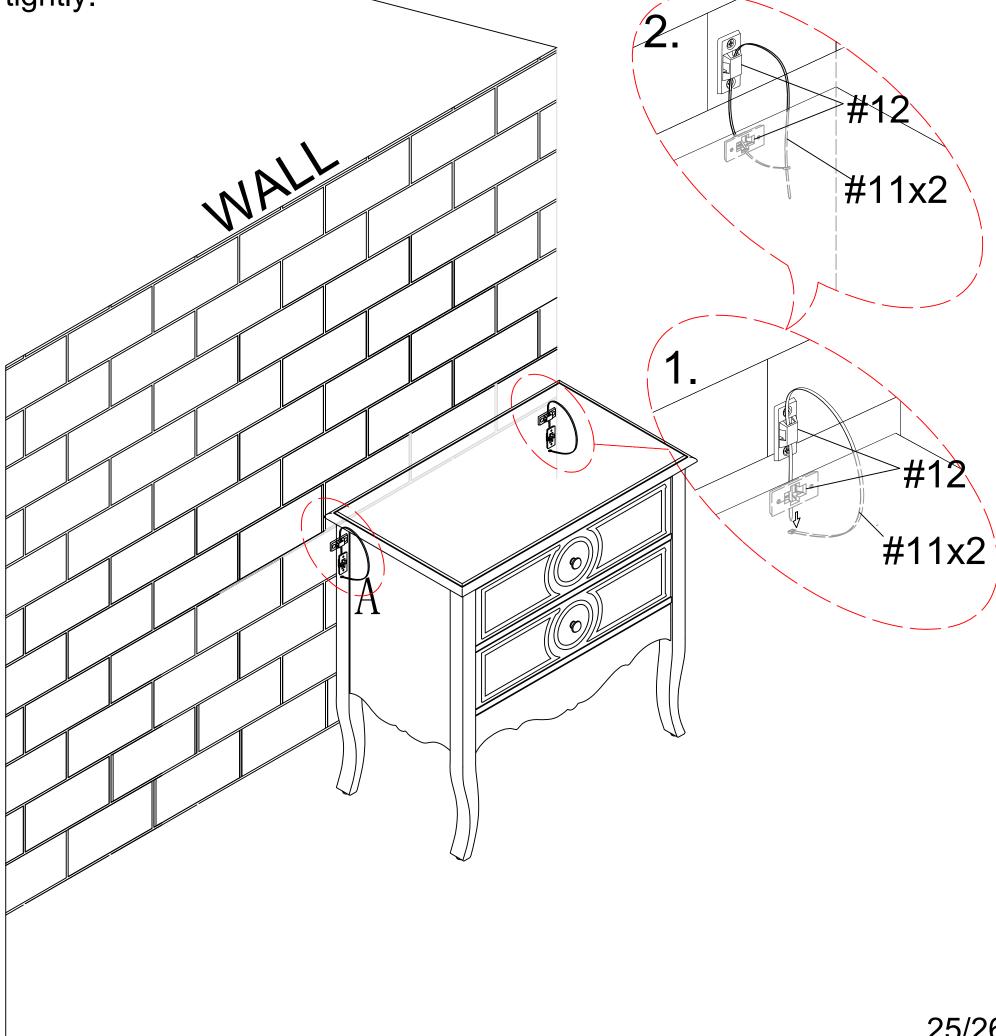

## WARRANTY

- 1.We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
- 2.We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
- 3. Replacement parts by purchasing them with our company if they are available.

Are you having difficulty With assembly? Missing parts? Please send email with your order No to

customerservice@hulalahome.com

For return, please check the return policy with the retailer or market place you bought from.

Appreciate your purchasing from us. Pop up your life by our furniture piece!