

ITEM NO.NSPZ0916

NOTE:


This brochure contains IMPORTANT safty info. Please read and keep for future reference.

MAINTAINANCE AND WARNING

- 1. Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight, material will possibly fade over time.
- 4.Do not use on site dry cleaning machine. Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protectedby a padded barrier.
- 6. Not for commercial use, only for residential use.




EXPLOSIVE VIEW

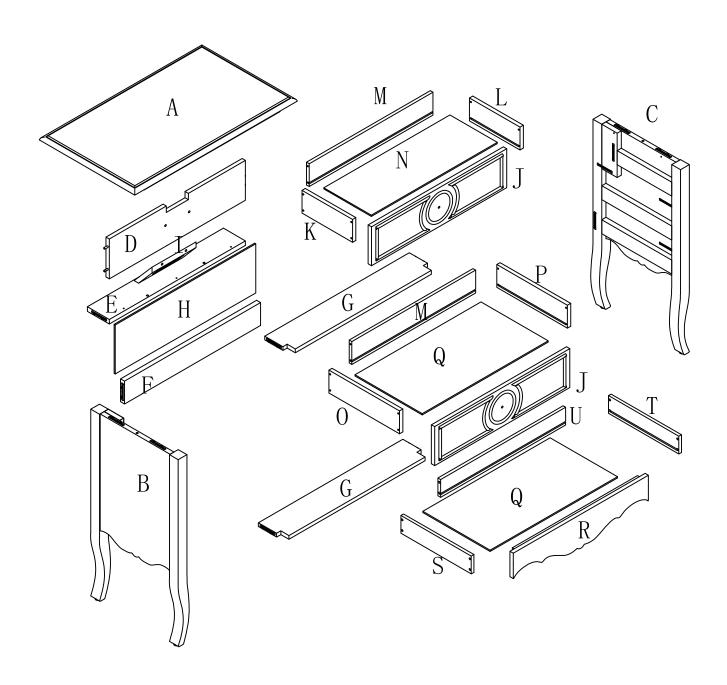






PARTS LIST

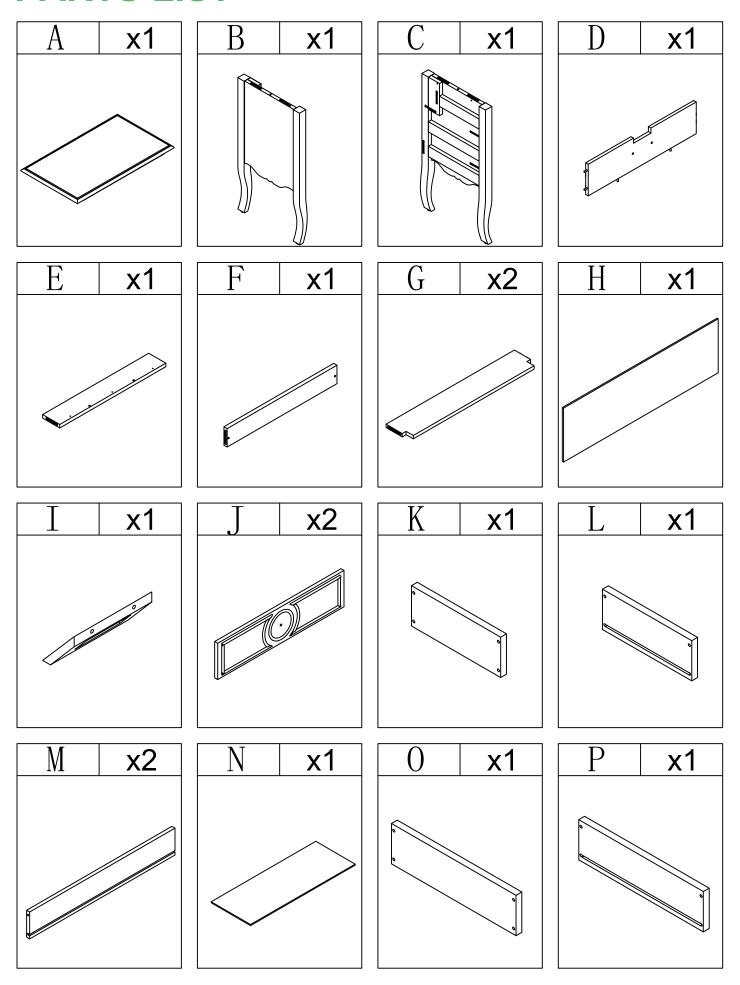



PARTS LIST

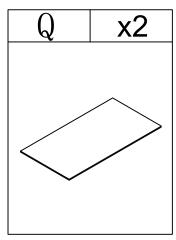

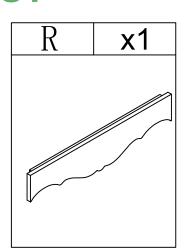


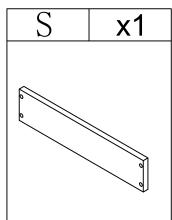

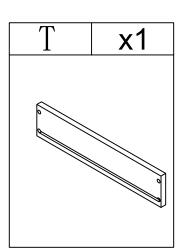


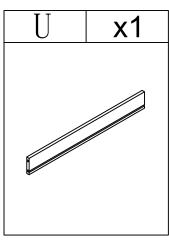


HARDWARE LIST

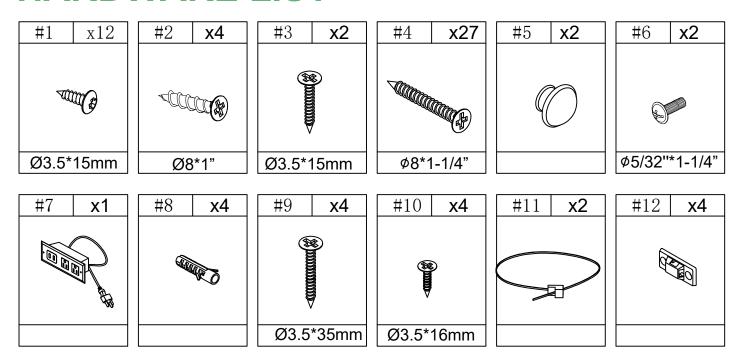

TOOL LIST

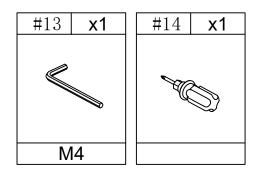


HARDWARE SPARE LIST

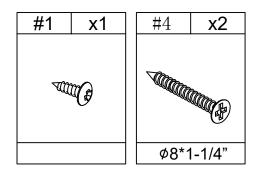


STEP-1


- 1.Insert part (D) into part (E),make sure all holes align .connect (E) to (D) with screw #4, tight screw with screwdriver #14.
- 2.Insert side panel (F&D&E) into panel (C),make sure all holes aligned and then tighten it with allen key #13 as picture show.

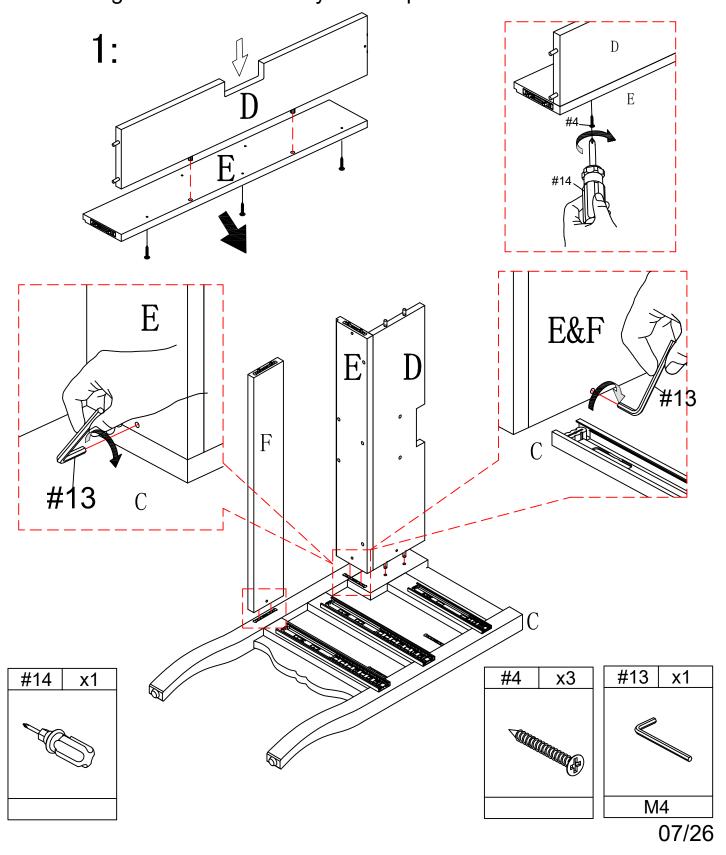

ASSEMBLY INSTRUCTIONSSTEP-2


Insert panel (G) into panel (C),make sure all holes aligned and then tighten it with allen key #13 as picture show.

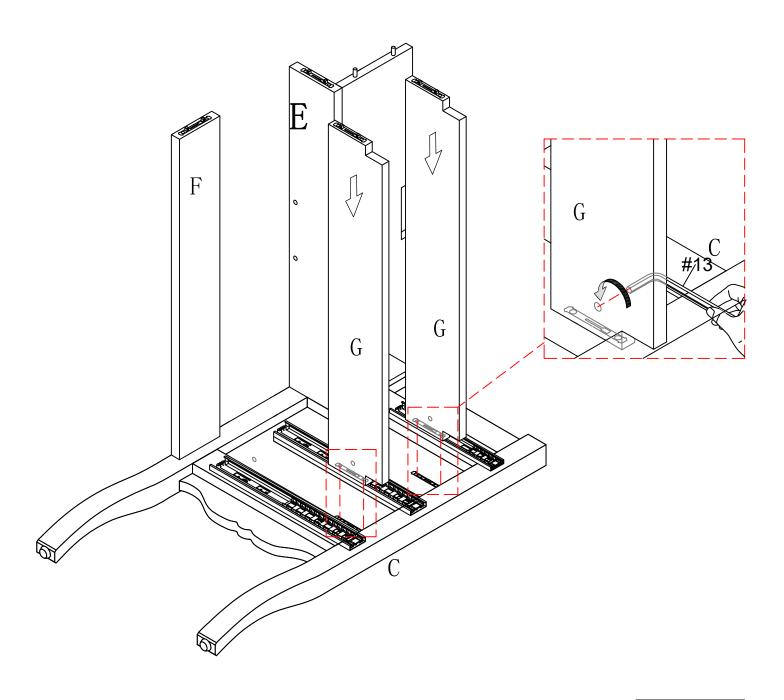


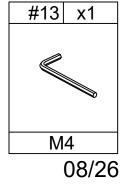

STEP-3


1.Insert side panel (B) into the corresponding hole of preassembled step 2, make sure all holes aligned and use allen key #13 to tighten it as picture show.

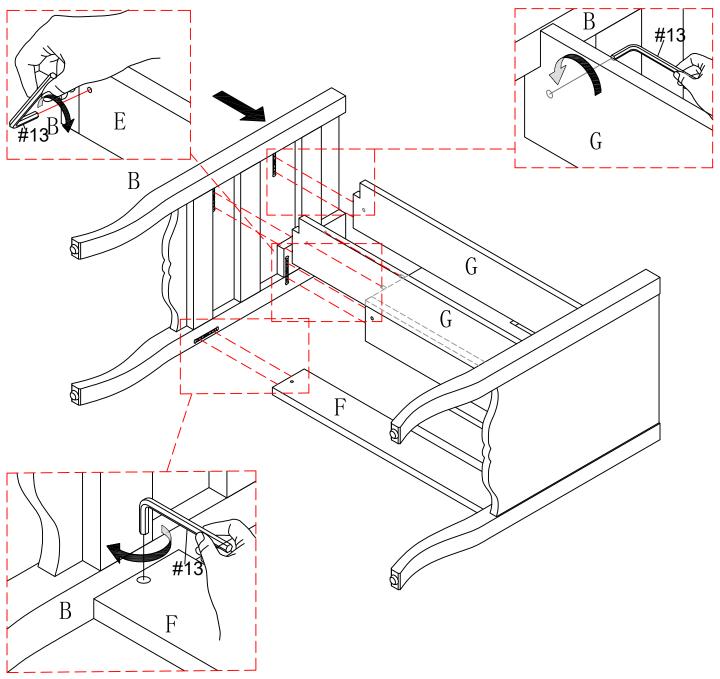

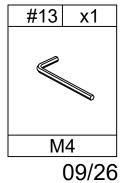


ASSEMBLY INSTRUCTIONSSTEP-4

1.insert back panel (H) into the groove of preassembled step 3,make sure all holes aligned and use screw#1 to attach them, tighten screw #1 with screwdriver#14.

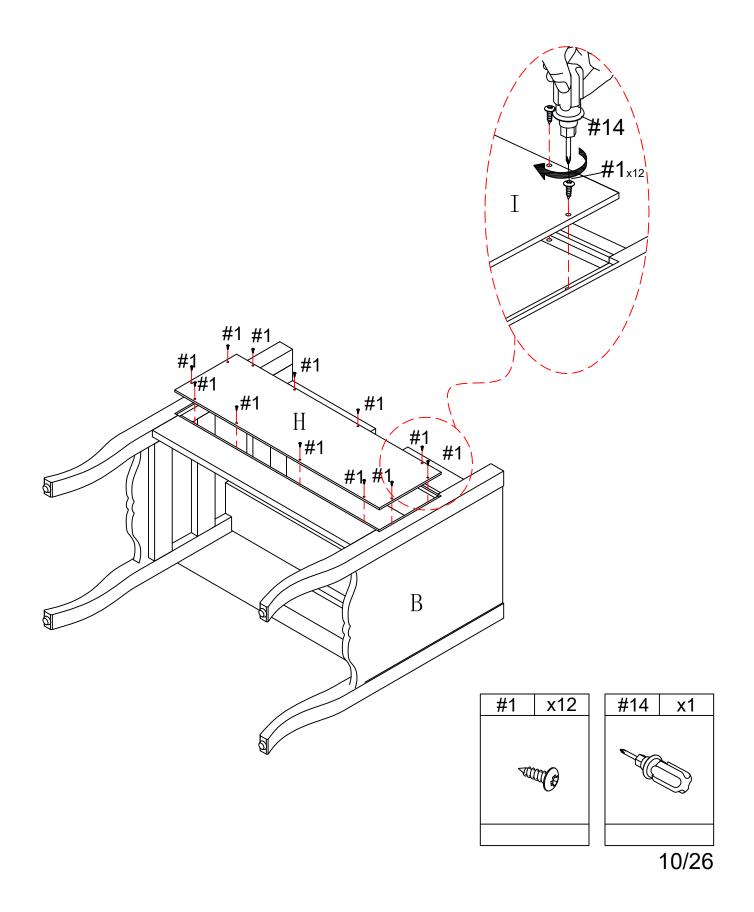


STEP-5

1.insert part (I) into the preassembled step 4,make sure all holes aligned and use screw#2 to attach them , tighten screw #2 with screwdriver #14.

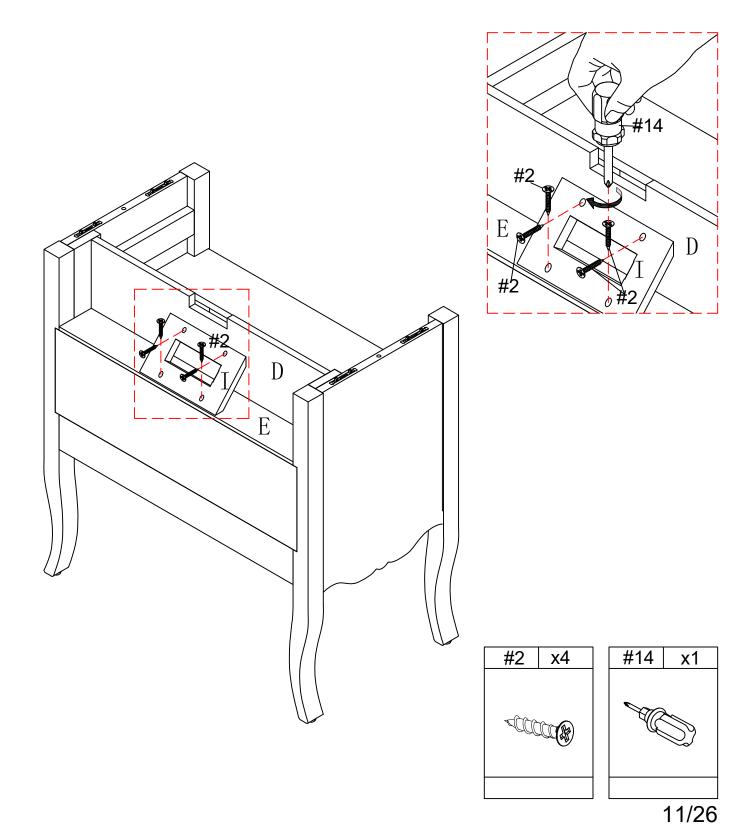


STEP-6


1.insert part #7 into the preassembled step 5,make sure all holes aligned and use screw #3 to attach them , tighten screw #3 with screwdriver#14.

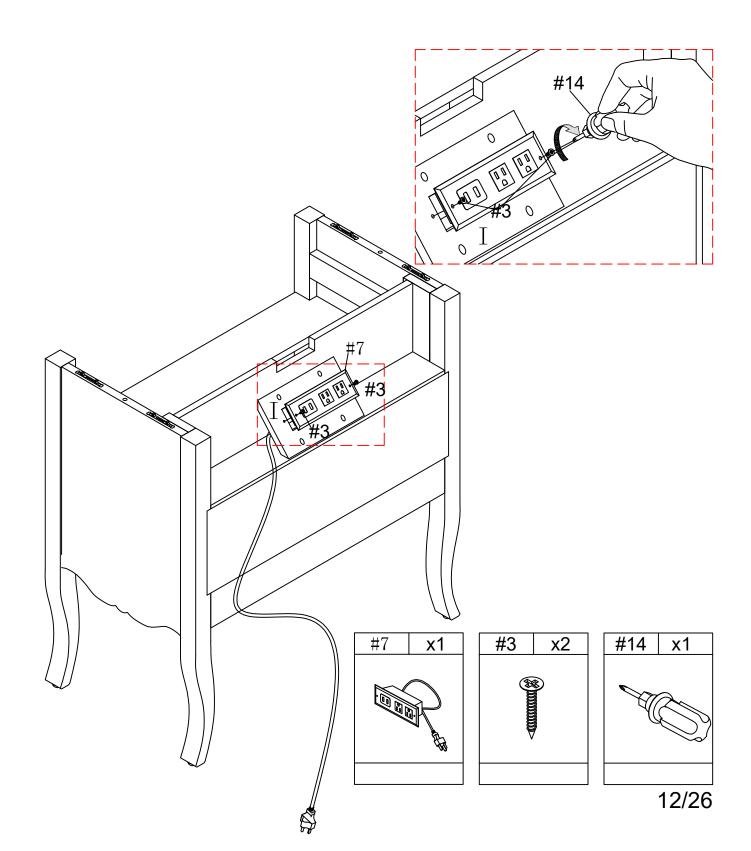

STEP-7


1.Insert top panel (A) into the corresponding hole of preassembled step 6, make sure all holes aligned and use allen key #13 to tighten it as picture show.

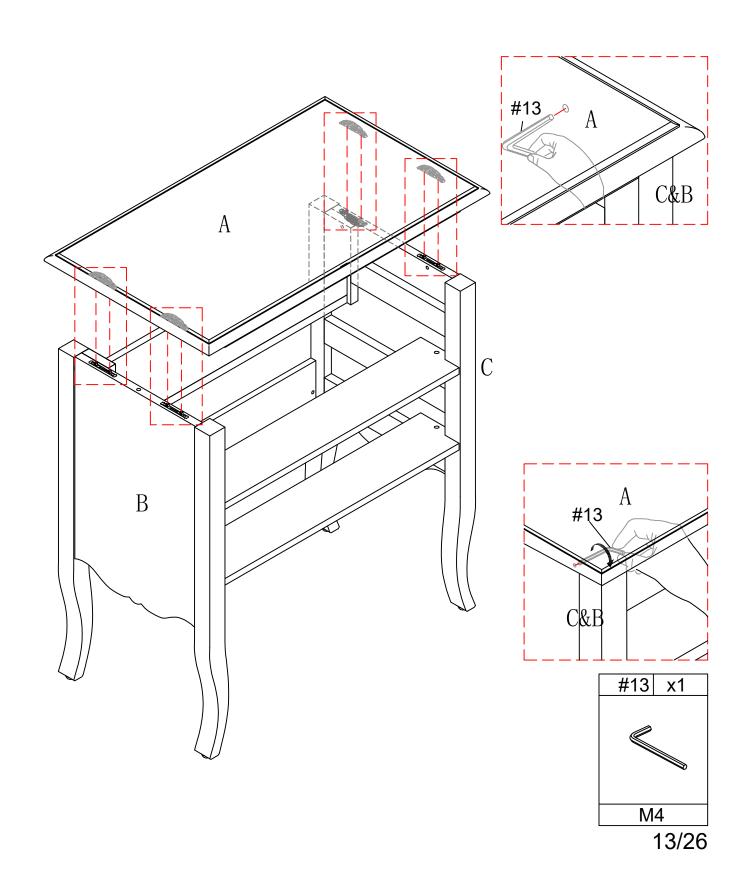

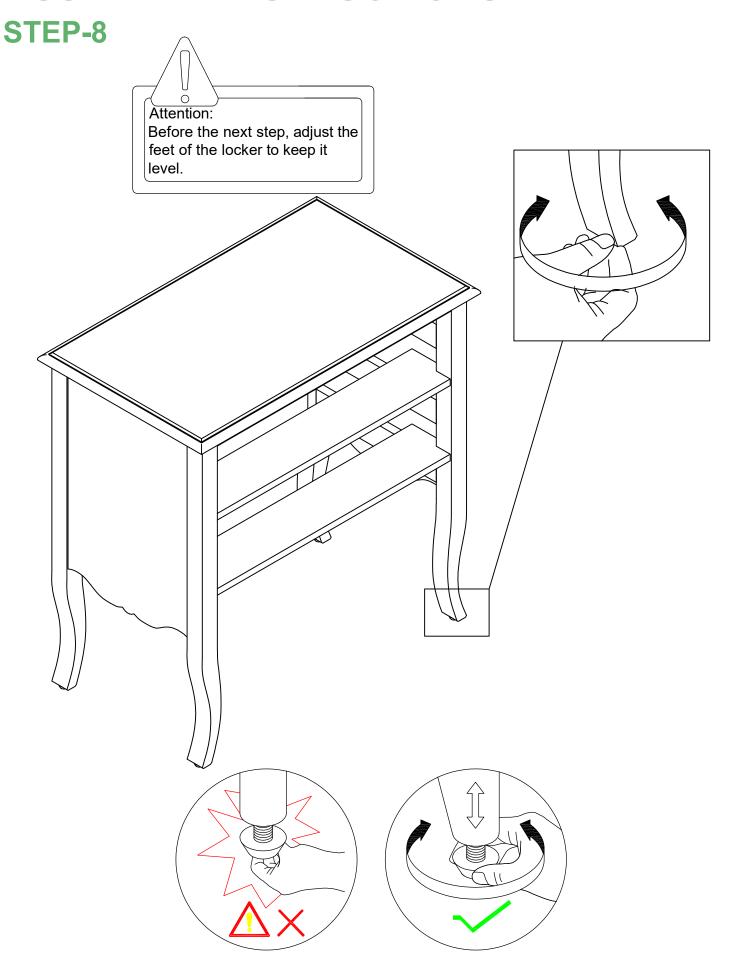

STEP-9


1.Connect part (L&K) to part M using screw #4 and tighten it with screwdriver #14.Slide in the part (N) into the groove in part (L&K). make sure they are also in groove in part (M).

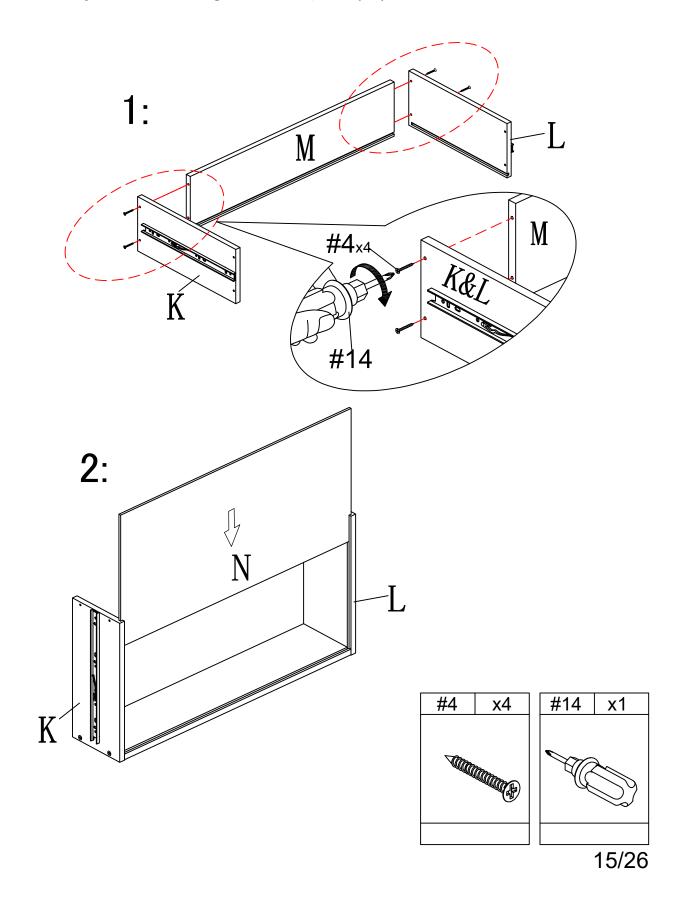


STEP-10

Connect the (J) connection (L&K) using screw #4, and tighten it with screwdriver #14.

Use screw #6 to attach the handle #5 to panel J, tighten screws with screwdriver #14.

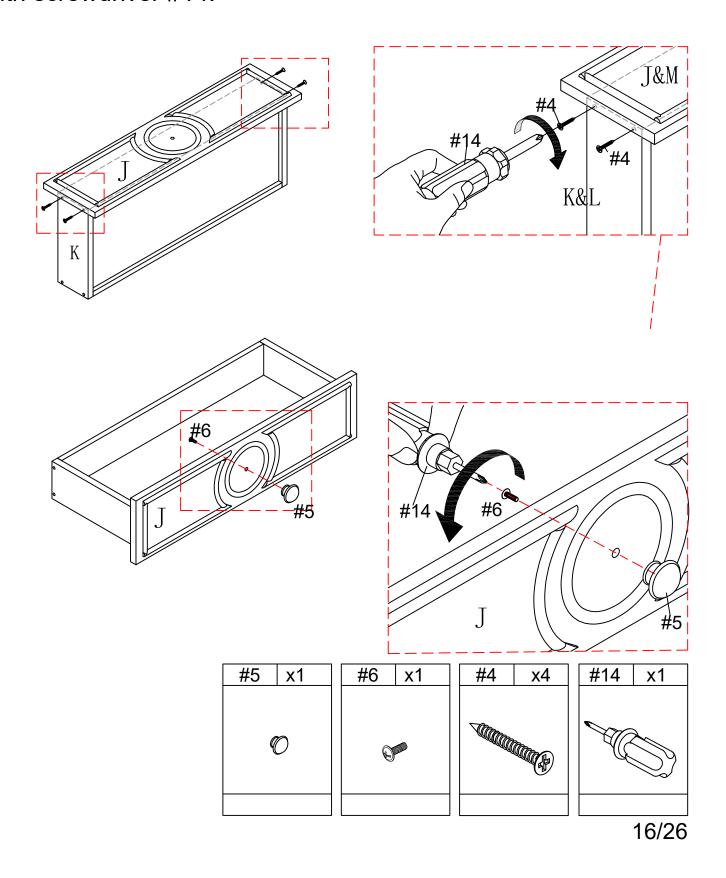


ASSEMBLY INSTRUCTIONSSTEP-11

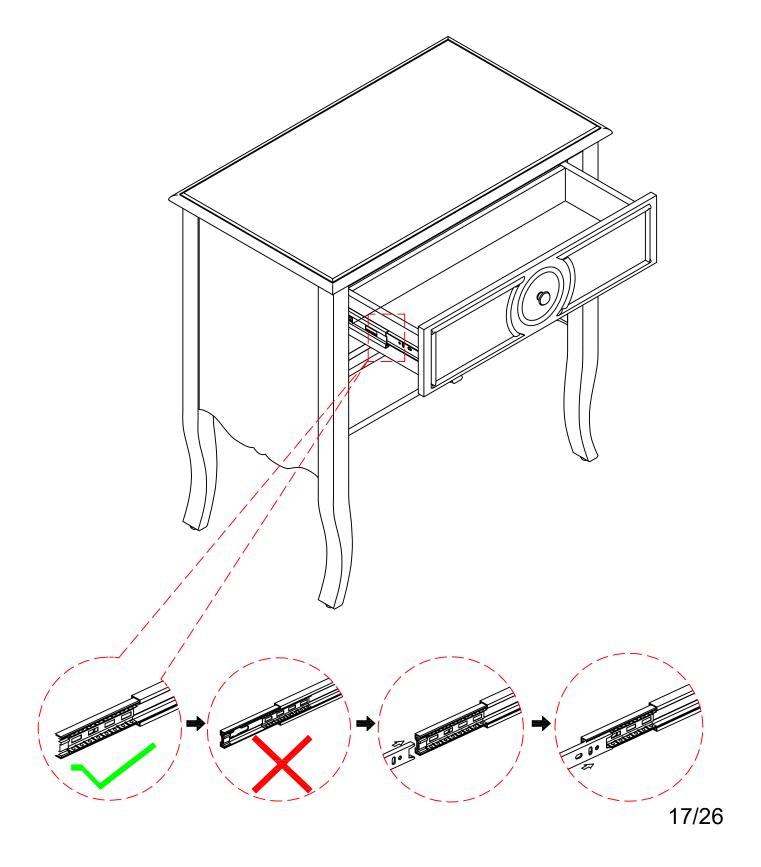

STEP-12


1.Connect part (P&O) to part M using screw #4 and tighten it with screwdriver #14.Slide in the part (Q) into the groove in part (P&O). make sure they are also in groove in part (M).

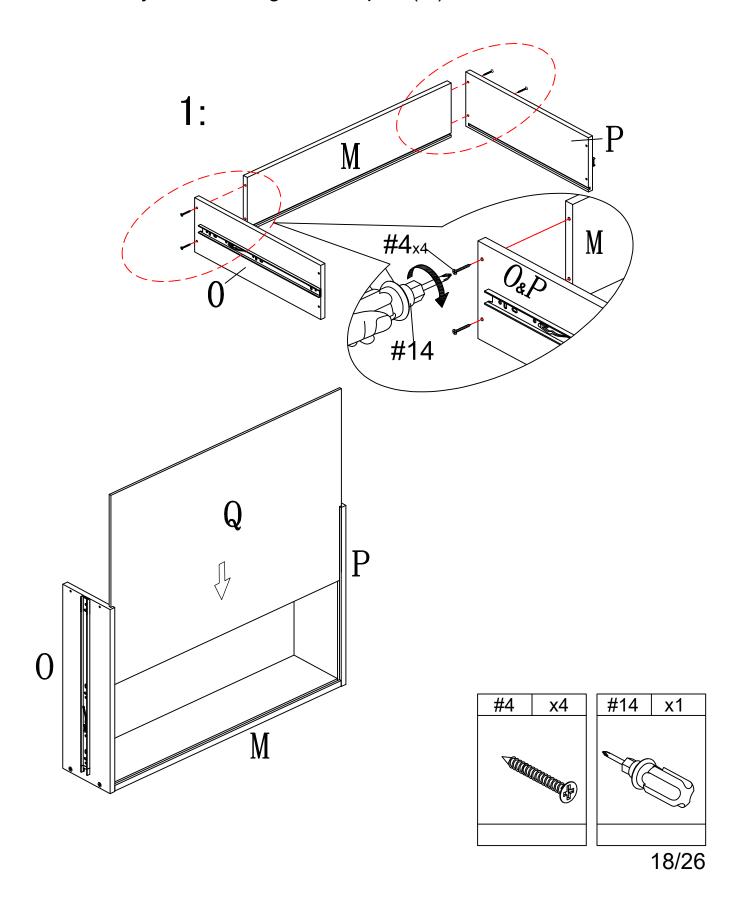

STEP-13


Connect the (J) to part (P&O) using screw #4, and tighten it with screwdriver #14.

Use screw #6 to attach the handle #5 to panel J, tighten screws with screwdriver #14.

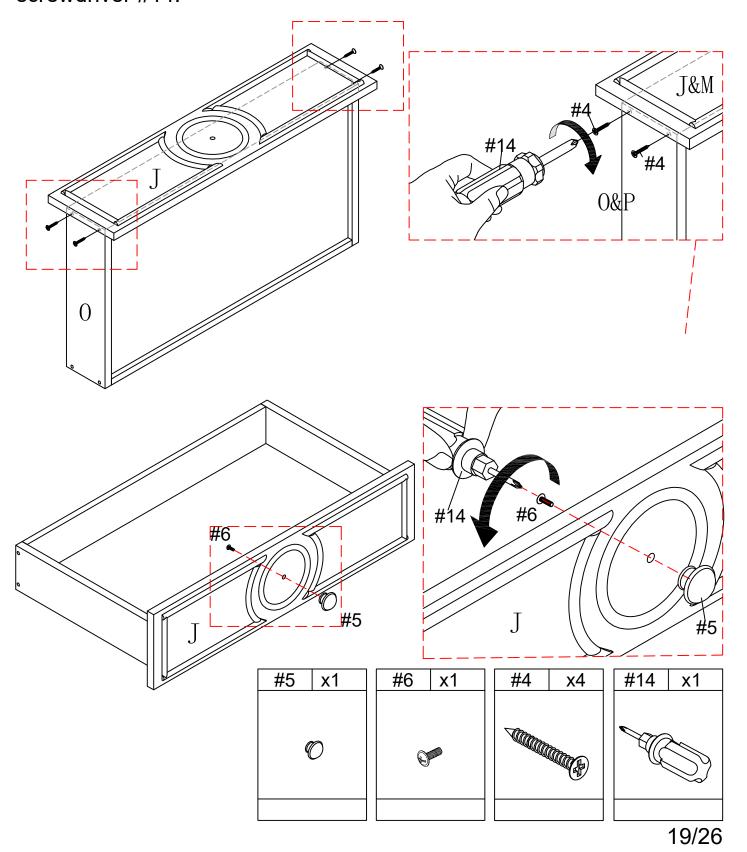


ASSEMBLY INSTRUCTIONSSTEP-14


1.Connect part (T&S) to part U using screw #4 and tighten it with screwdriver #14.Slide in the part (Q) into the groove in part (T&S). make sure they are also in groove in part (U).

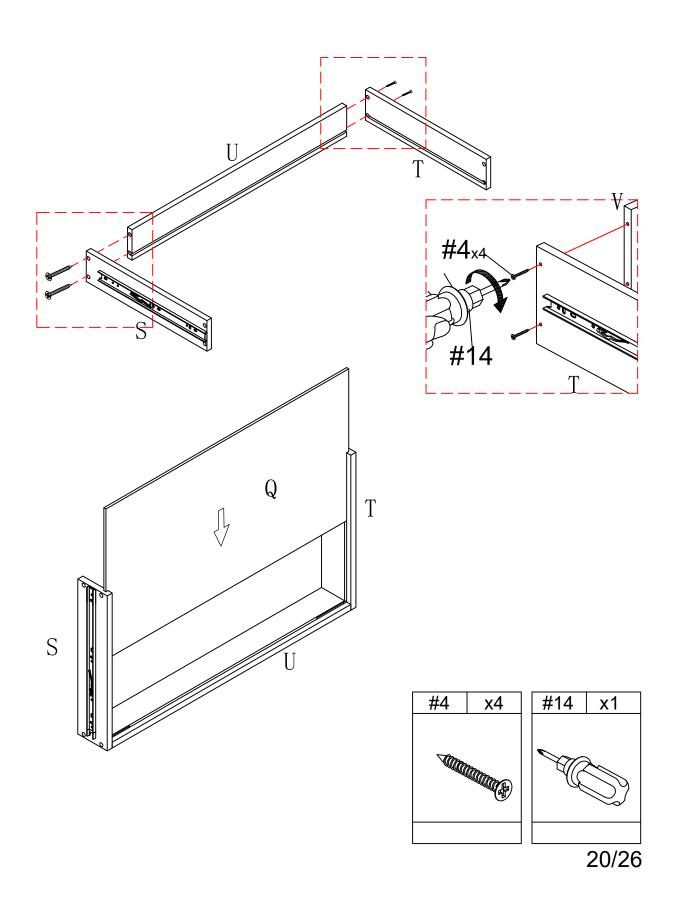


STEP-15


1. Connect the (R) connection (T&S) using screw #4, and tighten it with screwdriver #14.

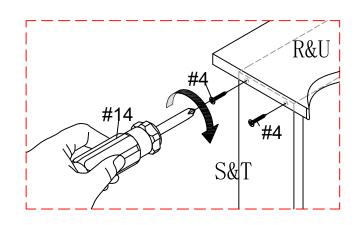


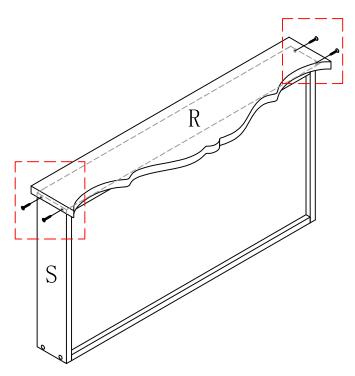


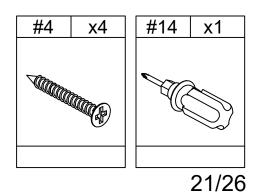

ASSEMBLY INSTRUCTIONSSTEP-16

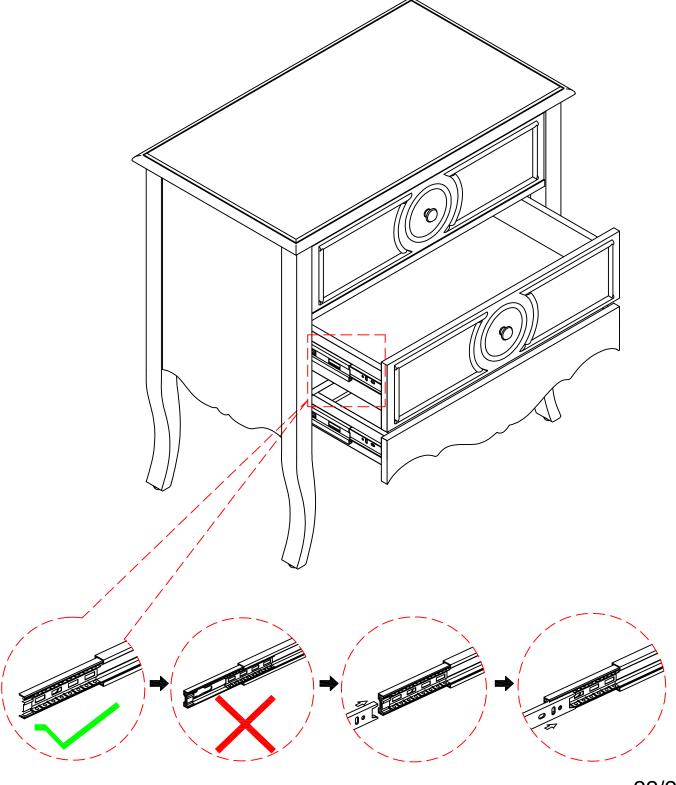


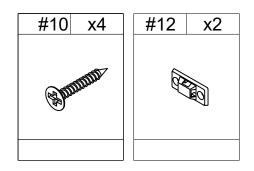


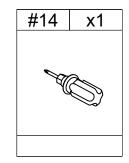


STEP-17

1.Use screw #10 to attach part #12 to pre-assemble unit at step 16 , tighten screws with screwdriver #14.

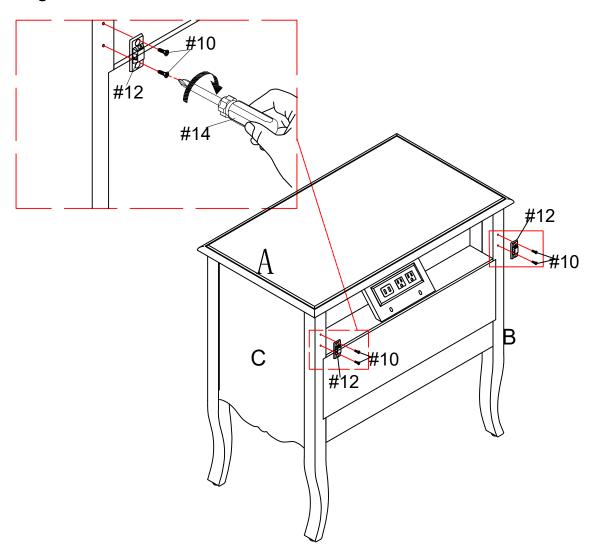


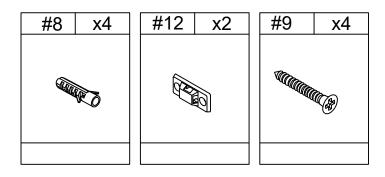


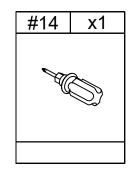


STEP-18

- 1.Install the anti-collapse device.
- 2.Mark the position on the wall, that corresponds to the location of part#12 on the of side panel (B&C); Drill and insert the expandable screw #8 by hammer.
- 3.Assemble the part #12 to the wall. Align the hole in the part #12 with the expandable screw #8, use screw #9 to attach it and tighten by screwdriver#14.

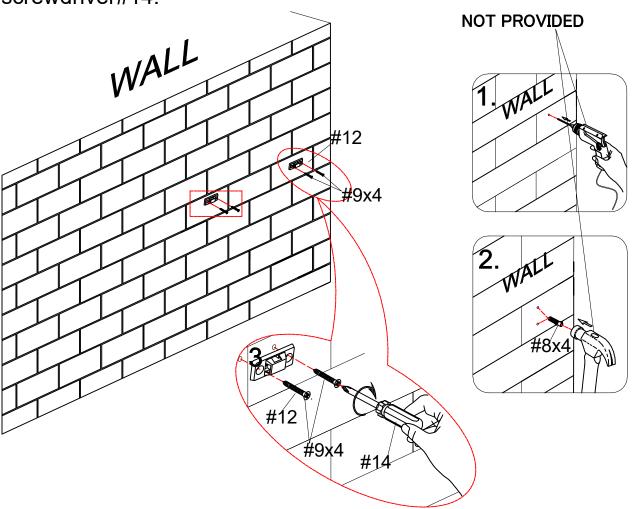

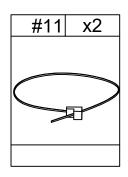

STEP-19

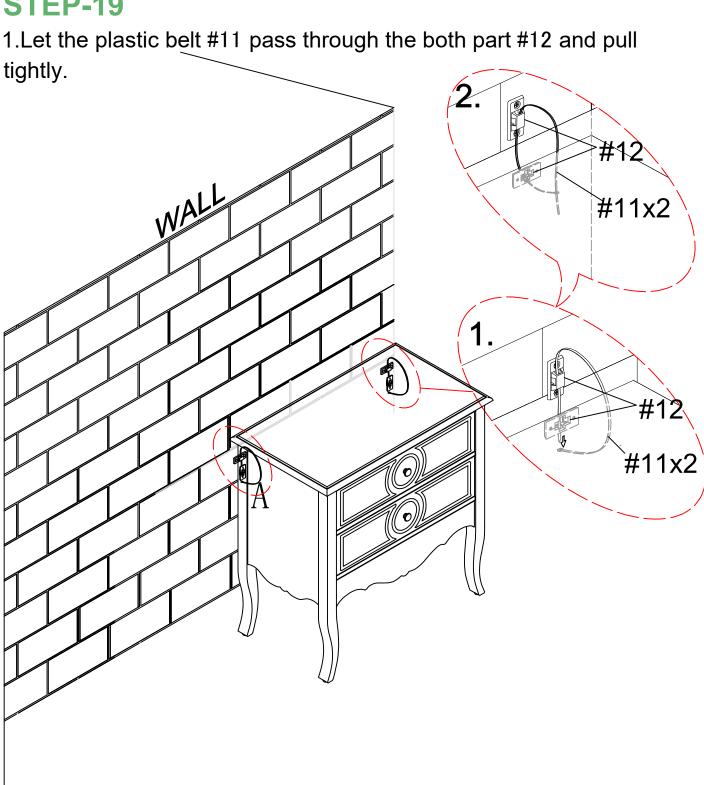

WARRANTY

- 1.We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
- 2.We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
- 3.Replacement parts by purchasing them with our company if they are available.

Are you having difficulty
With assembly? Missing parts?
Please send email with your order No to
customerservice@hulalahome.com

For return, please check the return policy with the retailer or market place you bought from.

Appreciate your purchasing from us. Pop up your life by our furniture piece!