

ITEM NO.SBLS0980

NOTE:

This brochure contains IMPORTANT safty info. Please read and keep for future reference.




MAINTAINANCE AND WARNING

- 1.Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soap with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight, material will possibly fade over time.
- 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protected by a padded barrier.
- 6.Not for commercial use, only for residential use.






EXPLOSIVE VIEW

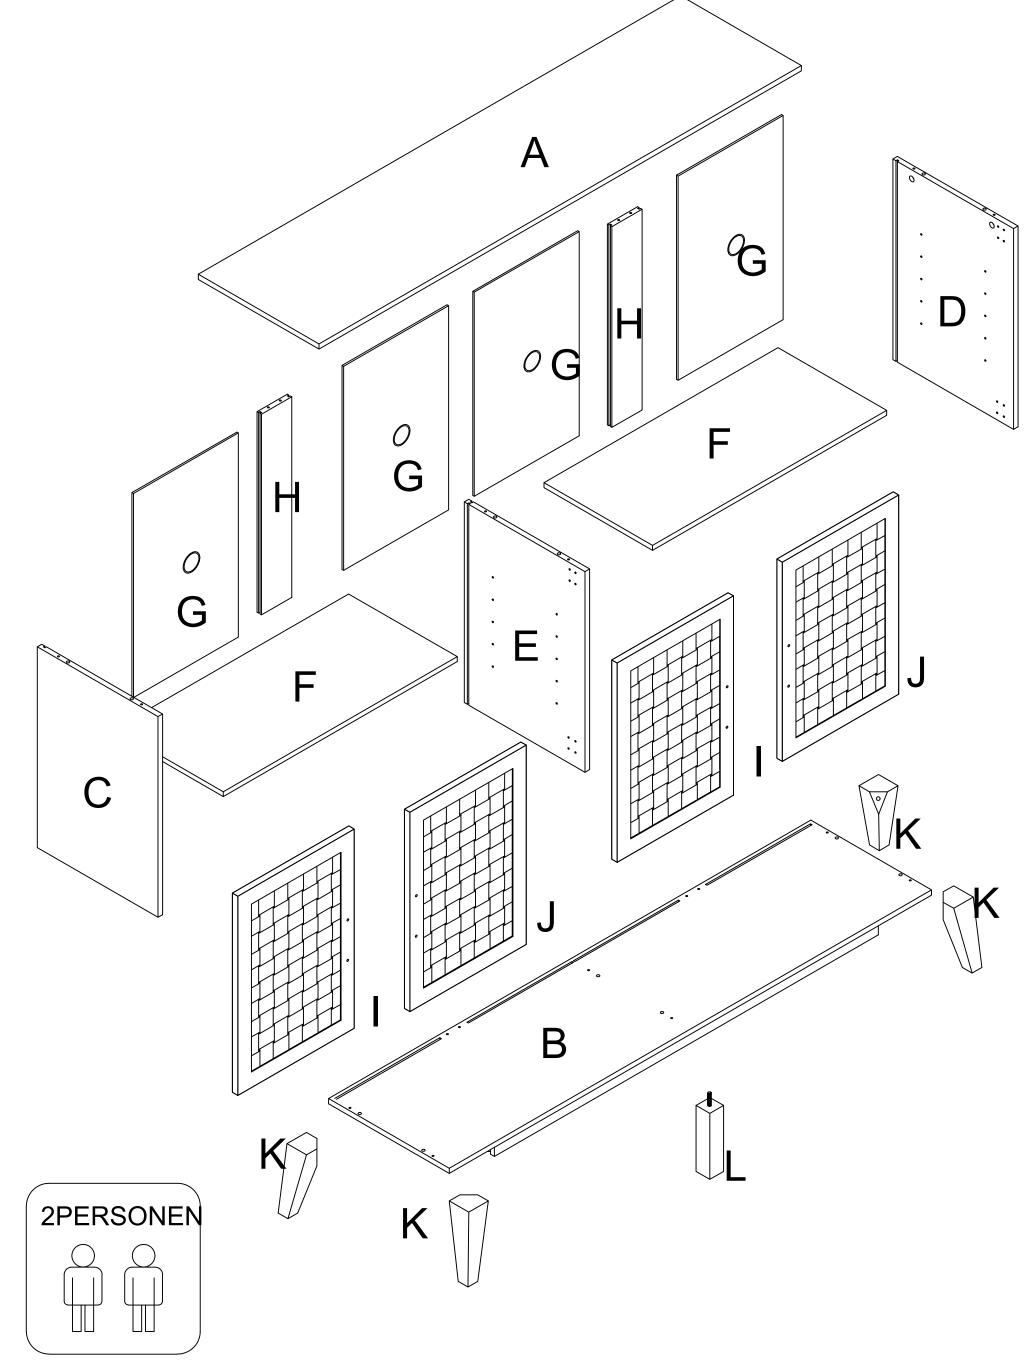




PARTS LIST

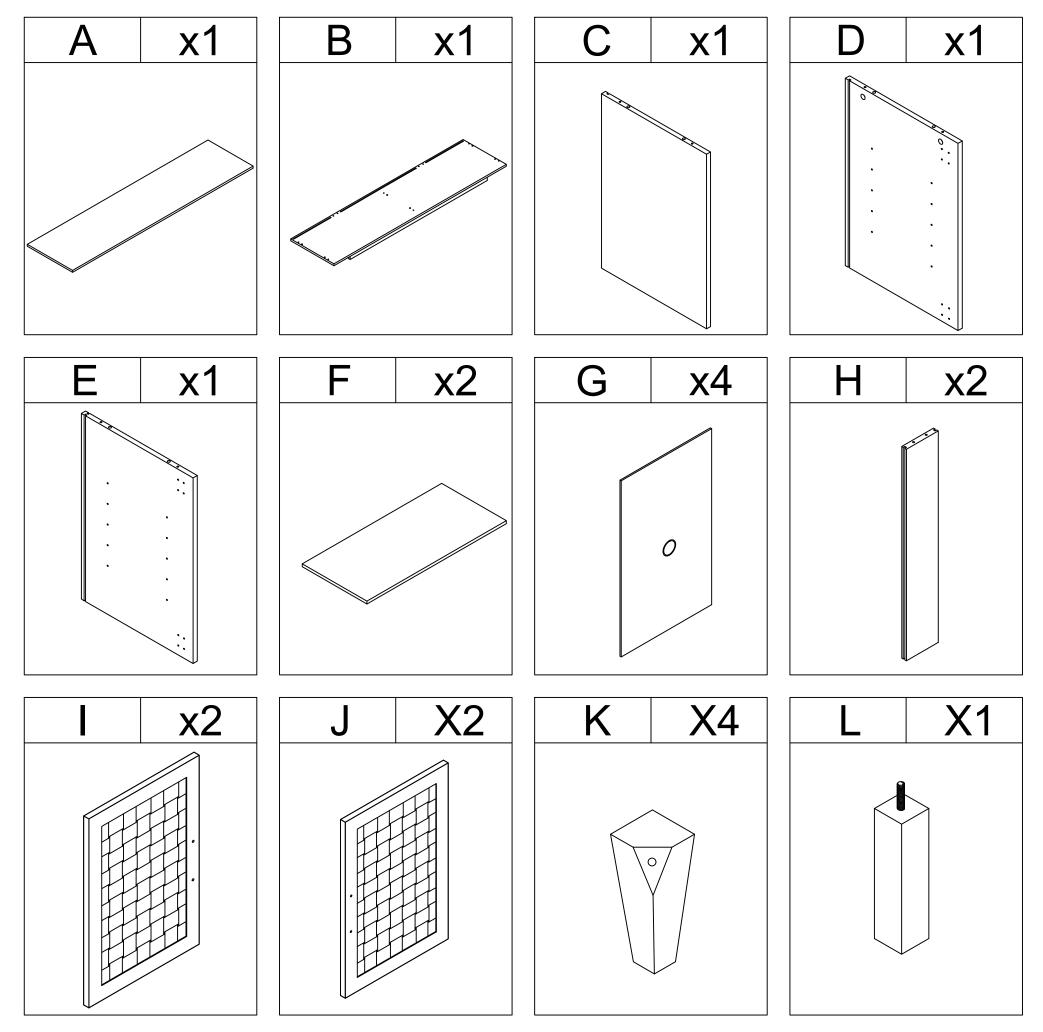





HARDWARE LIST

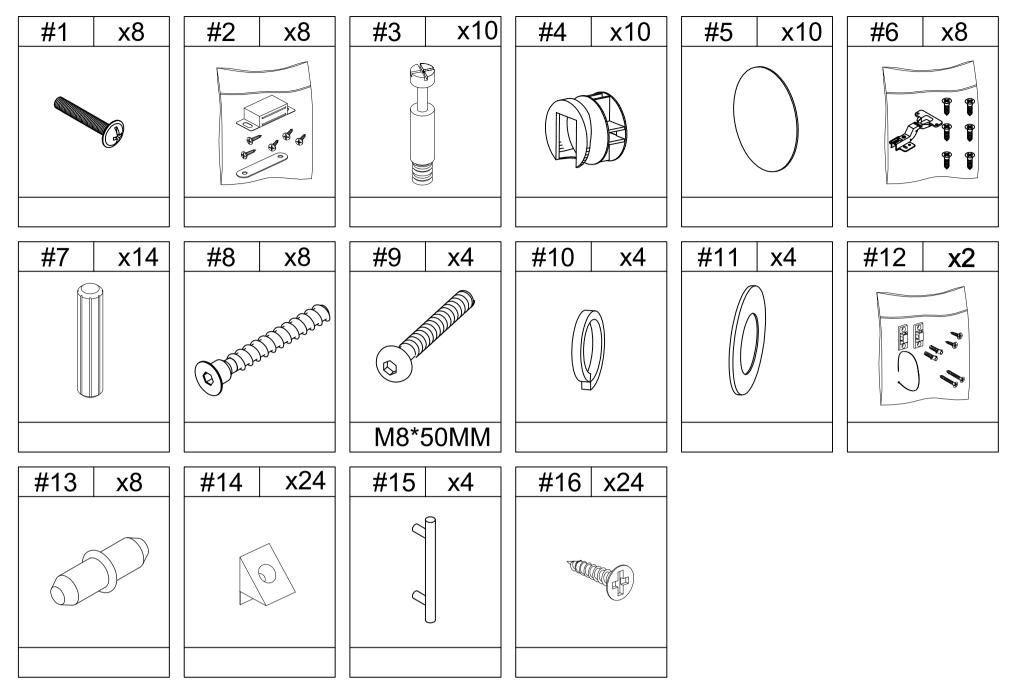


TOOL LIST

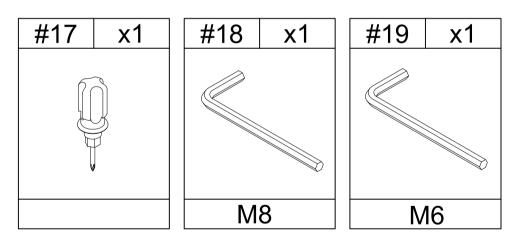

HARDWA **SPARE LIST**

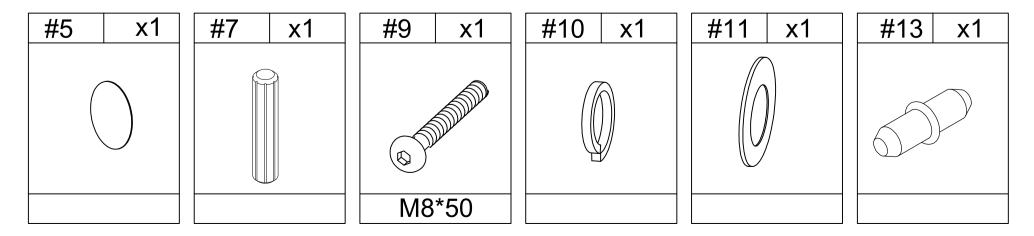

HARDWARE SPARE LIST

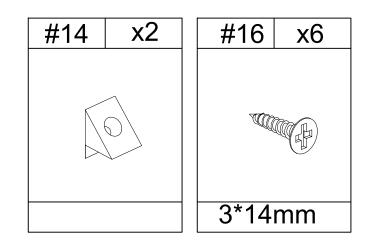




STEP-1


Prepare for part A. Align the holes in part A, insert wooden dowel #7 by hand, tighten with screwdriver #17 tighten $#3_{\circ}$


Use bolt #2 to attach Magnetic device #2 to top panel (A), tighten bolts with screwdriver #17.

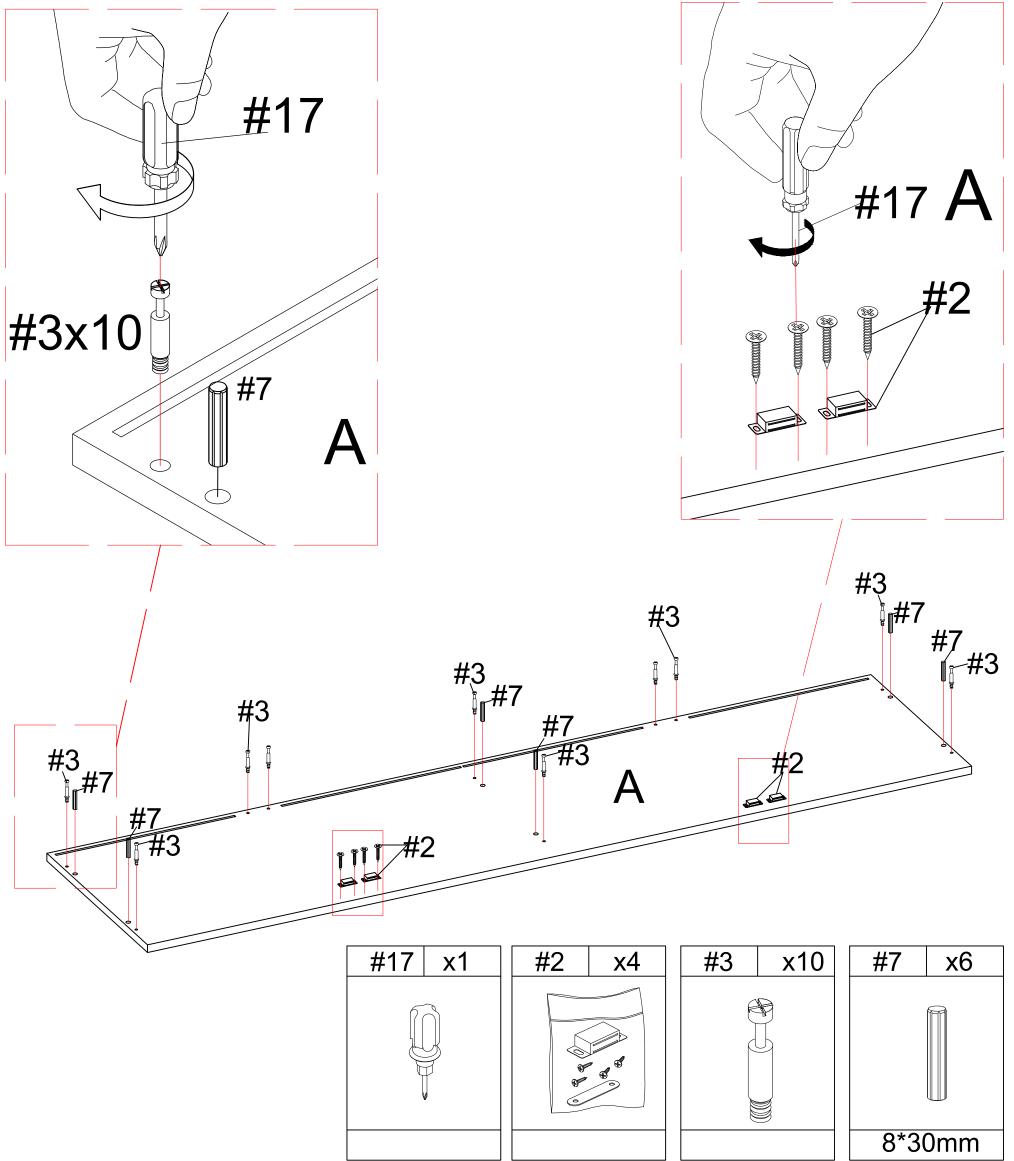

STEP-2

Connect the part A with part C&D&E. align the hole in the part C&D&E , insert the bolt #3 and wooden dowel #7 in part A into part C&D&E. insert cam bolt #4 into the corresponding hole of side panel C&D&E, and tighten the nuts #4 with a screwdriver #17. After installation, cover the screw holes with #5. Make sure the groove is in same side as picture show.

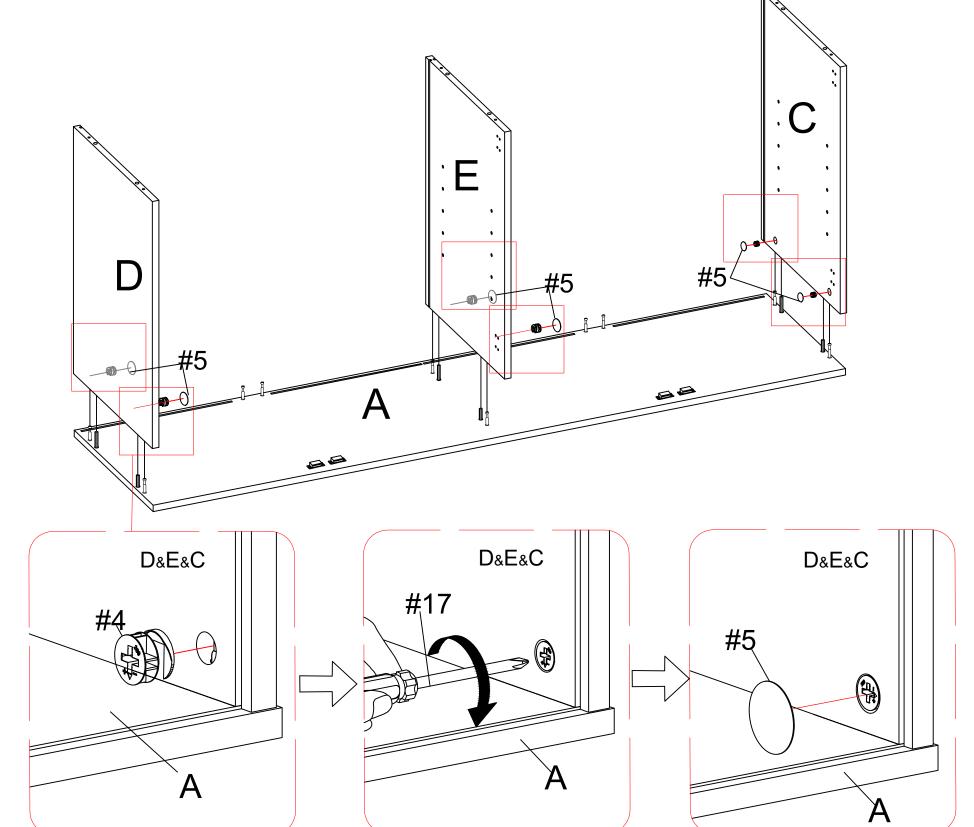


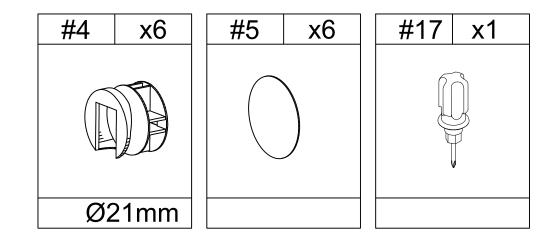




STEP-3

Connect the part A with part H. align the hole in the part H, insert the bolt #3 in part A into part H. insert cam bolt #4 into the corresponding hole of side panel H, and tighten the nuts #4 with a screwdriver #17. After installation, cover the screw holes with #5. Make sure the groove is in same side as picture show.

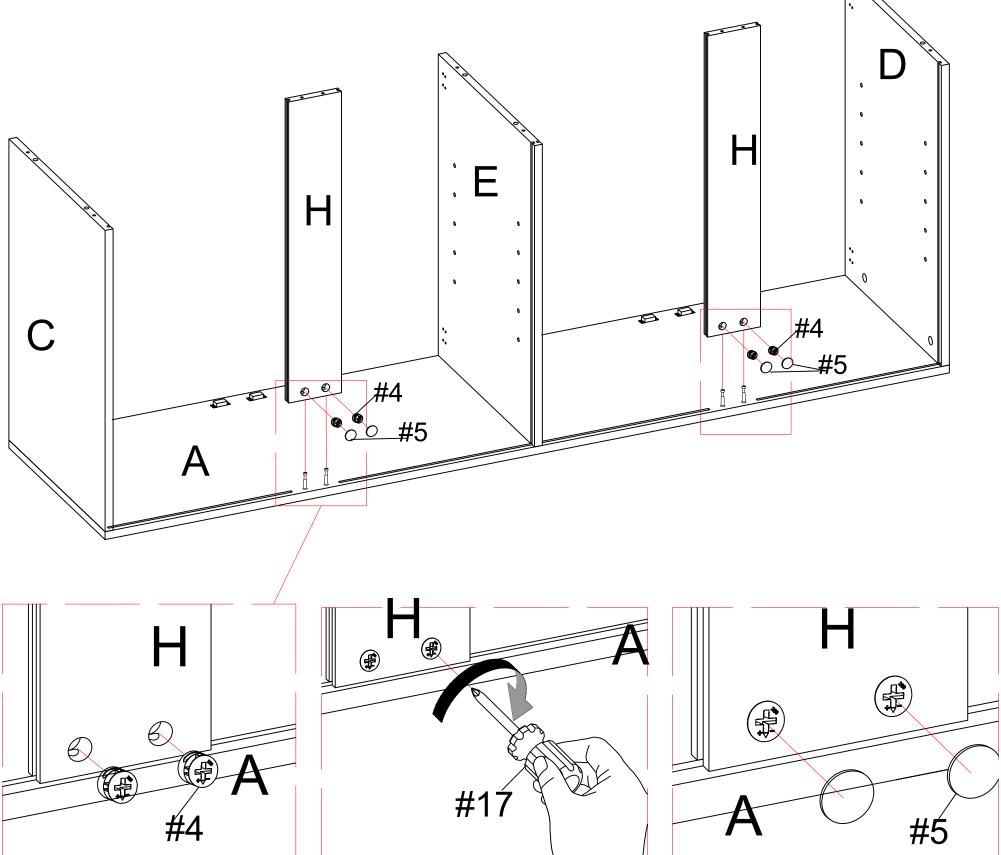


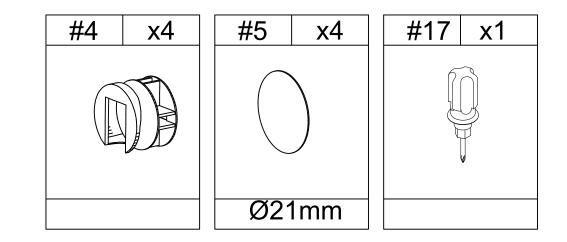



STEP-4


Manually insert #7 wooden dowels (C&D&E&H), slide in the part G into the groove in part D,H and H,E and E,H and H,C . make sure they are also in groove in part A.

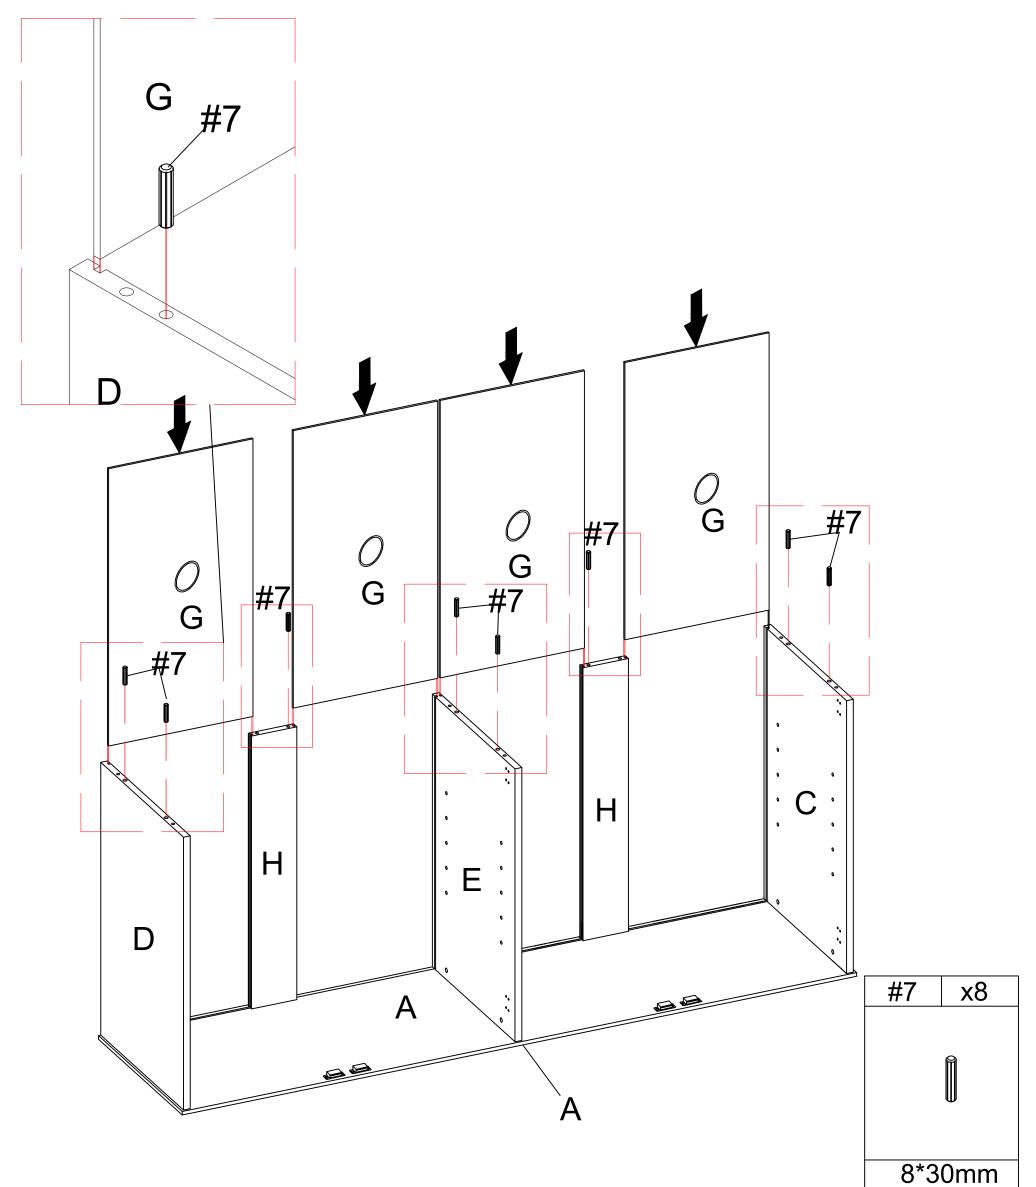



STEP-5


Use bolt #2 to attach Magnetic device #2 to bottom panel (B) , tighten bolts with screwdriver #17.

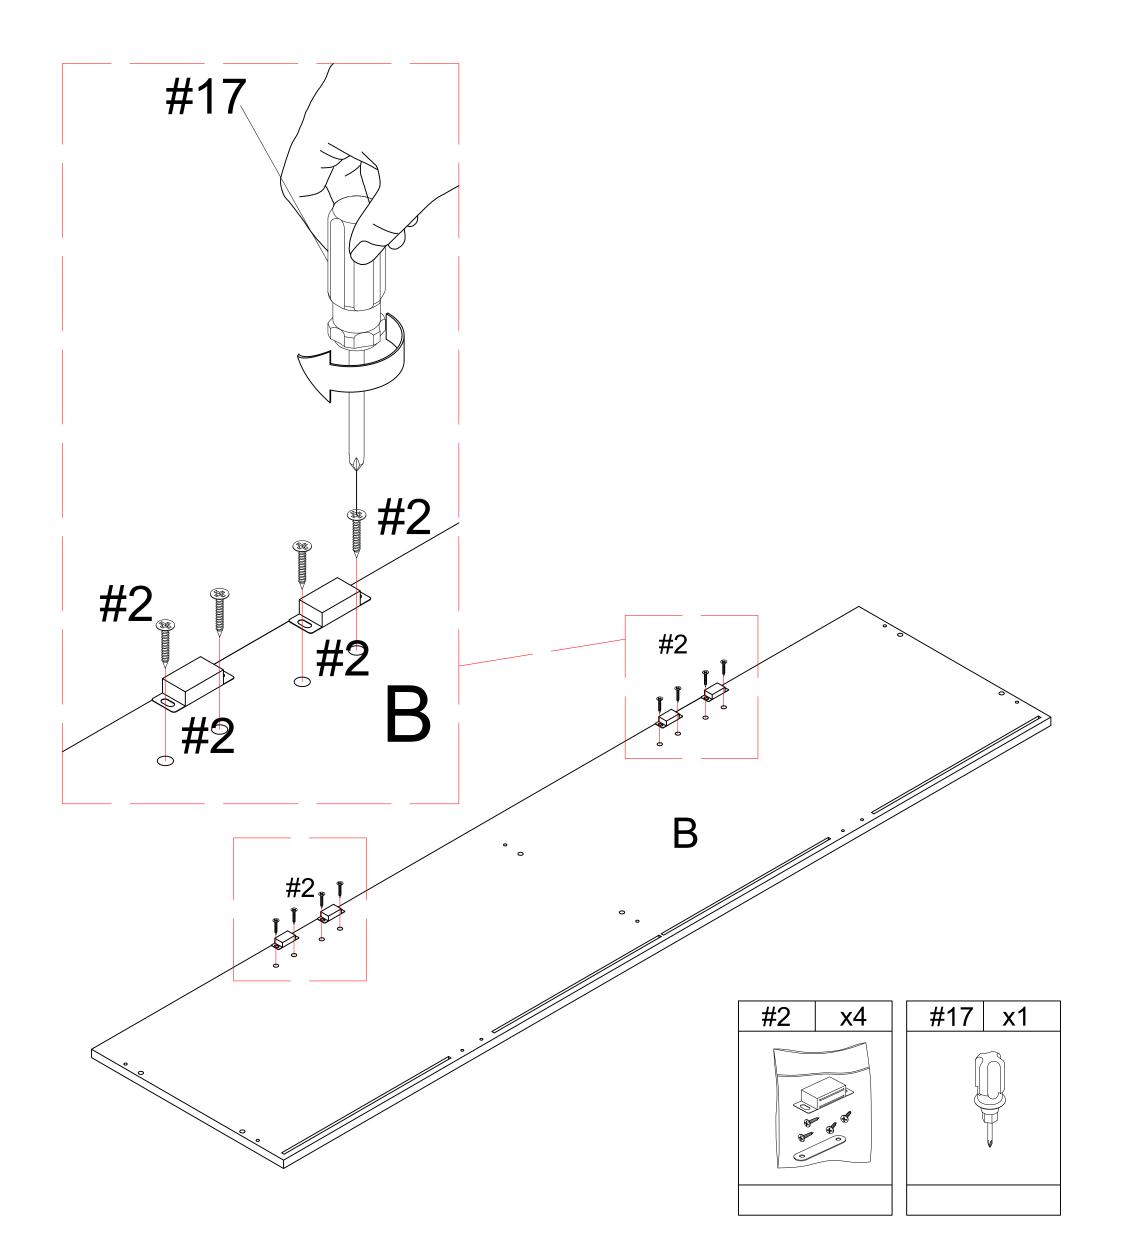




Connect the part B the pre-assembled unit in step 4.


Then align the holes in part B,Insert screw #8 and push it down so that it connects to parts C&D&E&H. Next,and tighten the screw #8 with an Allen key #19.

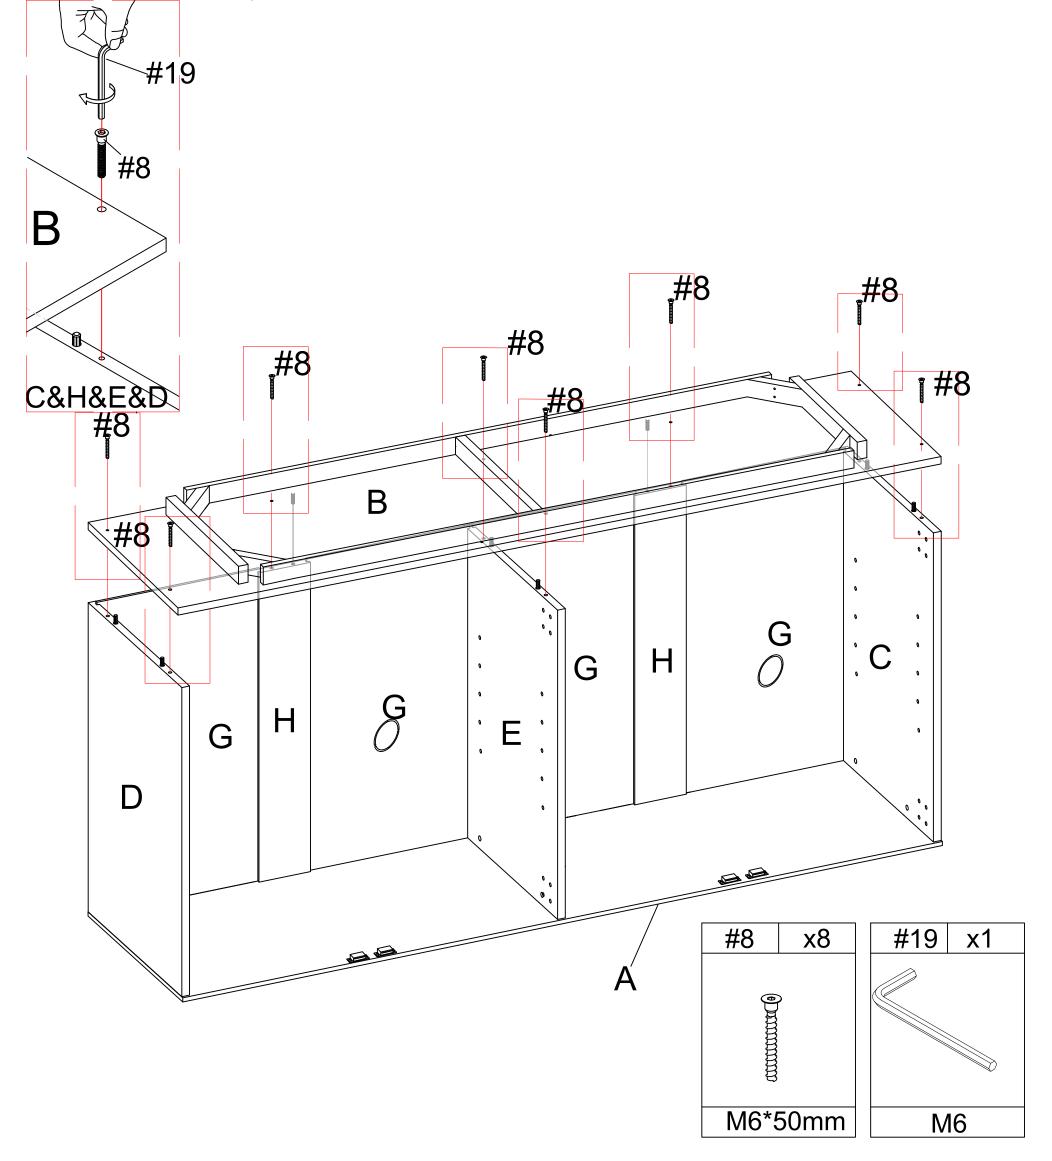


1.Insert gasket #10 and #11 in sequence into screw #9, install leg (K) on of bottom panel (B), ensure the corresponding holes are aligned and fix with screw #9, then tighten the screw with an Allen key #18.

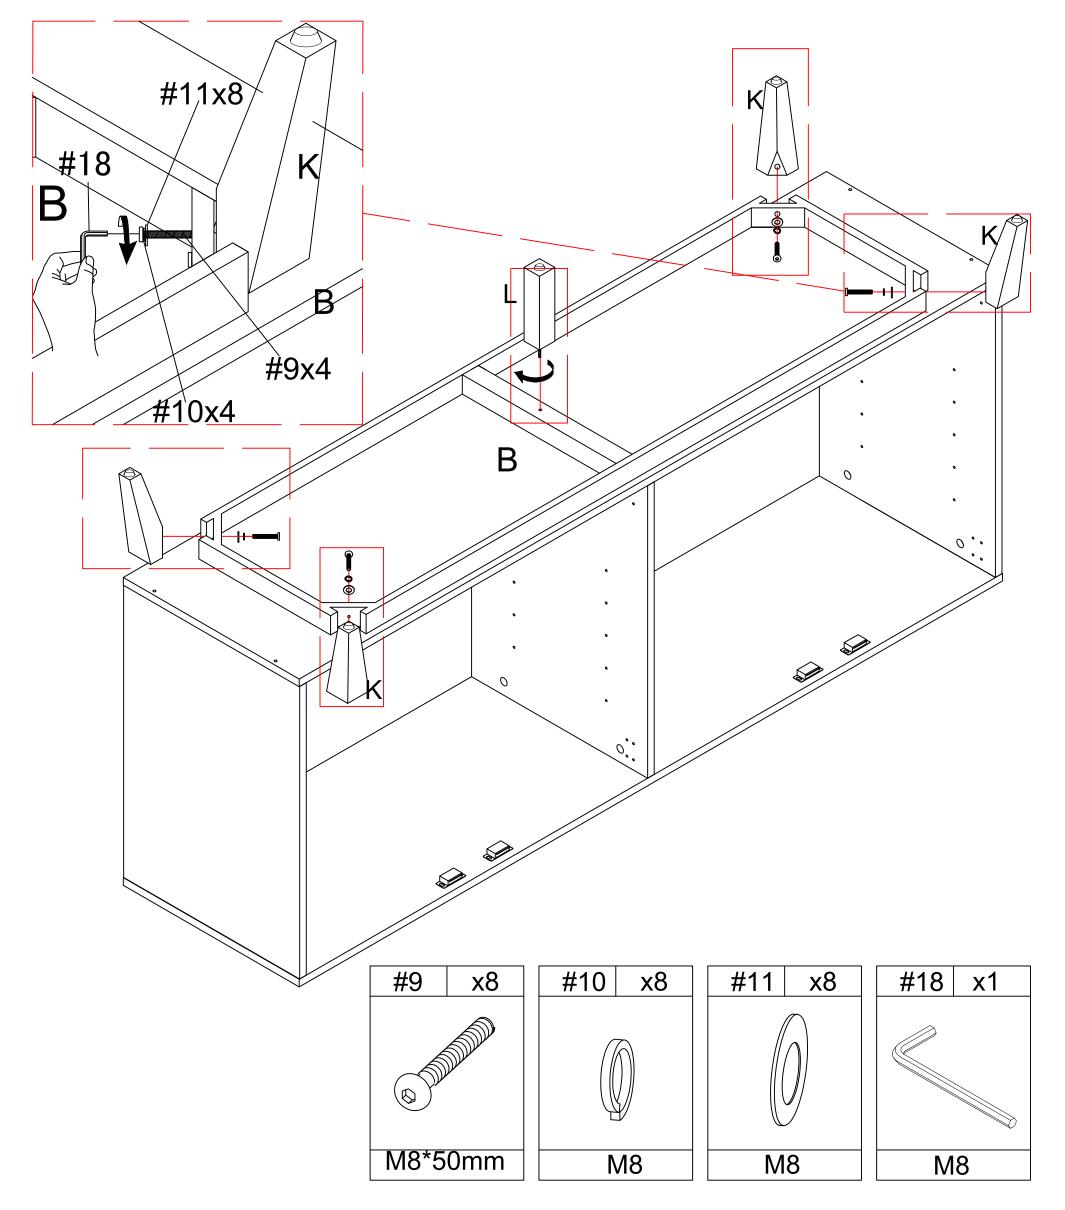



Insert hardware #14 into part (G) as shown, screw in screw #16 using screwdriver #17 and tighten fully.

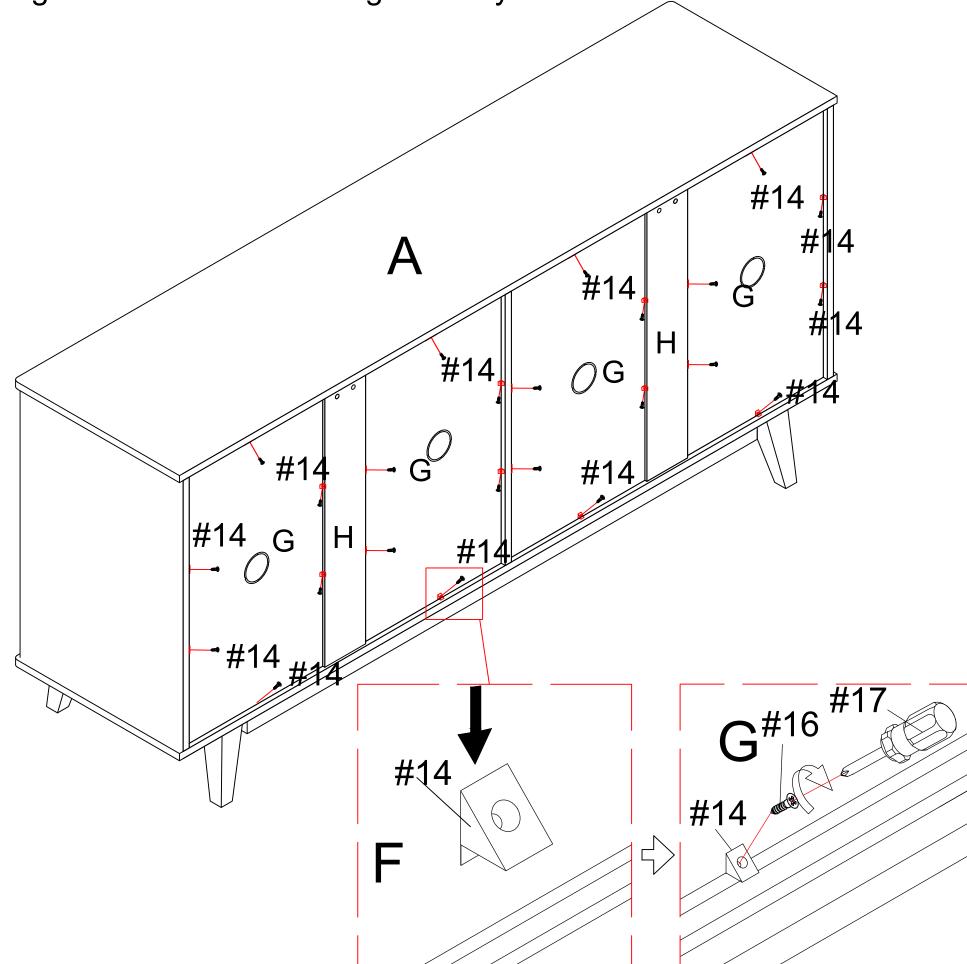


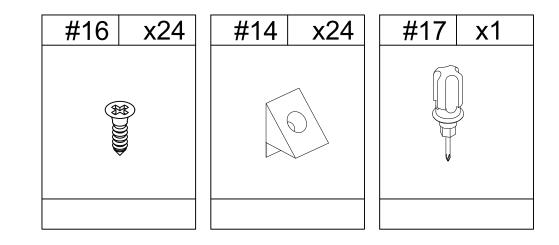

14/28

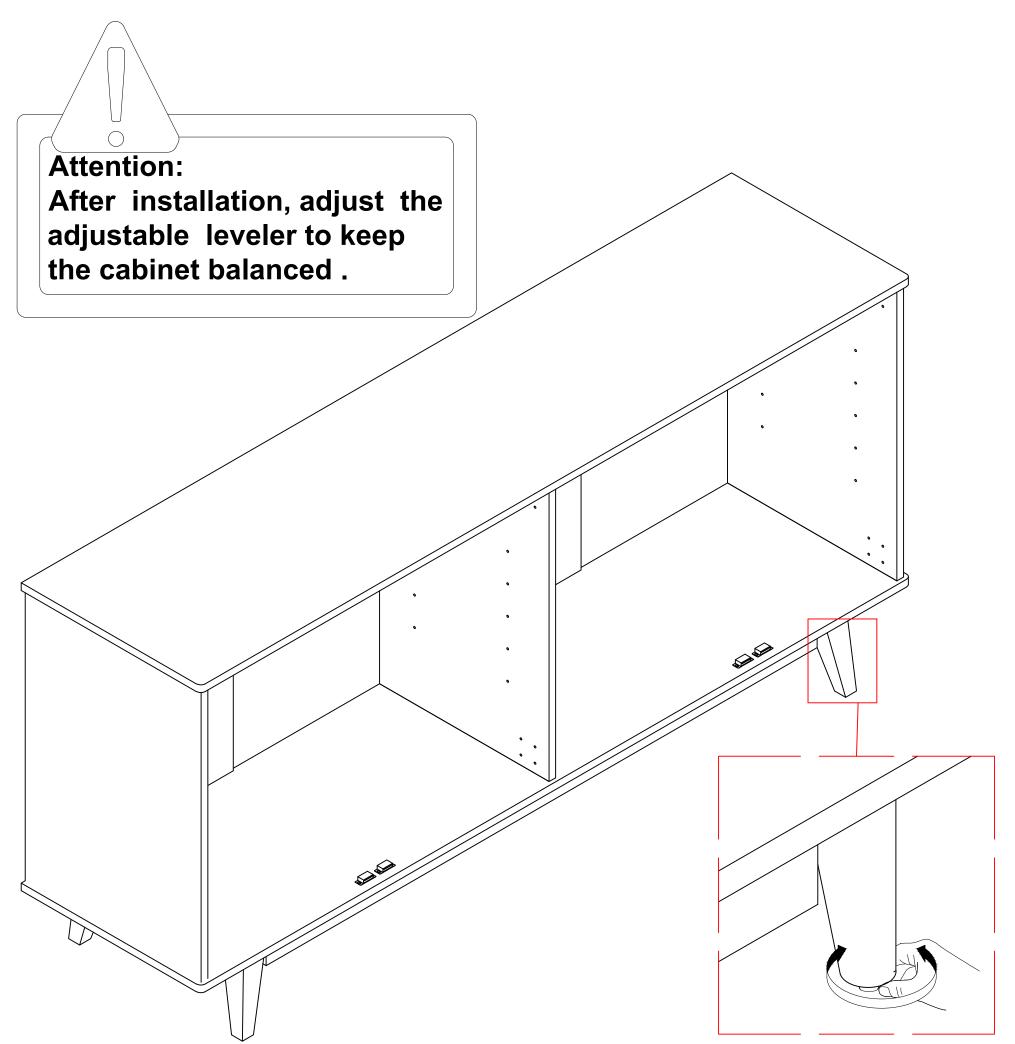

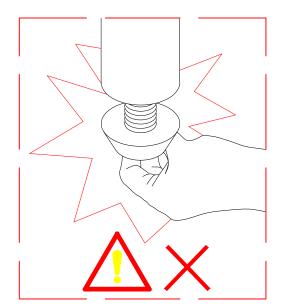


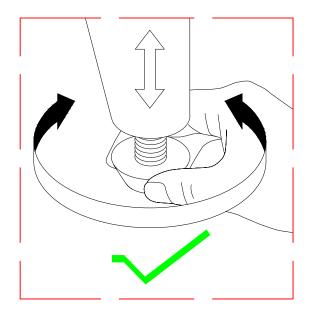


STEP-10

1.Use screw #16 to attach hinge #6 to door (I&J), tighten screw #2 with screwdriver #17.

Use bolt #2 to attach Magnetic device #2 to door (I&J), tighten bolts with screwdriver #17.

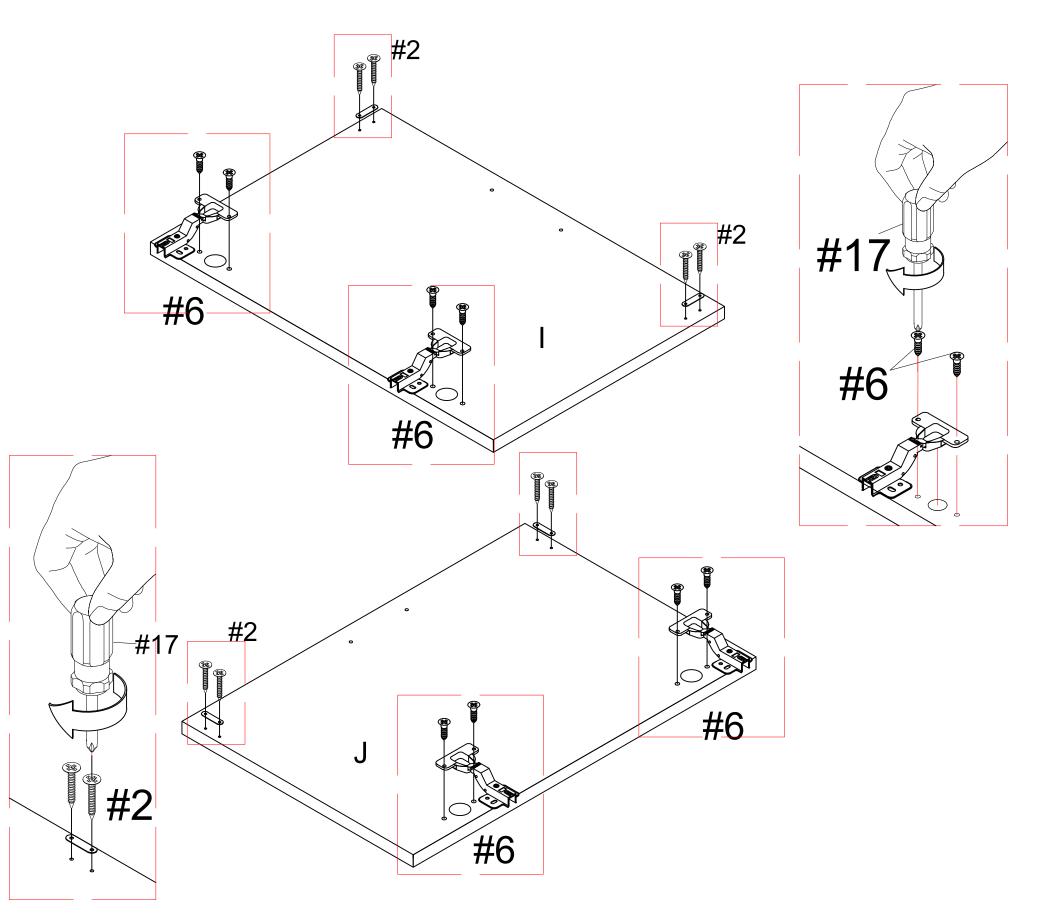


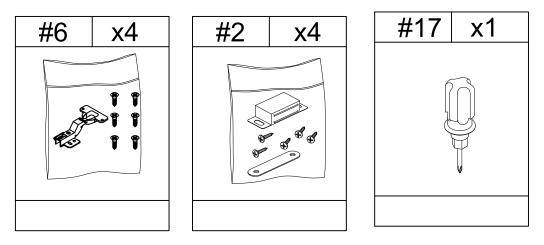

16/28

STEP-11


Use screw #16 to attach left door (I) and right door (J) to pre-assemble unit at step 9 ,tighten screw #16 with screwdriver #17 .

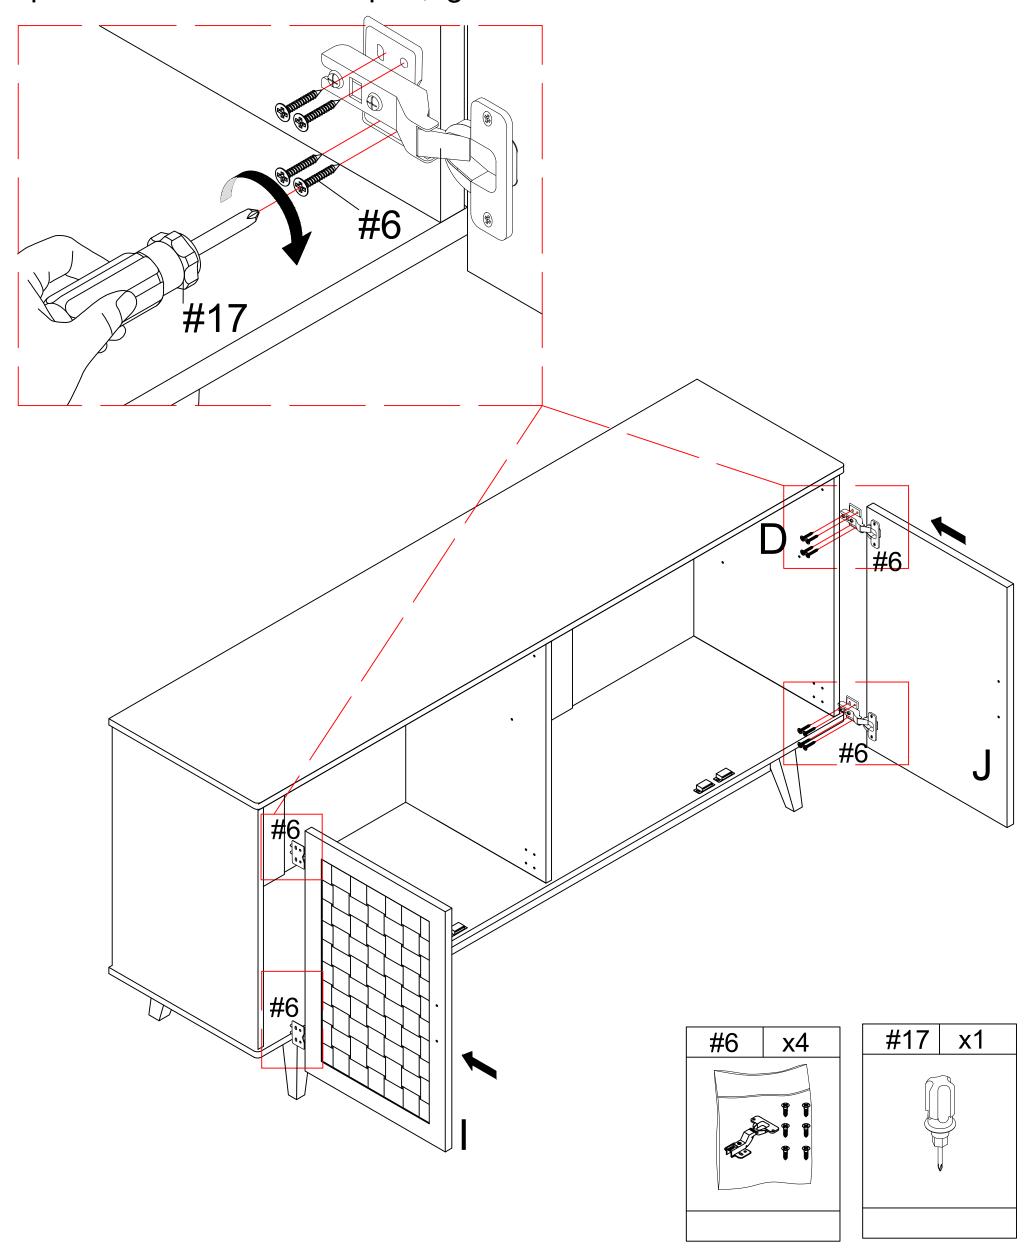


STEP-12

1.Use screw #16 to attach hinge #6 to door (I&J), tighten screw #16 with screwdriver #17.

Use bolt #2 to attach Magnetic device #2 to door (I&J), tighten bolts with screwdriver #17.

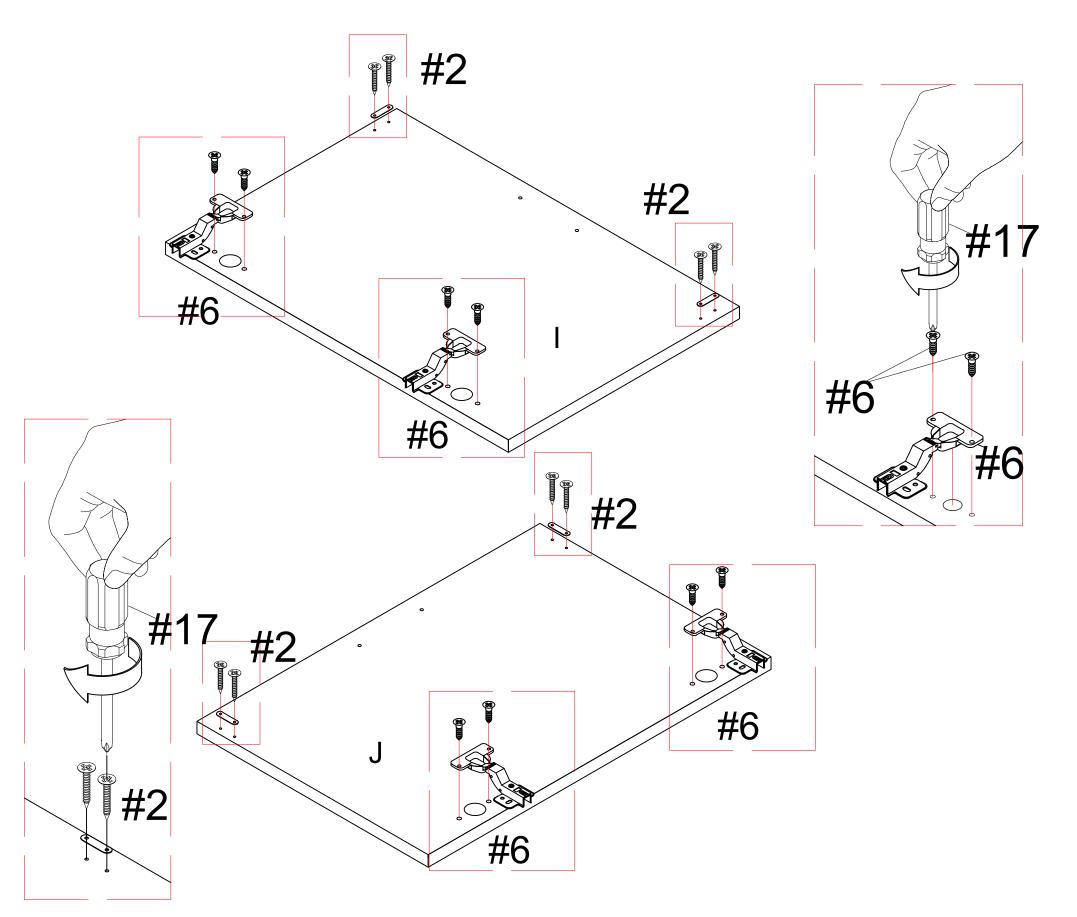


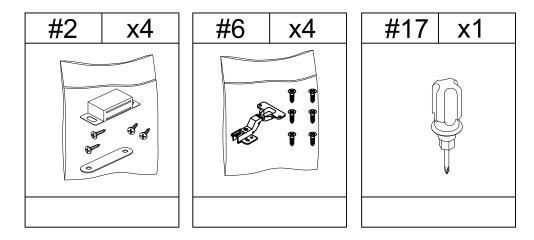


18/28

STEP-13

Use screw #16 to attach middle door (I) pre-assemble unit at step 11, tighten screw #16 with screwdriver #17.

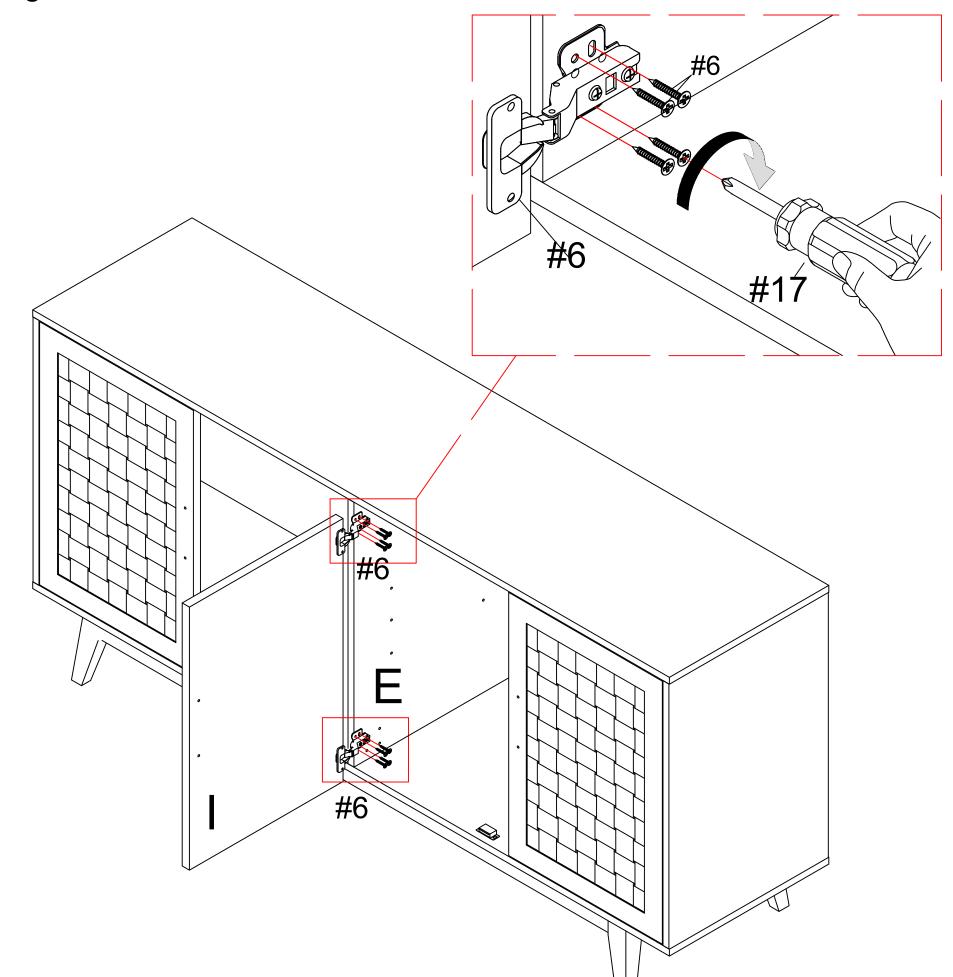


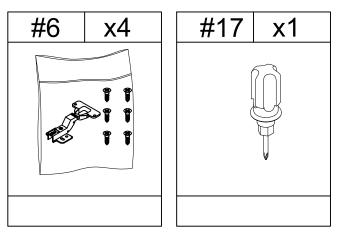




STEP-14

Use screw #16 to attach middle door (J) pre-assemble unit at step 13, tighten screw #16 with screwdriver #17.

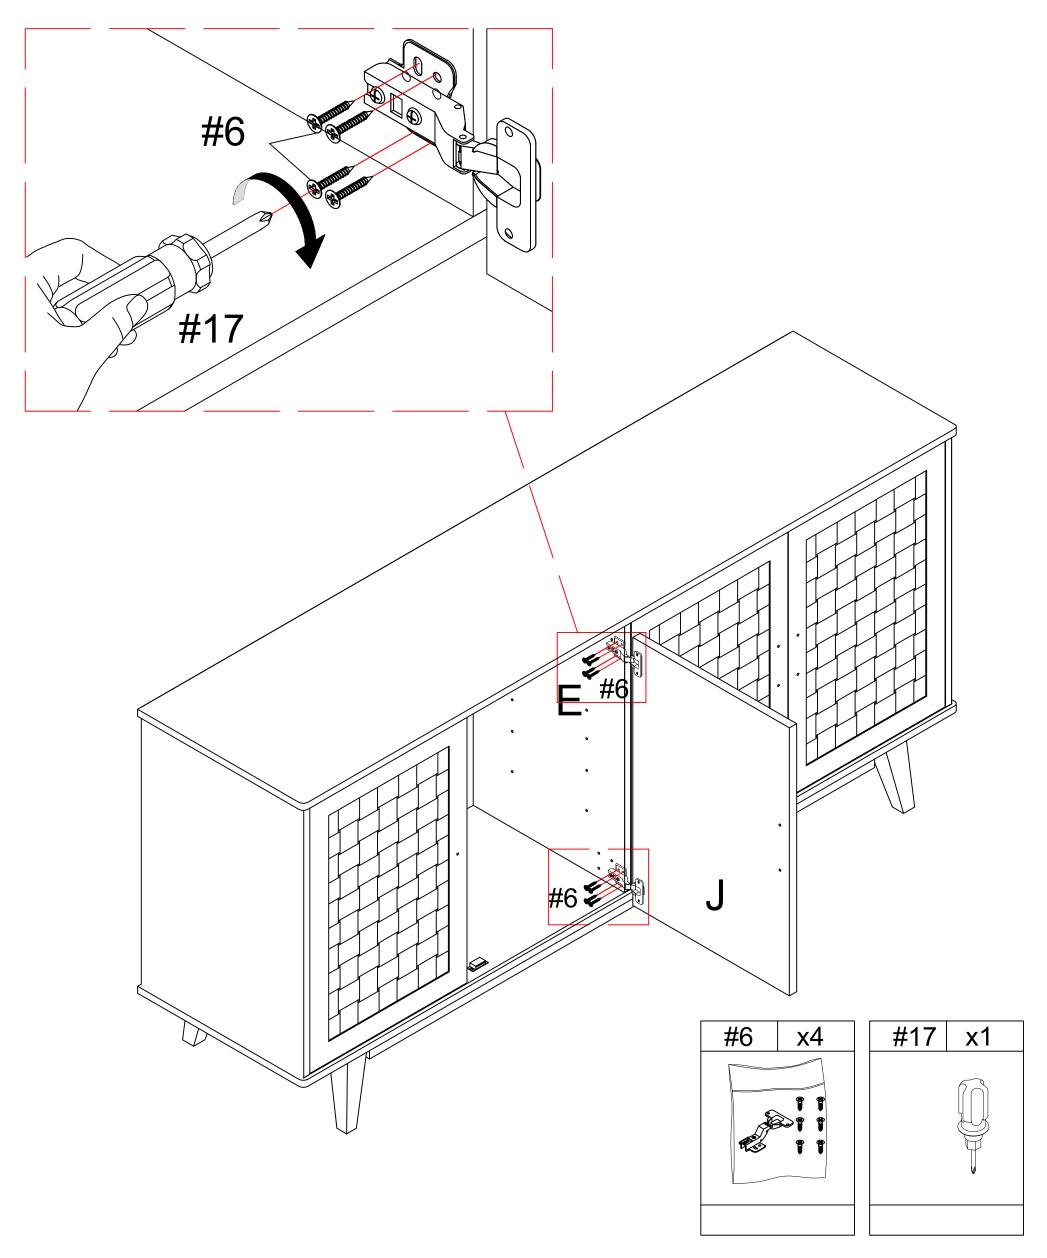





STEP-15 1.Use bolt #1 to attach handle #15 to door panel (I), tighten bolts #1 with screwdriver #17.

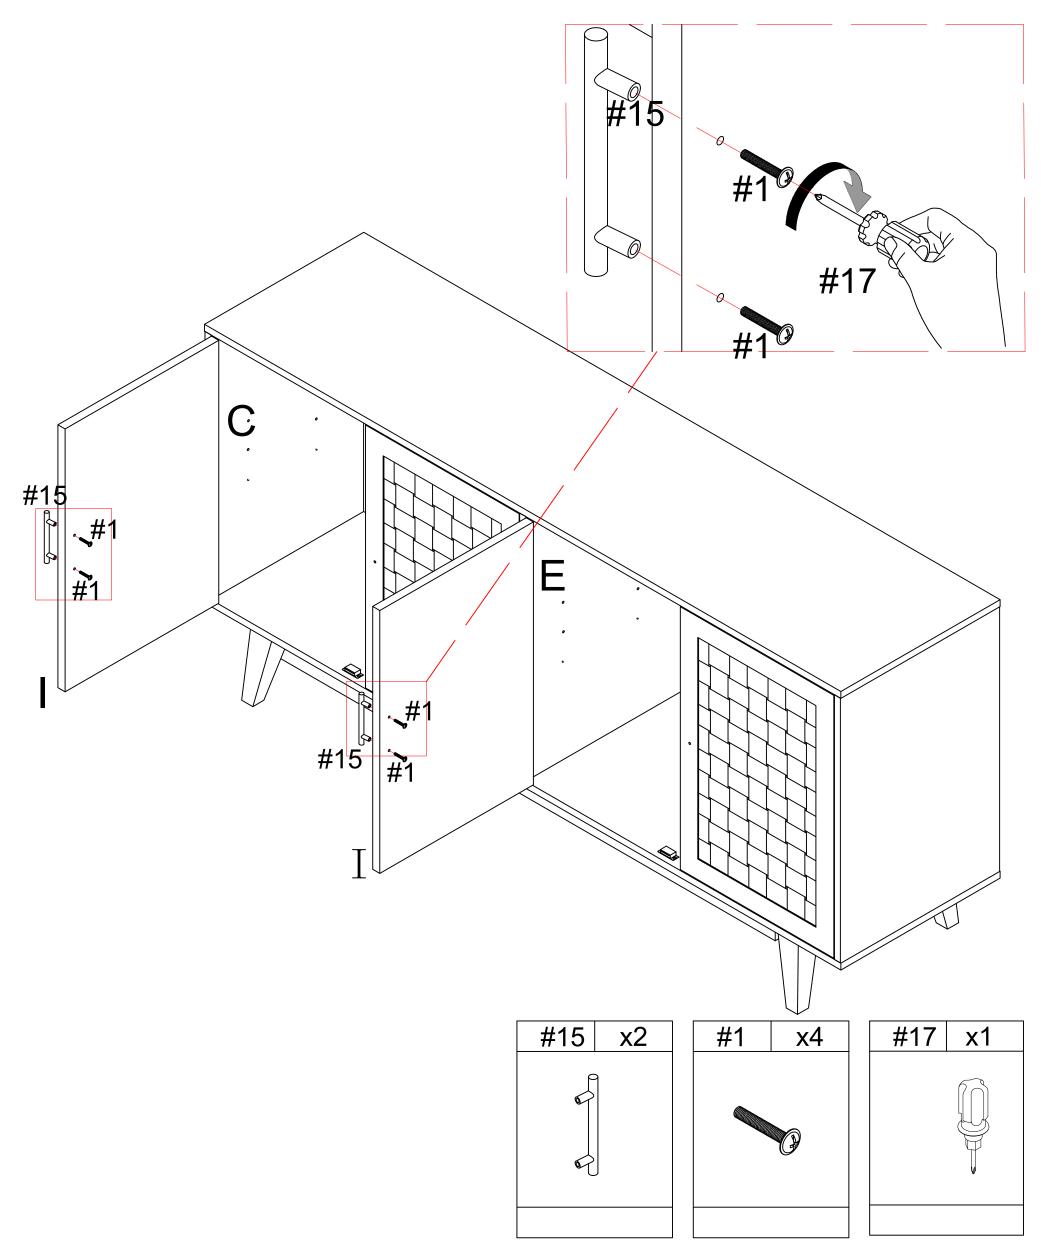

21/28


STEP-16 1.Use bolt #1 to attach handle #15 to door panel (J), tighten bolts #1 with screwdriver #17.

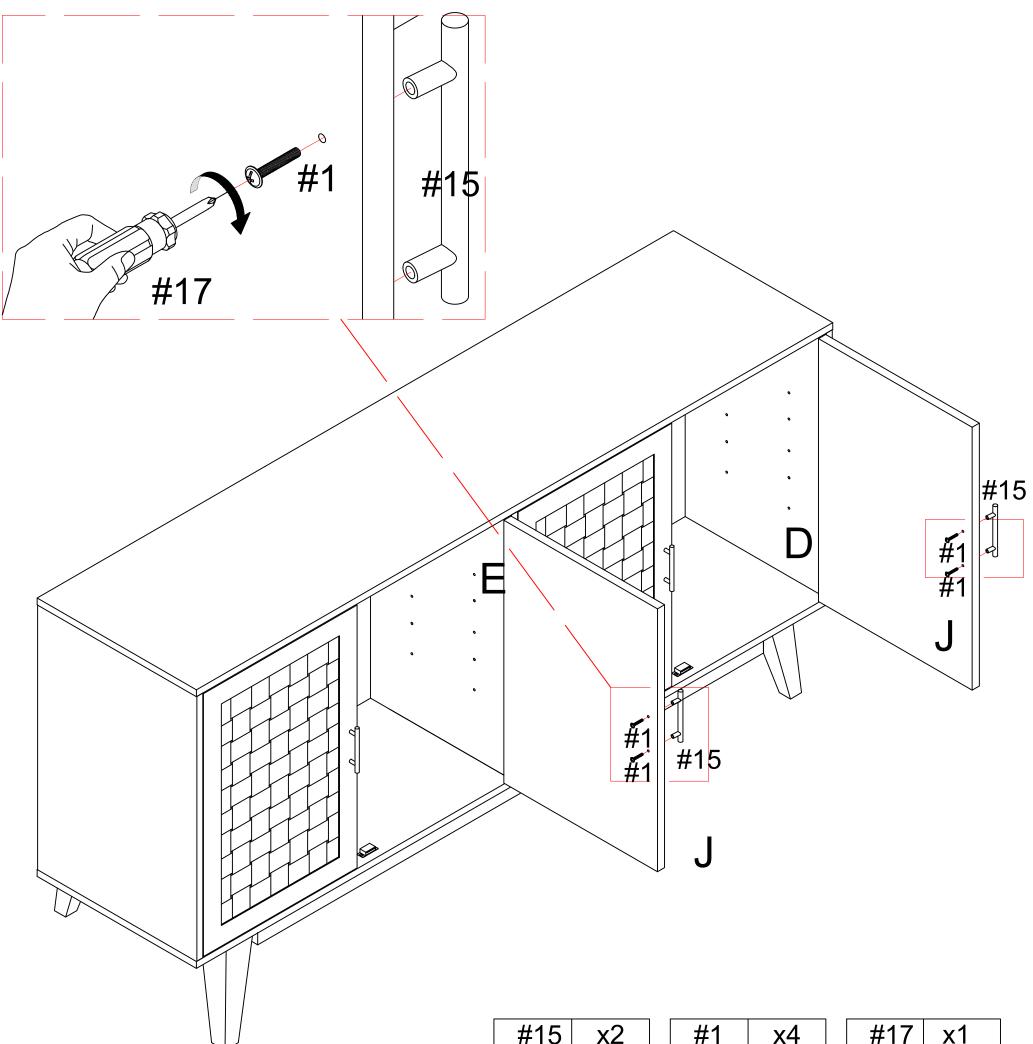

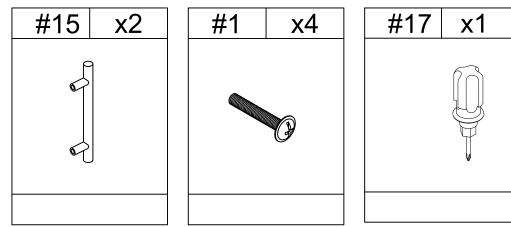




1.Insert shelf holder #13 into the corresponding hole of panel (C)&(D)&(E) and then attach panel (F) to it.

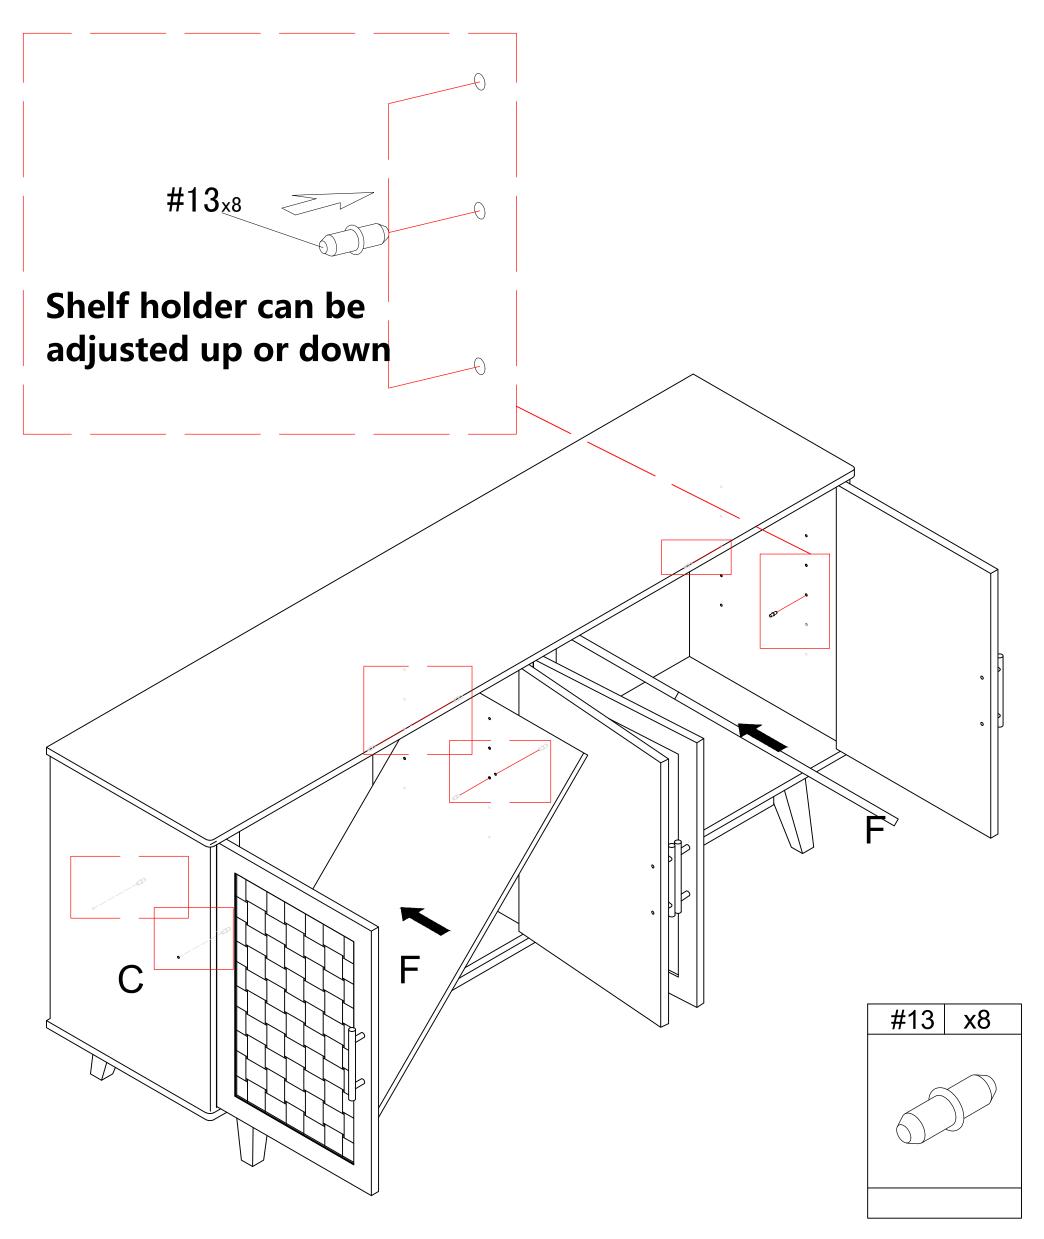



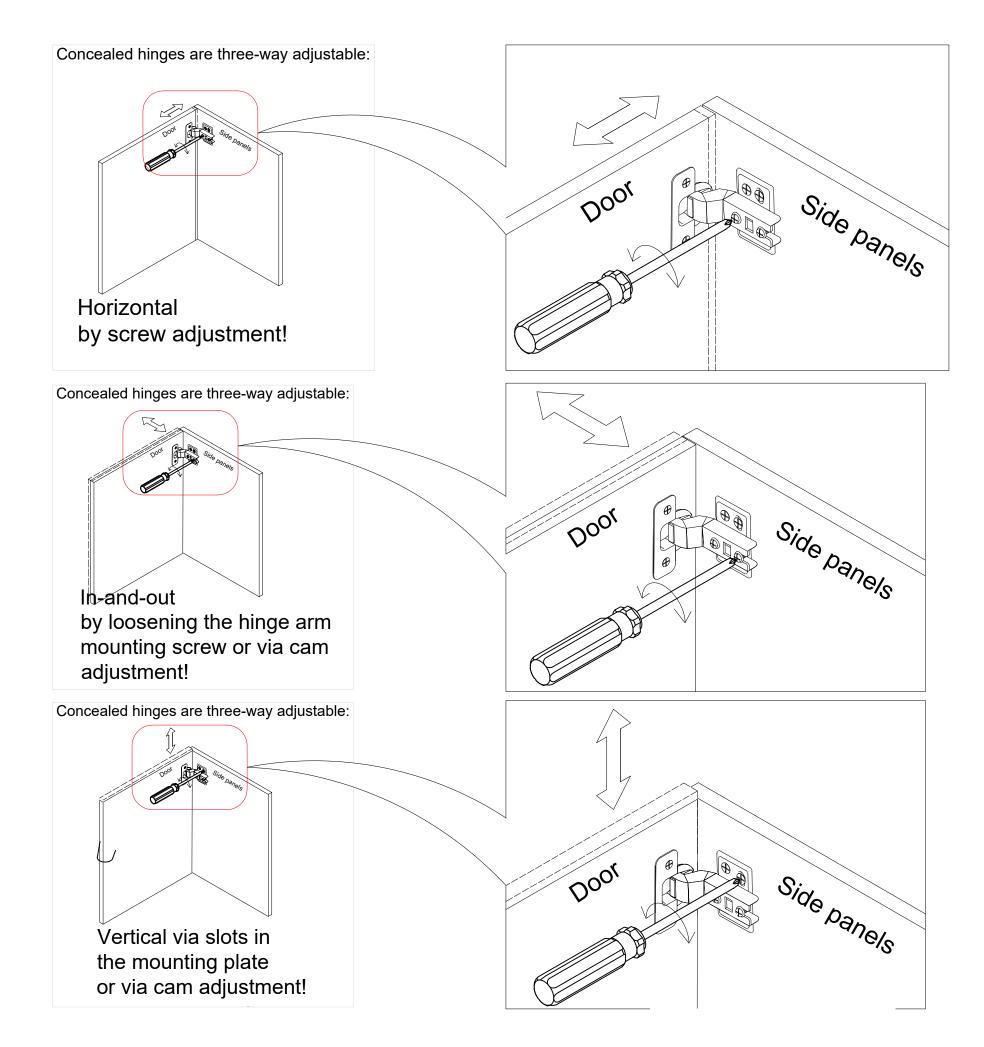





Video for door adjustment

Hinge adjustment method

STEP-19

1.Use nylon packaging #12 Inside screw to attach bracket to the corresponding hole of top panel(A), tighten screw with screwdriver #17.

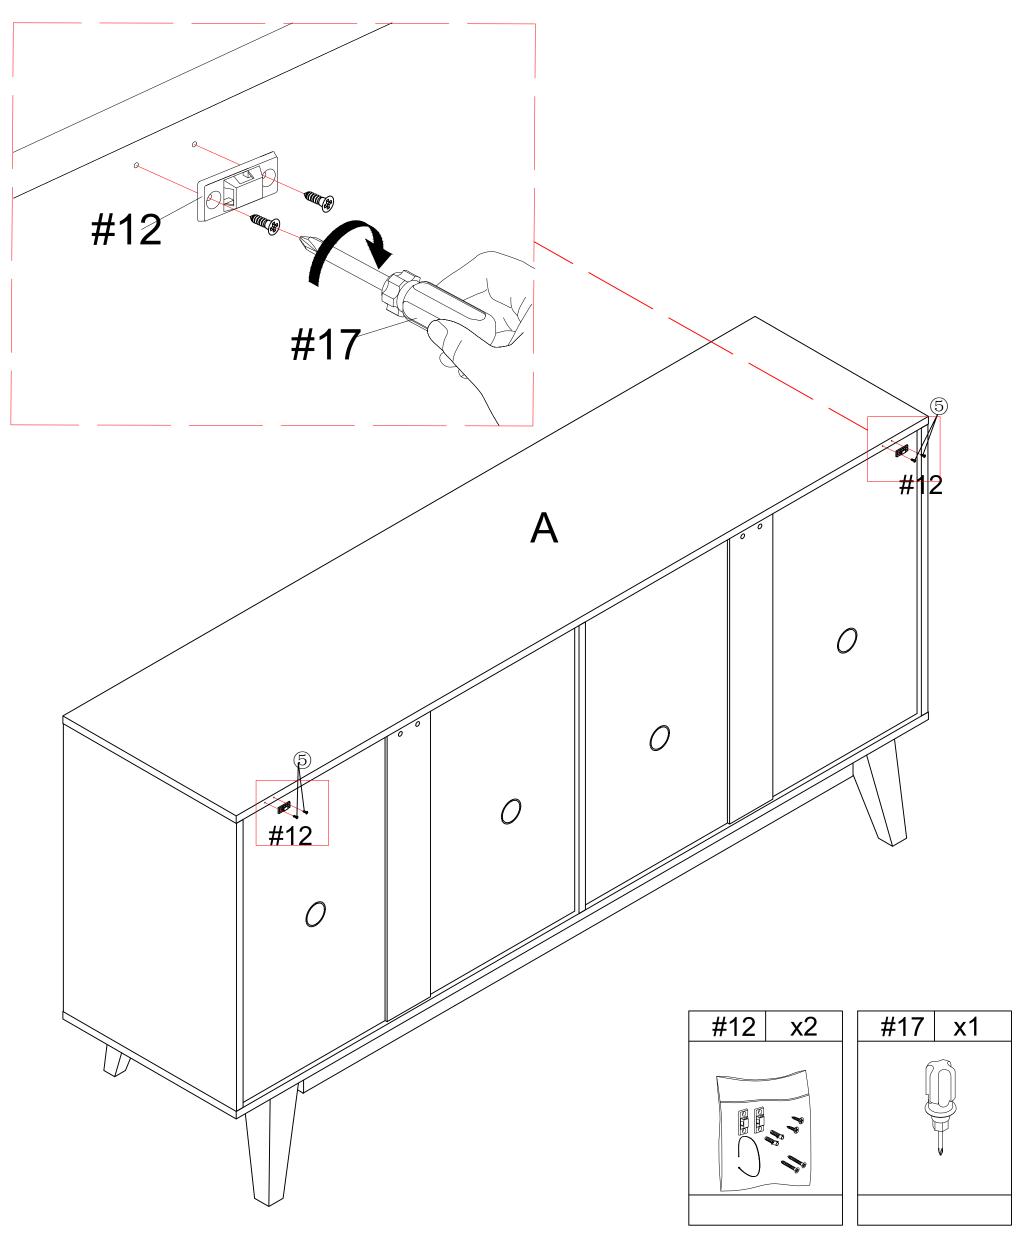


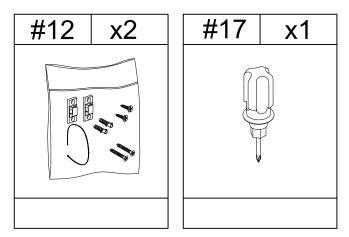


STEP-20

1.Mark the position on the wall, that corresponds to the location of bracket on the back of top panel A; Drill and insert the expandable screw by hammer.

2.Assemble the bracket to the wall. Align the hole in the bracket with the expandable screw, use screw to attach it, tighten screw with screwdriver#17.

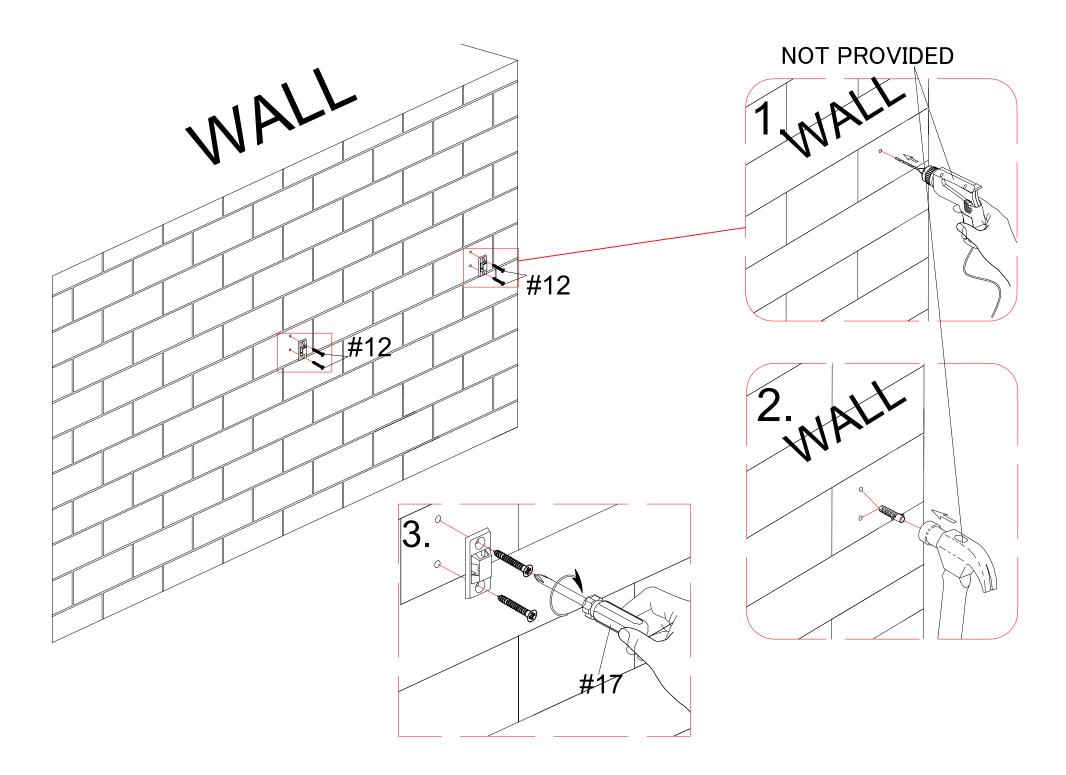




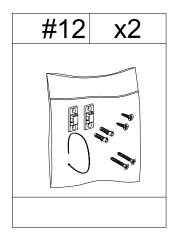

STEP-21

3.Let the plastic belt pass through bracket and pull tightly.

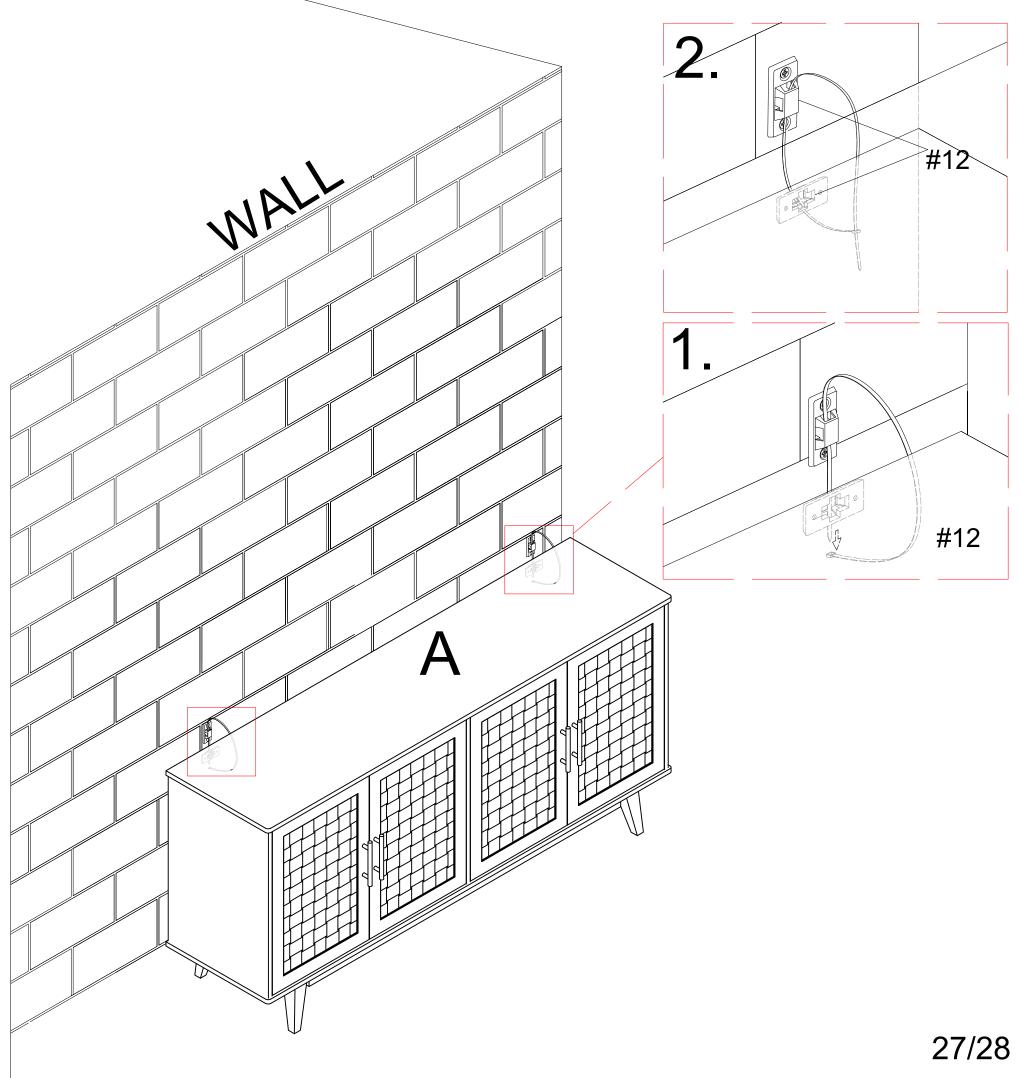



- 1.We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
- 2.We provide 30 days warranty starting from the time you receive the item.Each customer must provide a record of their order such as the order number,or item receipt for any items that are out of the warranty period you may also still receive.
- 3.Replacement parts by purchasing them with our company if they are available.

Are you having difficulty With assembly?Missing parts? Please send email with your order No to **customerservice@hulalahome.com** For return,please check the return policy with the retailer or market place you bought from.

> Appreciate your purchasing from us. Pop up your life by our furniture piece!

