

#### **ITEM NO.SDSB0747**

#### NOTE:


This brochure contains IMPORTANT safty info. Please read and keep for future reference.

#### MAINTAINANCE AND WARNING

- 1. Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight, material will possibly fade over time.
- 4.Do not use on site dry cleaning machine. Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protected by a padded barrier.
- 6.Not for commercial use, only for residential use.




## **EXPLOSIVE VIEW**

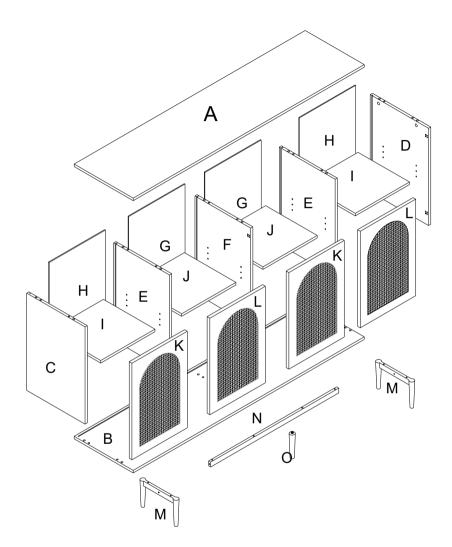


## **OVERVIEW**




## **PARTS LIST**

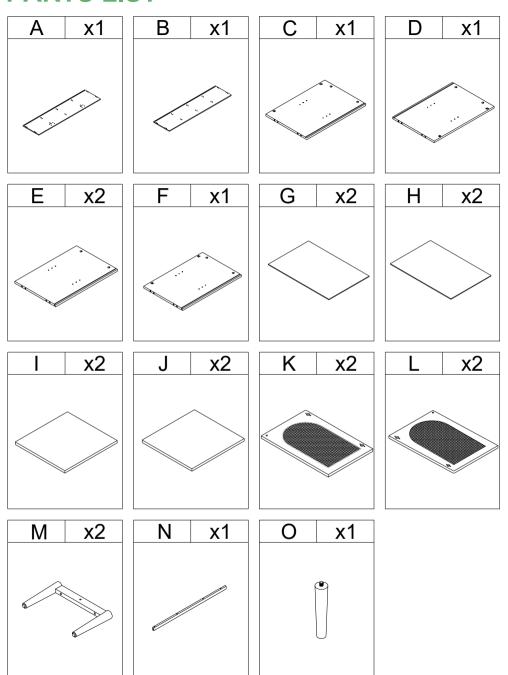


#### HARDWARE LIST

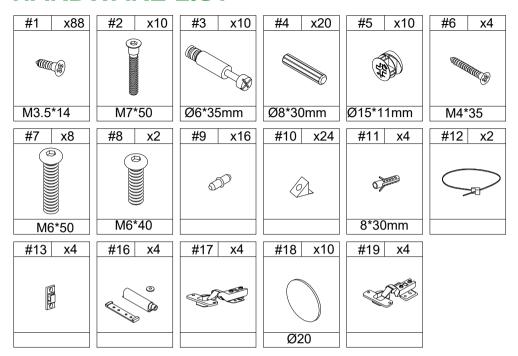


### **TOOL LIST**

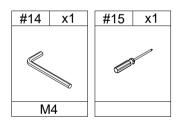


## HARDWARE SPARE LIST

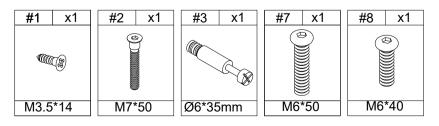


1. Prepare for part A. Align the holes in part A, insert wooden dowel #3.

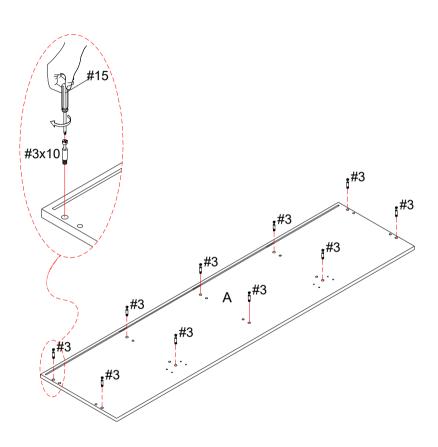


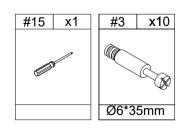

#### STEP-2


1.Prepare for part A. Align the holes in part A, insert bolt #4, and tighten bolt #4 with screwdriver #15.

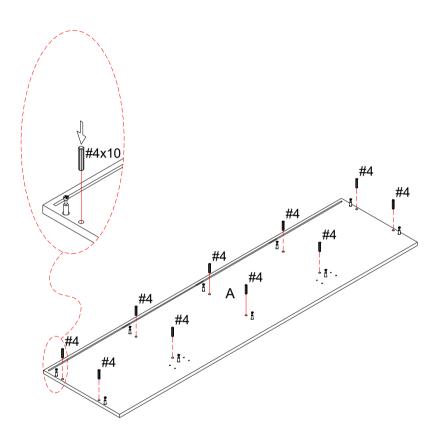




#### STEP-3


1.picture shows.Use bolt #1 to attach rebound parts #16 to panel, tighten bolts with screwdriver #15.

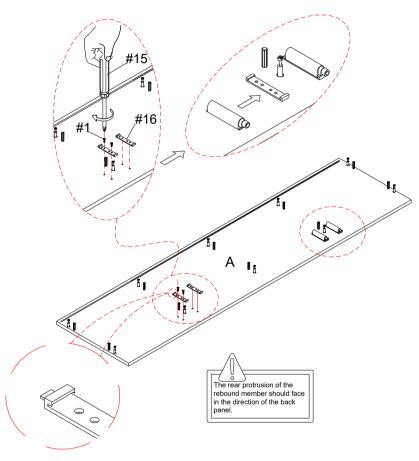





#### STEP-4

1.Connect the part A with part (C,D,E,E,F). align the hole in the part (C,D,E,E,F),insert the bolt #3 and wooden dowel #4 in part A into part(C,D,E,F).and tighten the nuts#5 with a screwdriver#15.cover #18 the screw hole afte installation is finished. Make sure the groove is in same side as picture show.

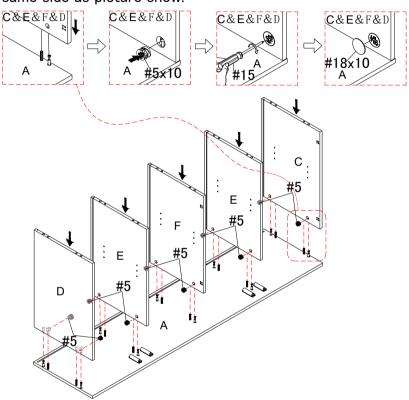

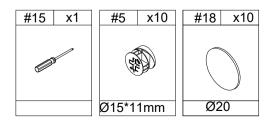



1.slide in the part (H,G,G,H) into the groove in part C,E and E,F and F,E and E,D. make sure they are also in groove in part A.

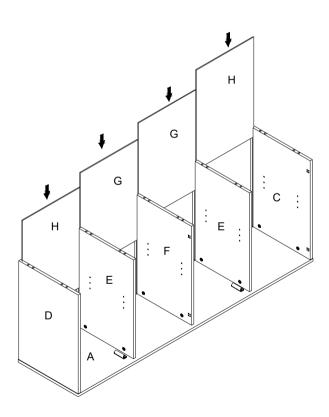

#### STEP-7


1.Connect the part B the pre-assembled unit in step 6. Then align the holes in part B,Insert screw #2 Insert the wooden pin #4 into (C,D,E,F), by hand.and push it down so that it connects to parts C,D,E,F,E. Next,and tighten the screw #2 with an Allen key#14.

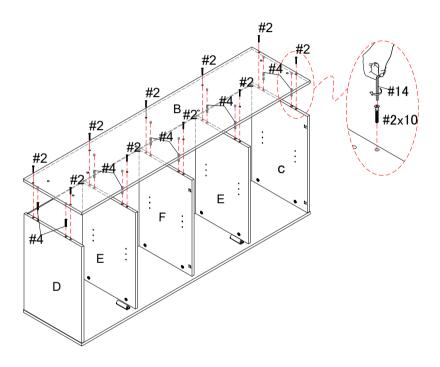


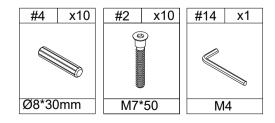

#### STEP-8


1.Prepare the leg racks. Align the holes of the M part with the holes of the N part, install the screw #8, and tighten the screw #8 with the allen key #14.

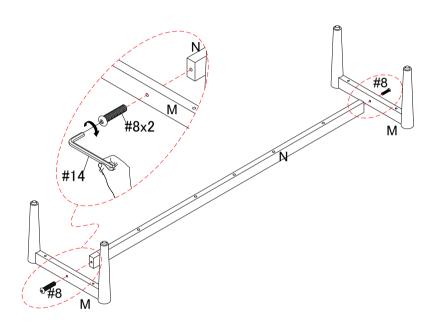


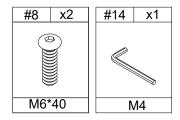


#### STEP-9

1.connect the leg frame to the cabinet. Attach the leg frame to the pre-assembled unit in step 7 with a screw #7 and tighten with a allen key#14.

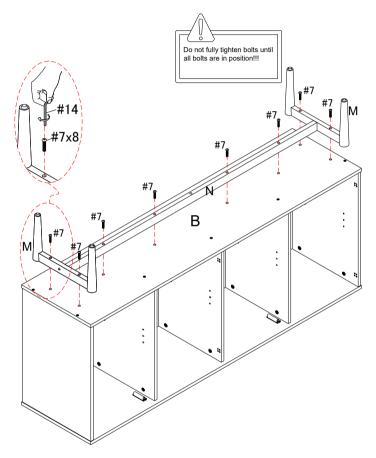

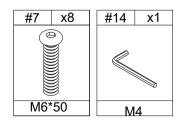


1.connect the middle leg to the cabinet.Attach the middle leg to the pre-assembled unit in step 9 and hand tighten.

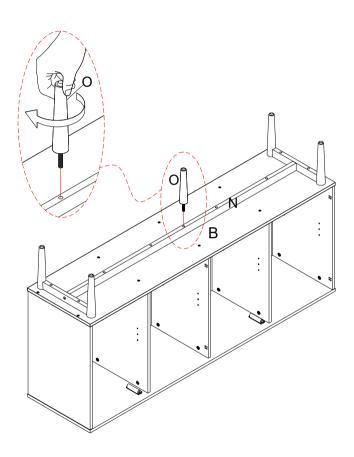


#### STEP-11


1.Insert shelf pin#9 into reassemble unit at step 10.attach adjustable shelf (I,J,J,I) to pin #9

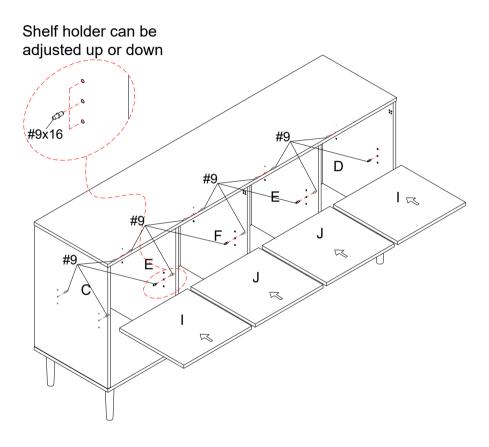

#9	x16
	P
9	2


1. Use screw #1 to attach the gasket #16 to door panel (L)&(K) tighten screws with screwdriver #15.

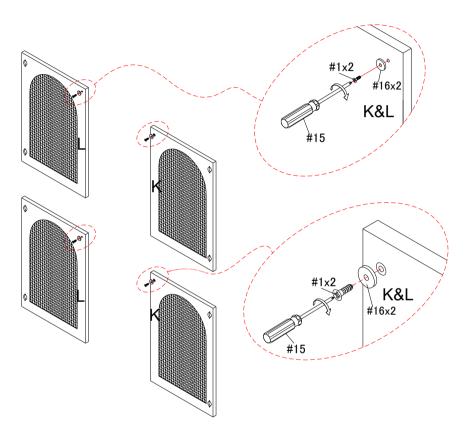


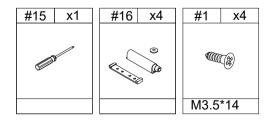

#### STEP-13


1.Use screw #1 to attach the hinges #19 to door panel (K)&(L), tighten screws with screwdriver #15.

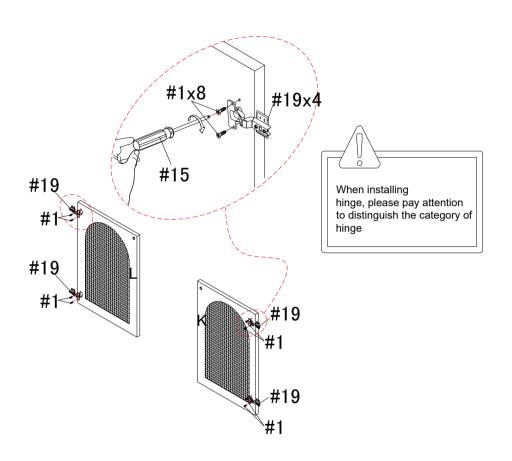

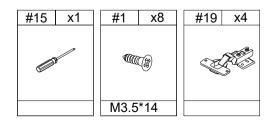


#### STEP-14


1.Use screw #1 to attach left (K) and right door (L) to reassemble unit at step 11 ,tighten screw with screwdriver #15 .

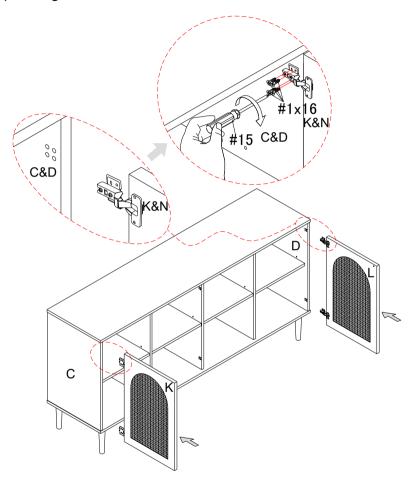

#15	x1	#1	x16
		<b>W</b>	
		M3.5	i*14


1. Use screw #1 to attach the hinges#17 to door panel (L)&(K)tighten screws with screwdriver #15.

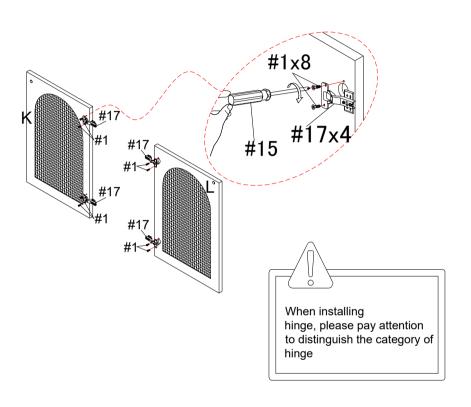

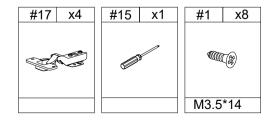

#### STEP-16


1.Use screw #1 to attach middle door (K) to reassemble unit at step 14 ,tighten screw with screwdriver #15 .

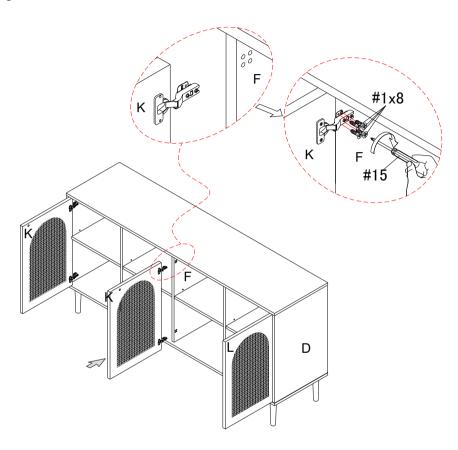



#15 x1	#1 x8
	M3.5*14

#### STEP-17


1.Use screw #1 to attach middle door(L) to reassemble unit at step 16 ,tighten screw with screwdriver #15 .

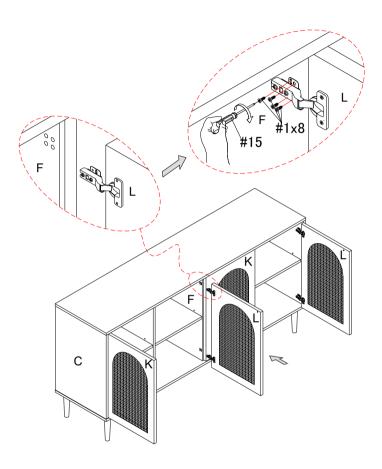

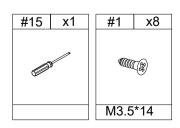

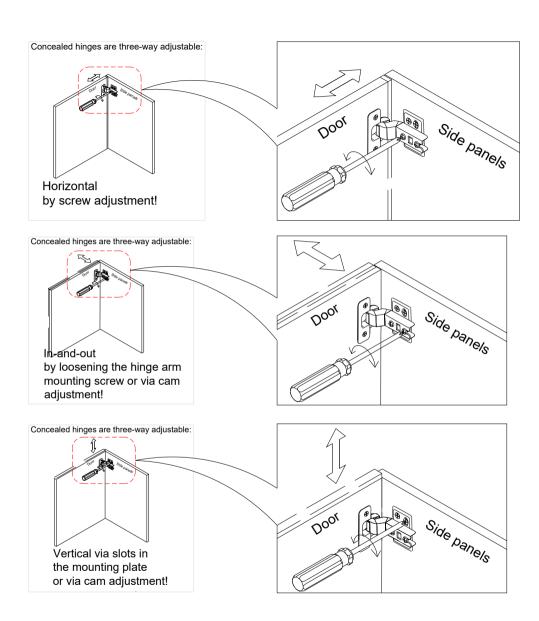



## Hinge adjustment method

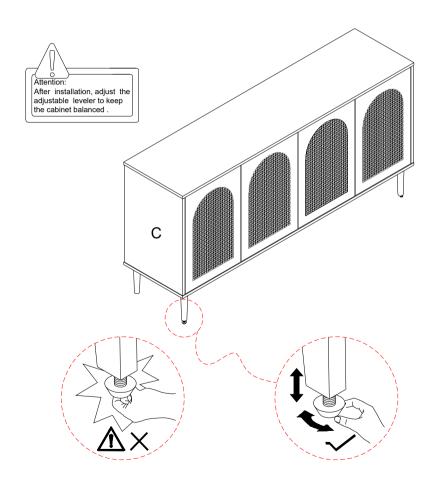


#### STEP-19

1.Attach part #10 to parts G,H,H,G with bolt #1 and tighten the bolt with screwdriver #15.

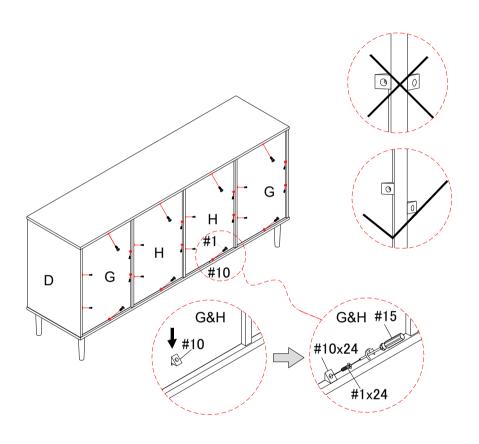


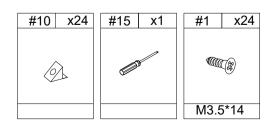

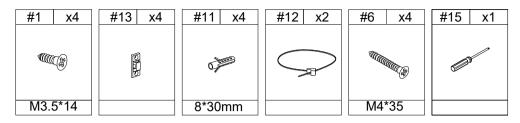

#### STEP-20

1.Attach part #13 to parts D, C with bolt #1 and tighten the bolt with screwdriver #15.Mark the position on the wall, that corresponds to the location of part #13 on the side panel D,C; Drill and insert the expandable screw #11 by hammer.Assemble the part #13 to the wall. Align the hole in the part #13 with the expandable screw #11, use screw #6 to attach it and tighten by screwdriver #15.Let the plastic belt #12 pass through the both part #13 and pull tightly.

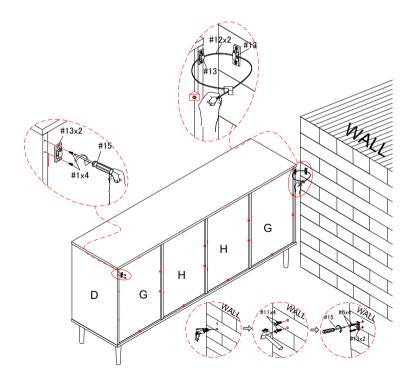

## WARRANTY

- 1. We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
- 2. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
- 3. Replacement parts by purchasing them with our company if they are available.

Are you having difficulty With assembly? Missing parts? Please send email with your order No to

## customerservice@hulalahome.com

For return, please check the return policy with the retailer or market place you bought from.

Appreciate your purchasing from us. Pop up your life by our furniture piece!