

ITEM NO.SBSD0922

NOTE:


This brochure contains IMPORTANT safty info. Please read and keep for future reference.

MAINTAINANCE AND WARNING

- 1. Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents, solvents, abrasives, spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills (Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight, material will possibly fade over time.
- 4.Do not use on site dry cleaning machine. Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protected by a padded barrier.
- 6. Not for commercial use, only for residential use.




EXPLOSIVE VIEW

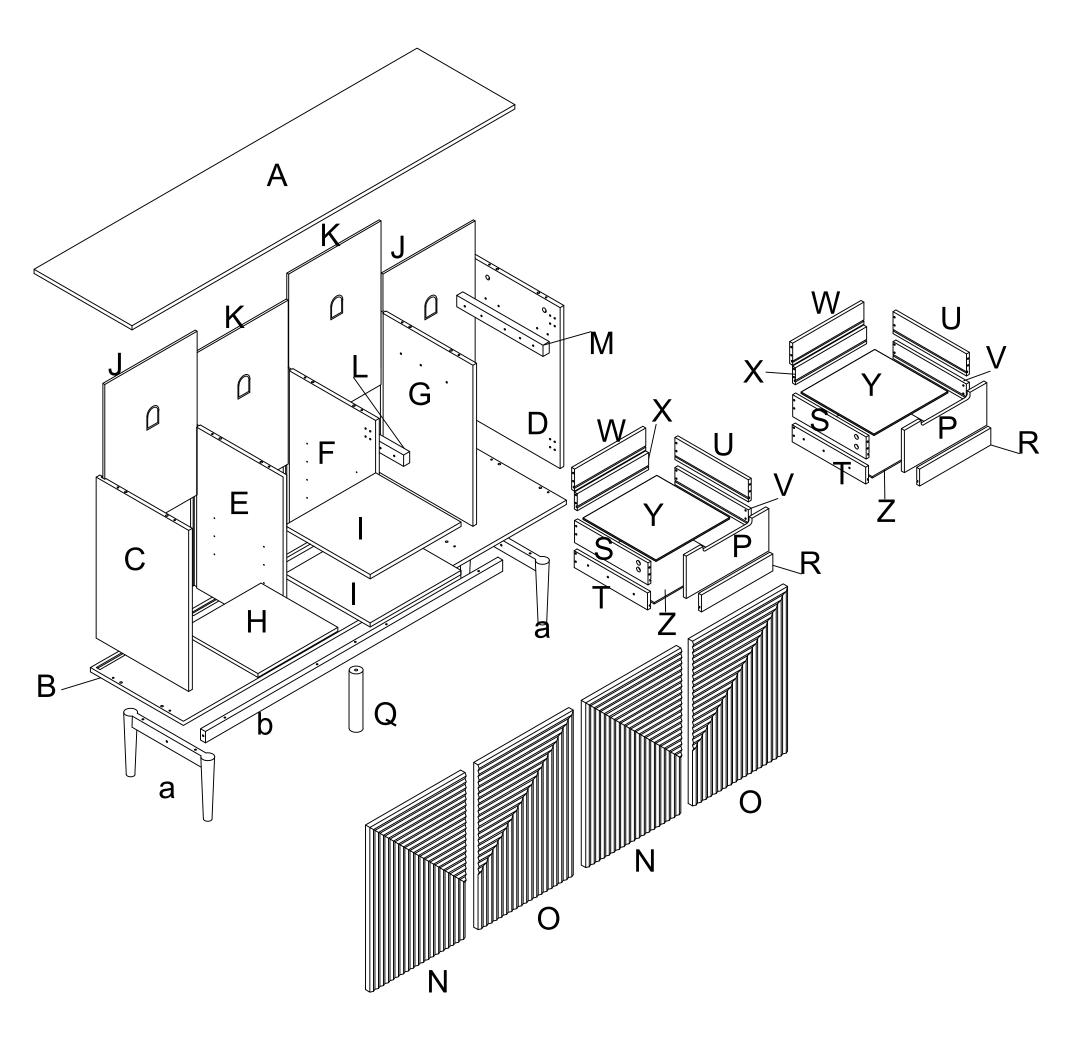





PARTS LIST

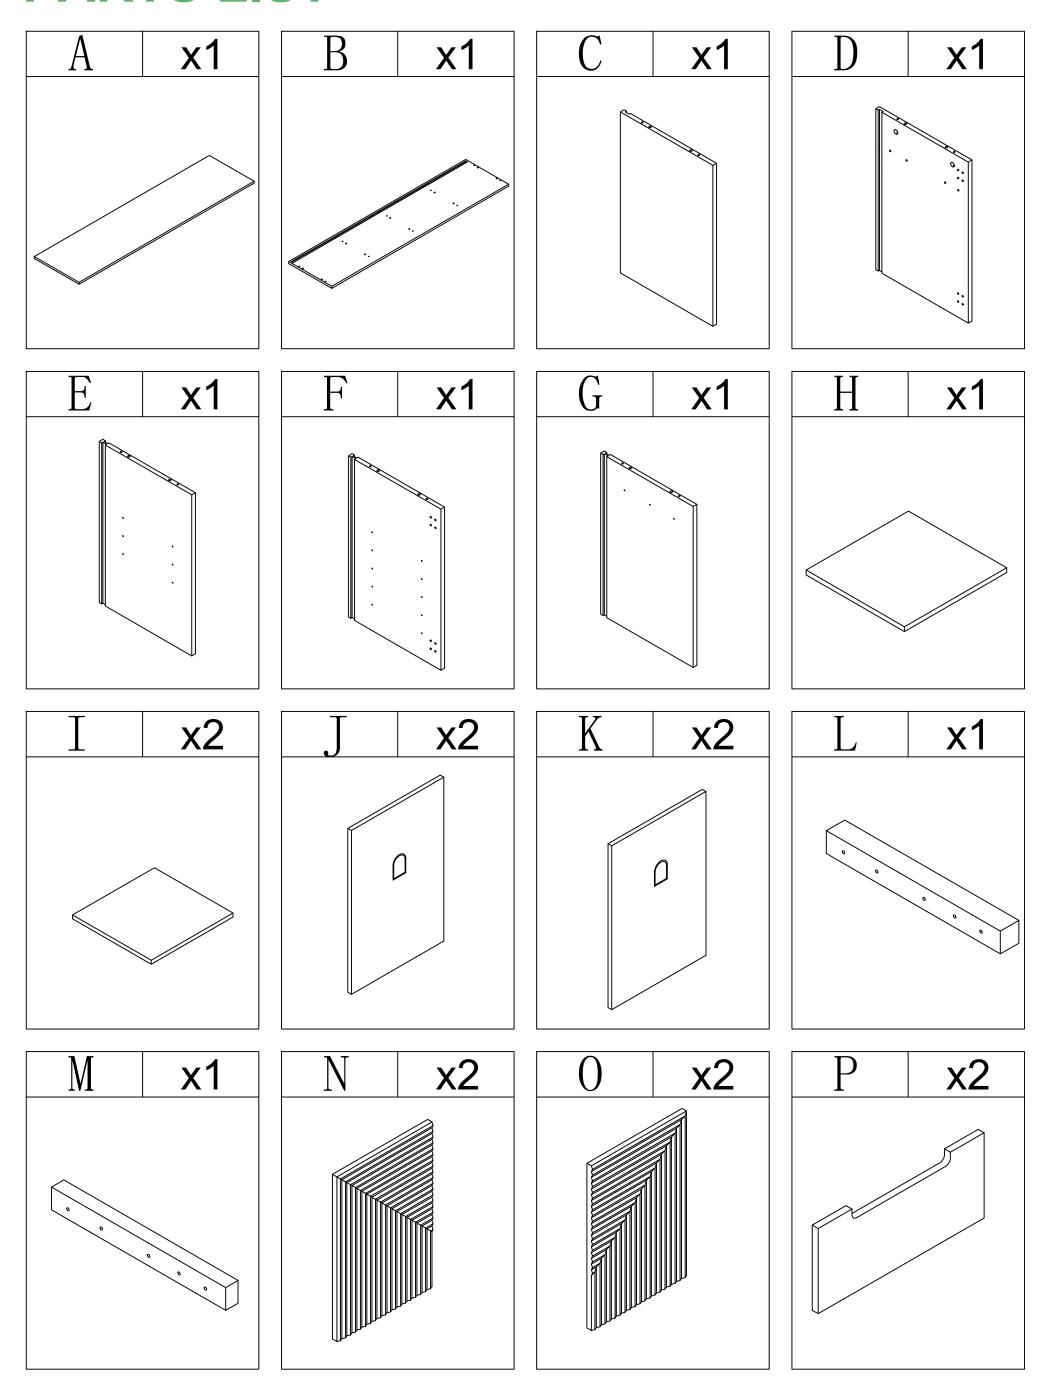


PARTS LIST

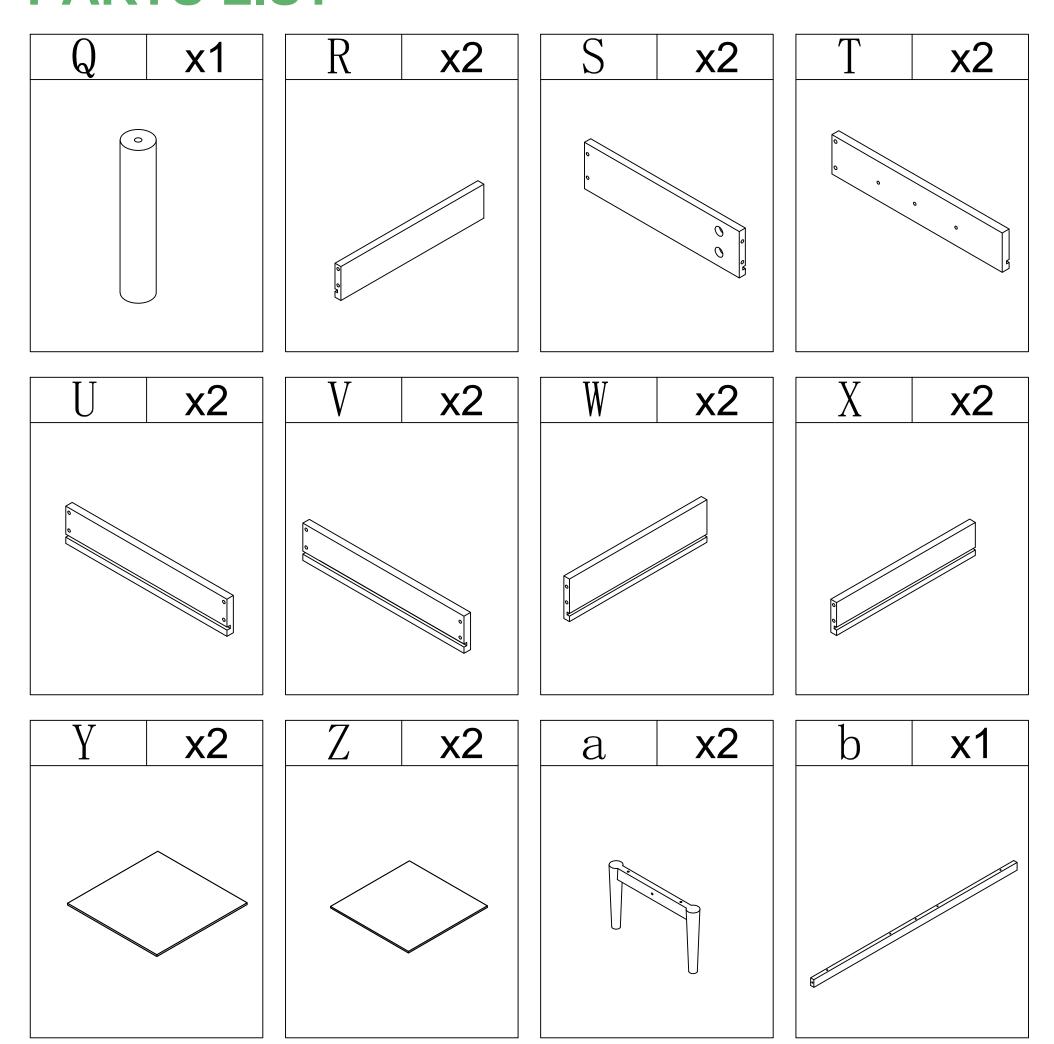


HARDWARE LIST

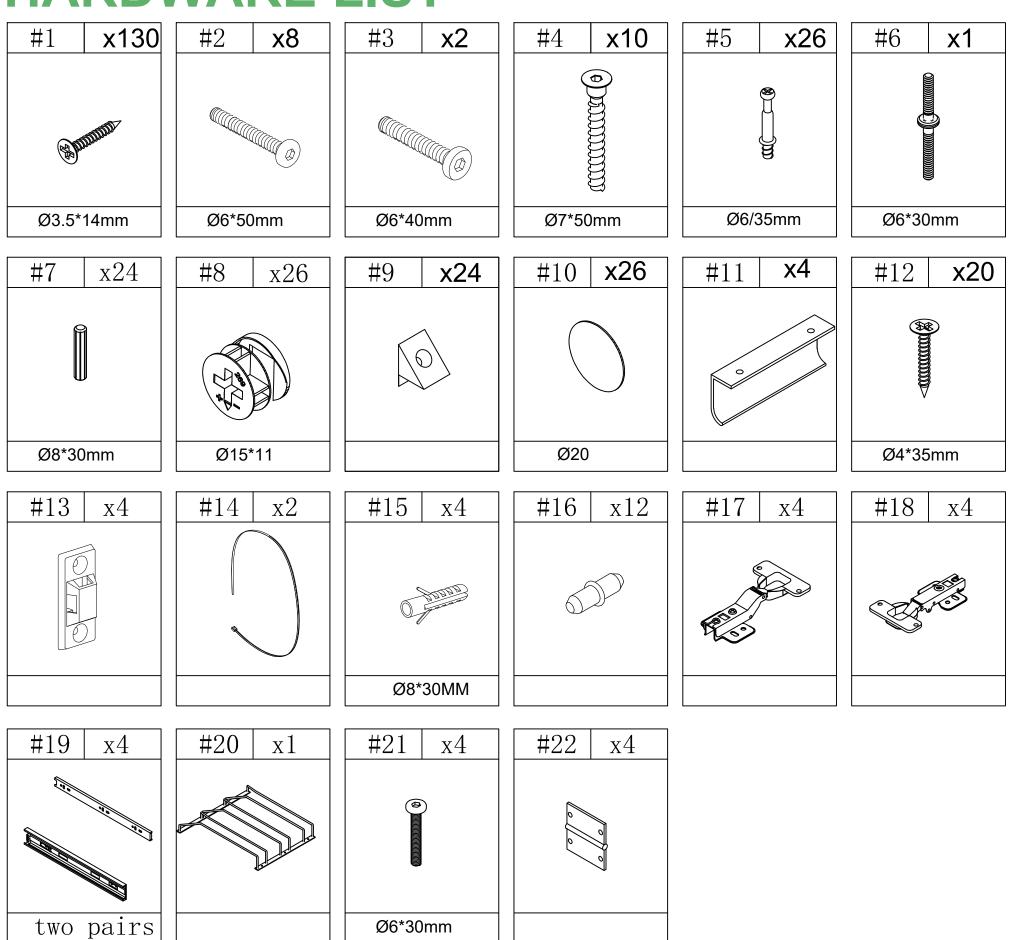



TOOL LIST

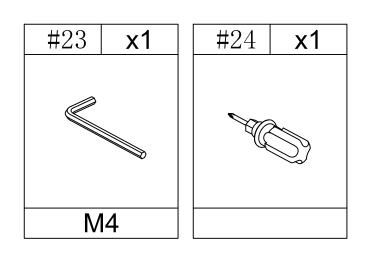



HARDWARE SPARE LIST

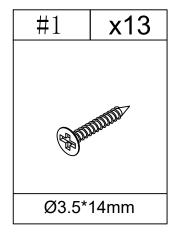


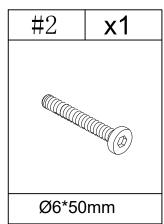


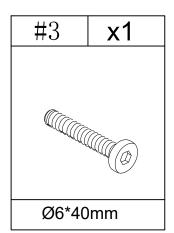


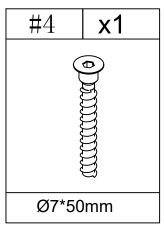

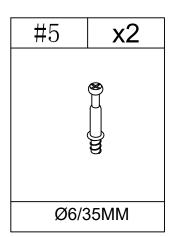

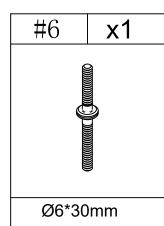


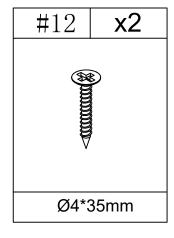

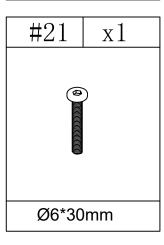

STEP-1


Align the holes in part D&F, insert wooden dowel #7 by hand.

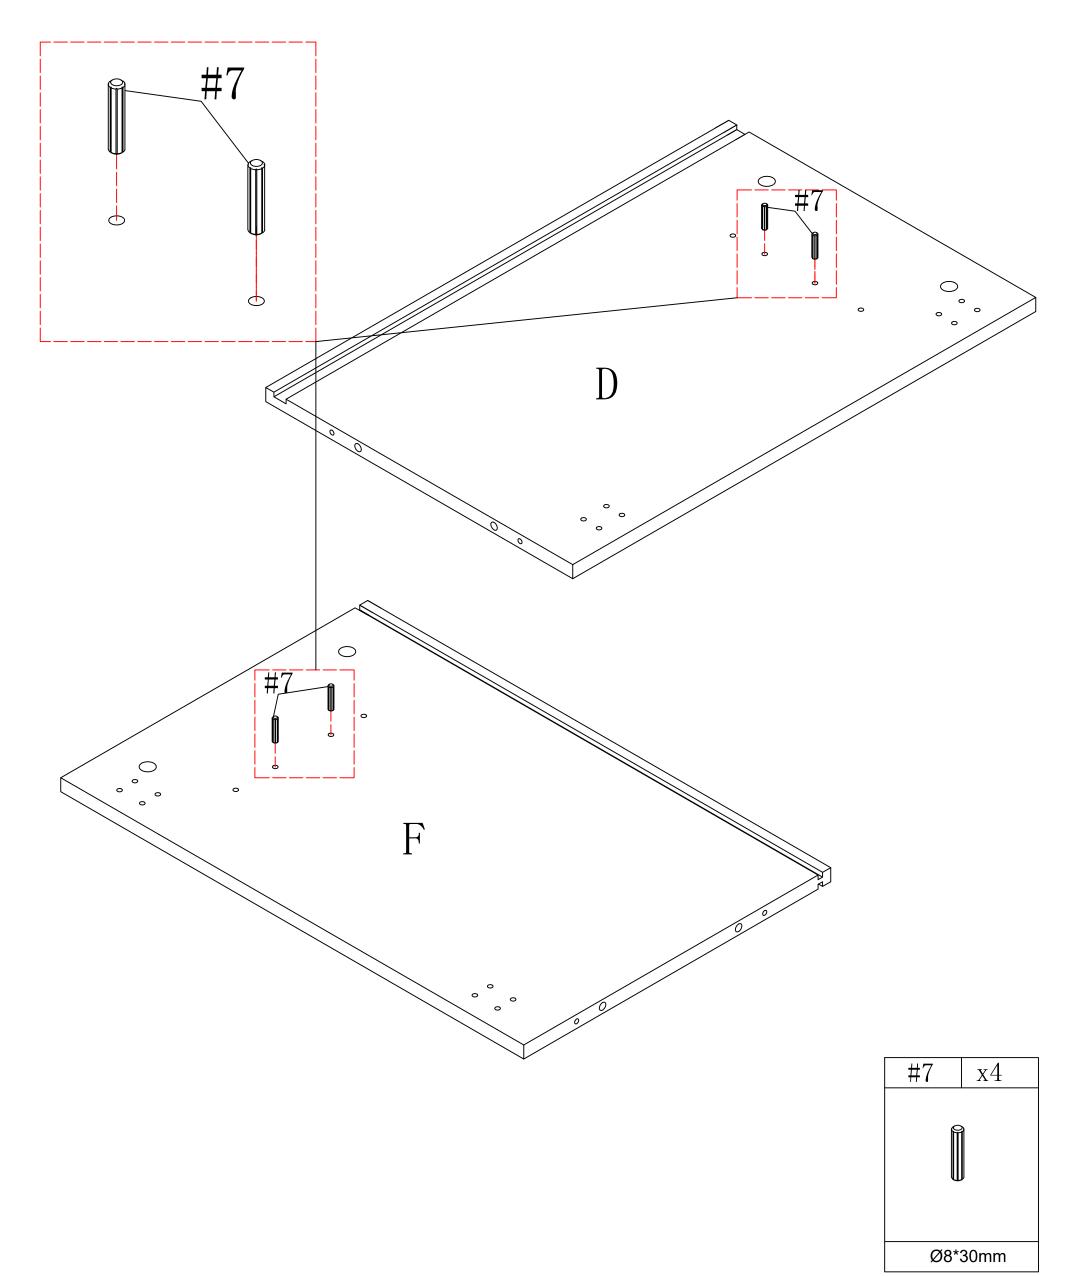

STEP-2


Use #21 screws to fix the wood M to the corresponding position of the panel (D), and tighten the screws with a #23 Allen key.

Use #21 screws to fix the wood L to the corresponding position of the panel (F), and tighten the screws with a #23 Allen key.

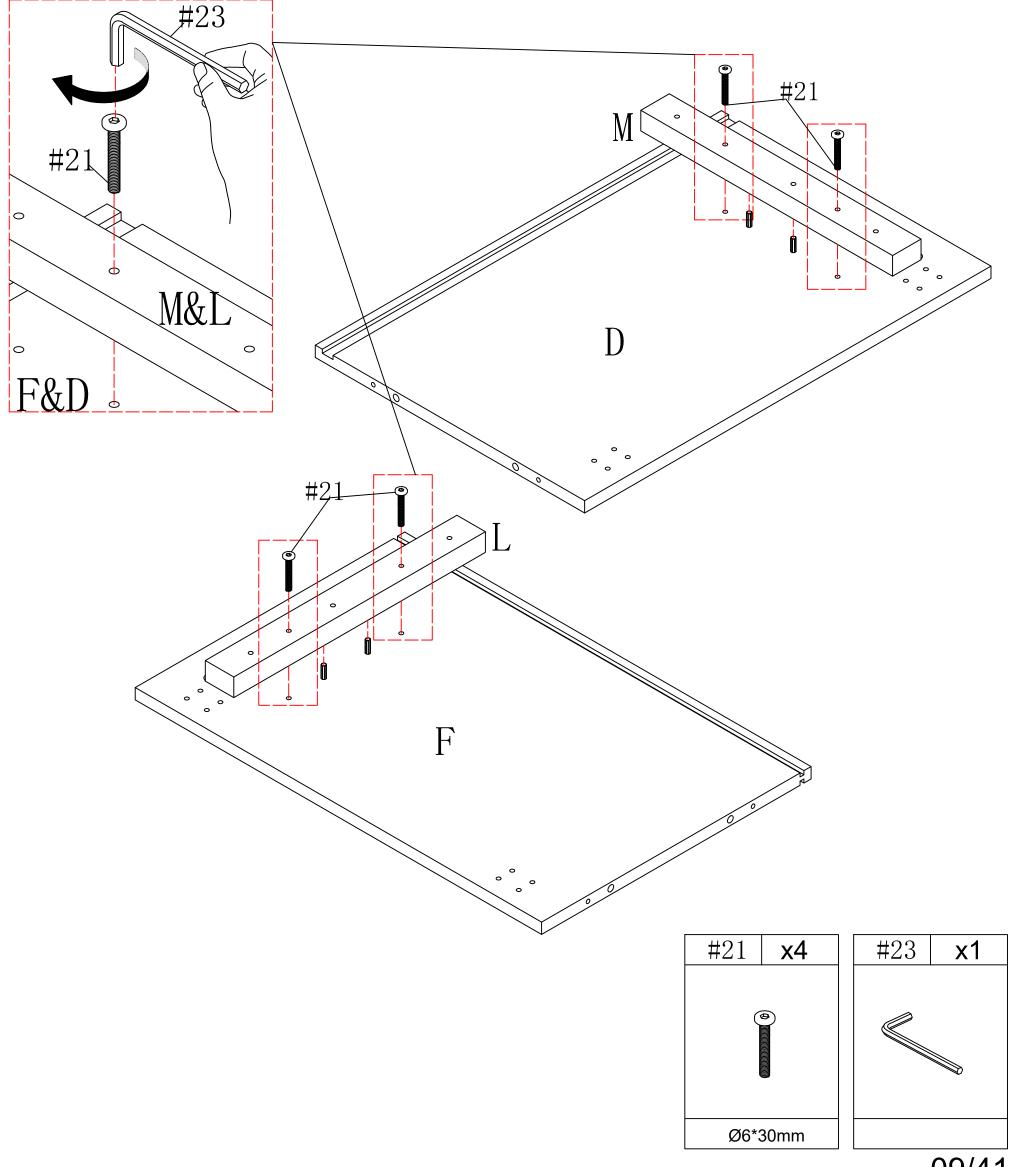

STEP-3


Lift the black button up with your hand and pull out the movable rail.

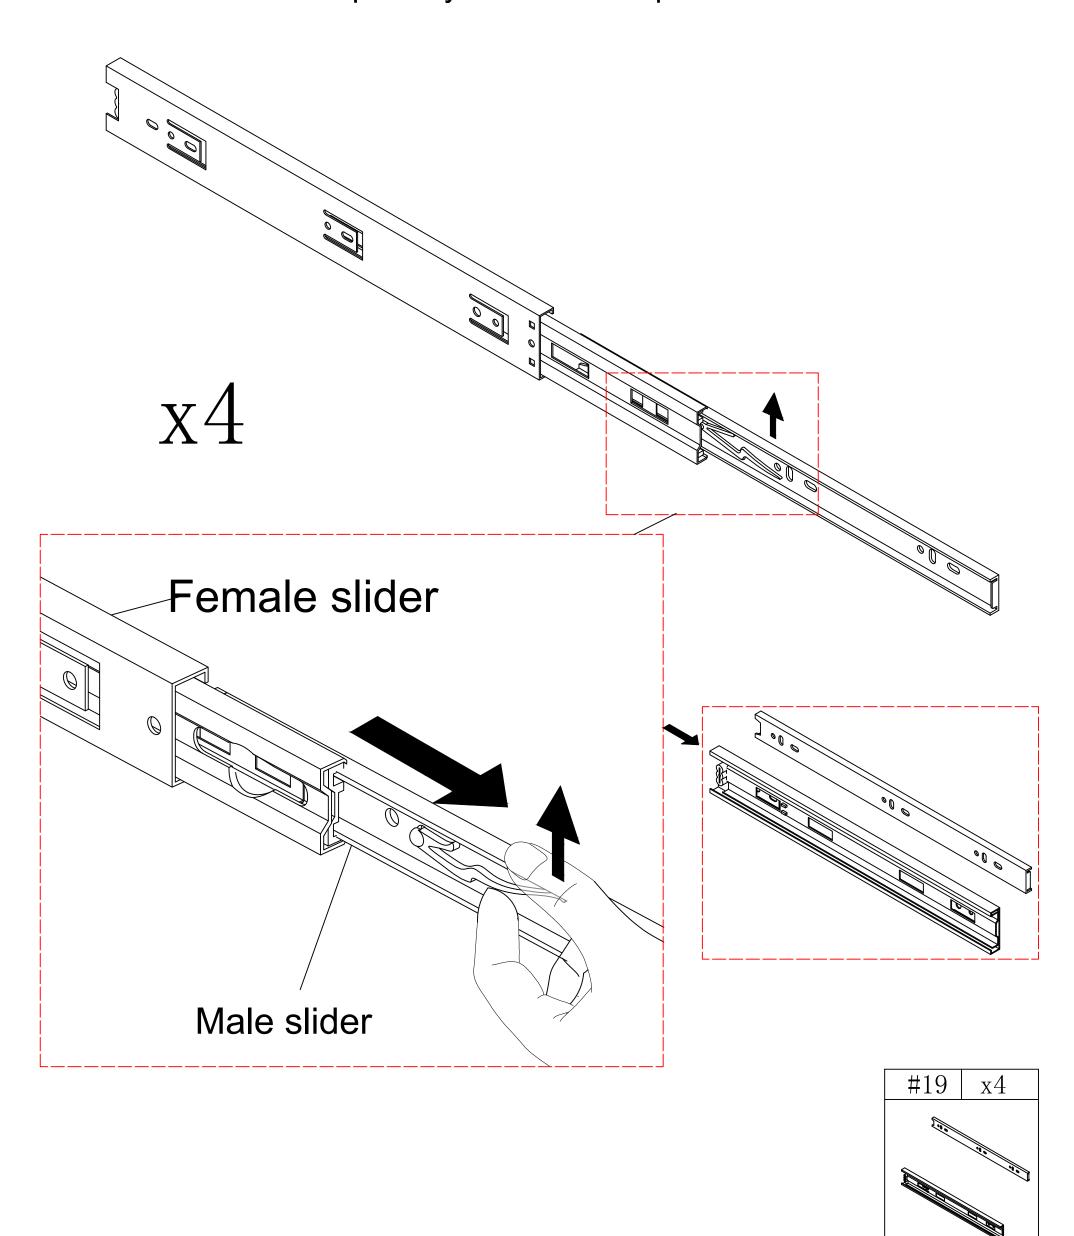

two pairs


STEP-4

Use #1 screws to fix the slide rail #19 to the corresponding position of the part (M&L), and tighten the screws with a screwdriver#24.

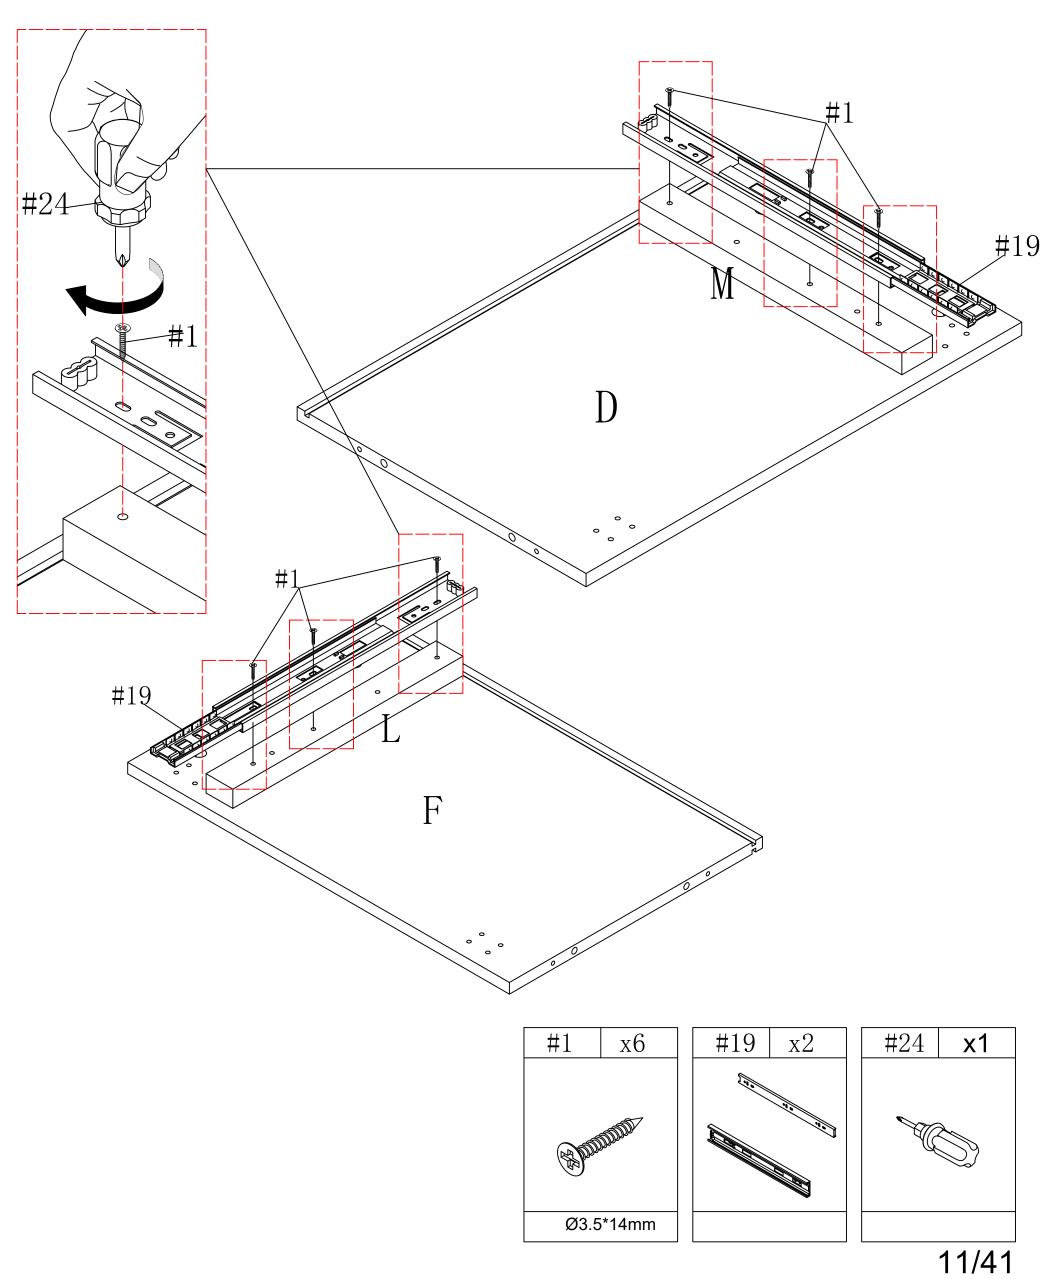


STEP-5


Use #1 screws to fix the slide rail #19 to the corresponding position of the part (G), and tighten the screws with a screwdriver#24.

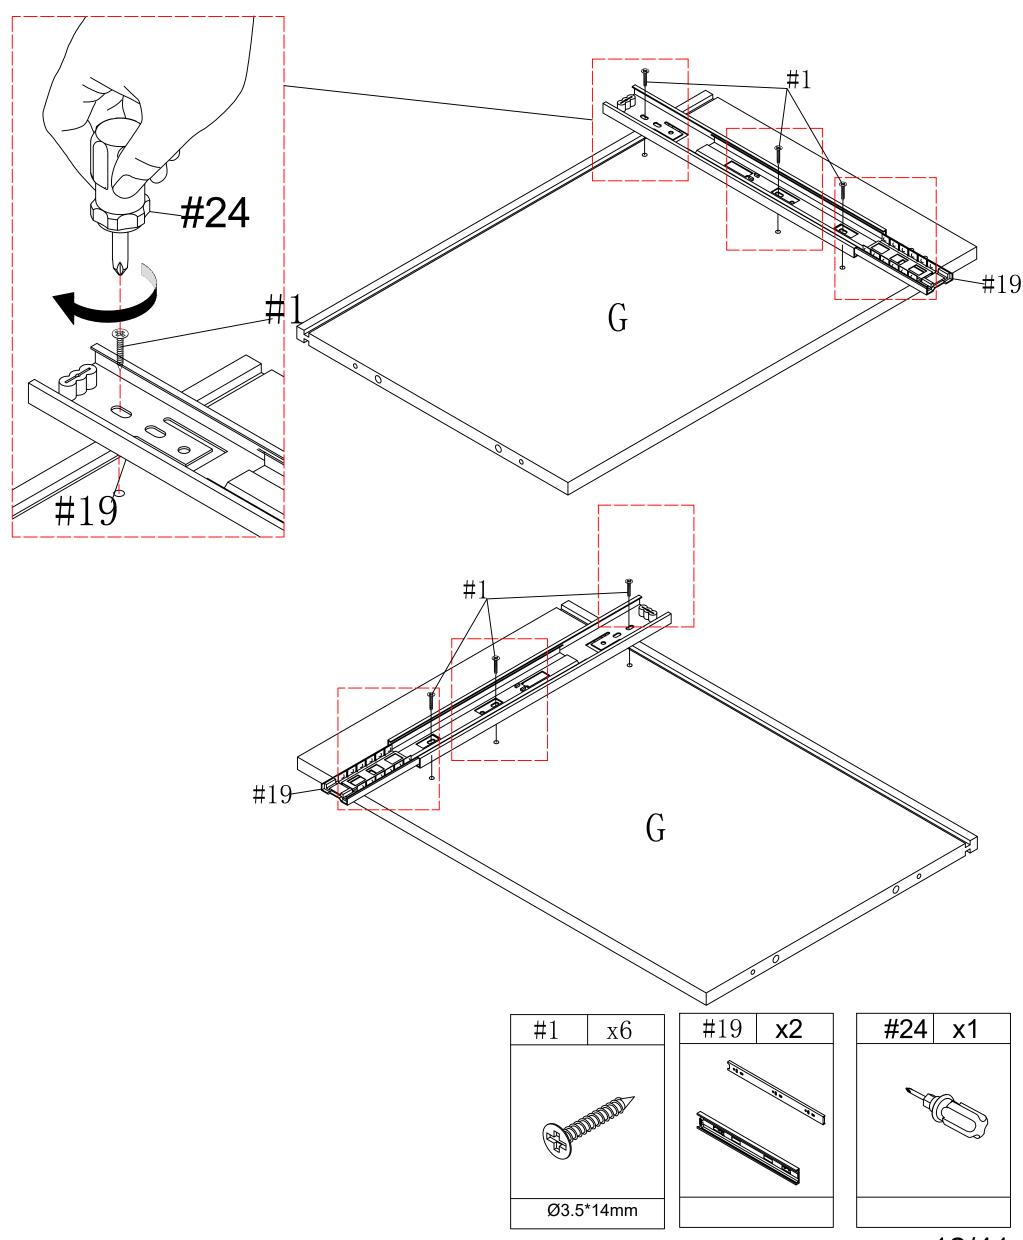

STEP-6


Prepare for part A. Align the holes in part A, insert wooden dowel #7 by hand, tighten with screwdriver #24 tighten #5.

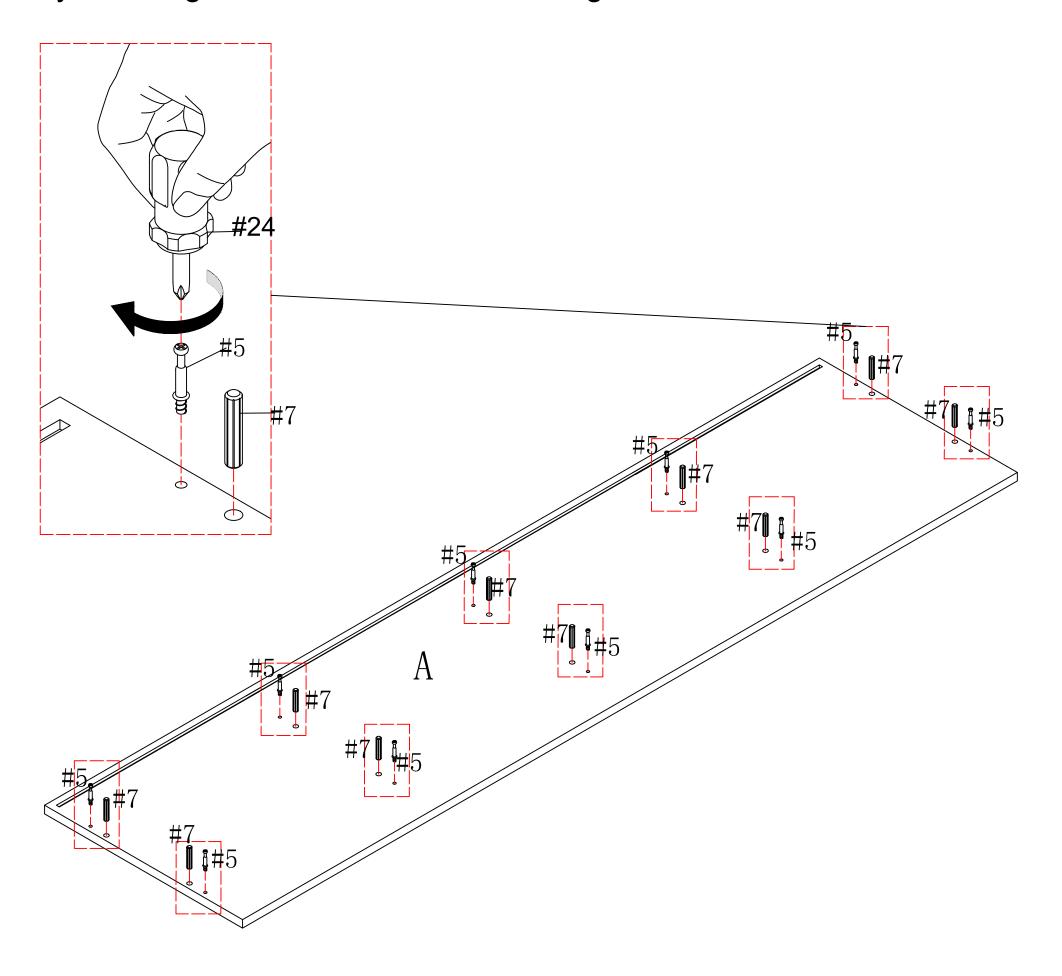

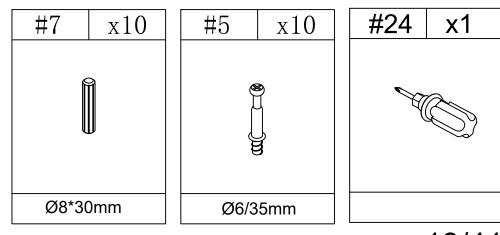


STEP-7

Connect the part A with part C&D&E&F&G. align the hole in the part C&D&E&F&G. ,insert the bolt #5 and wooden dowel #7 in part A into part C&D&E&F&G . insert cam bolt #8 into the corresponding hole of side panel C&D&E&F&G, and tighten the nuts #8 with a screwdriver #24. After installation, cover the screw holes with #10. Make sure the groove is in same side as picture show.

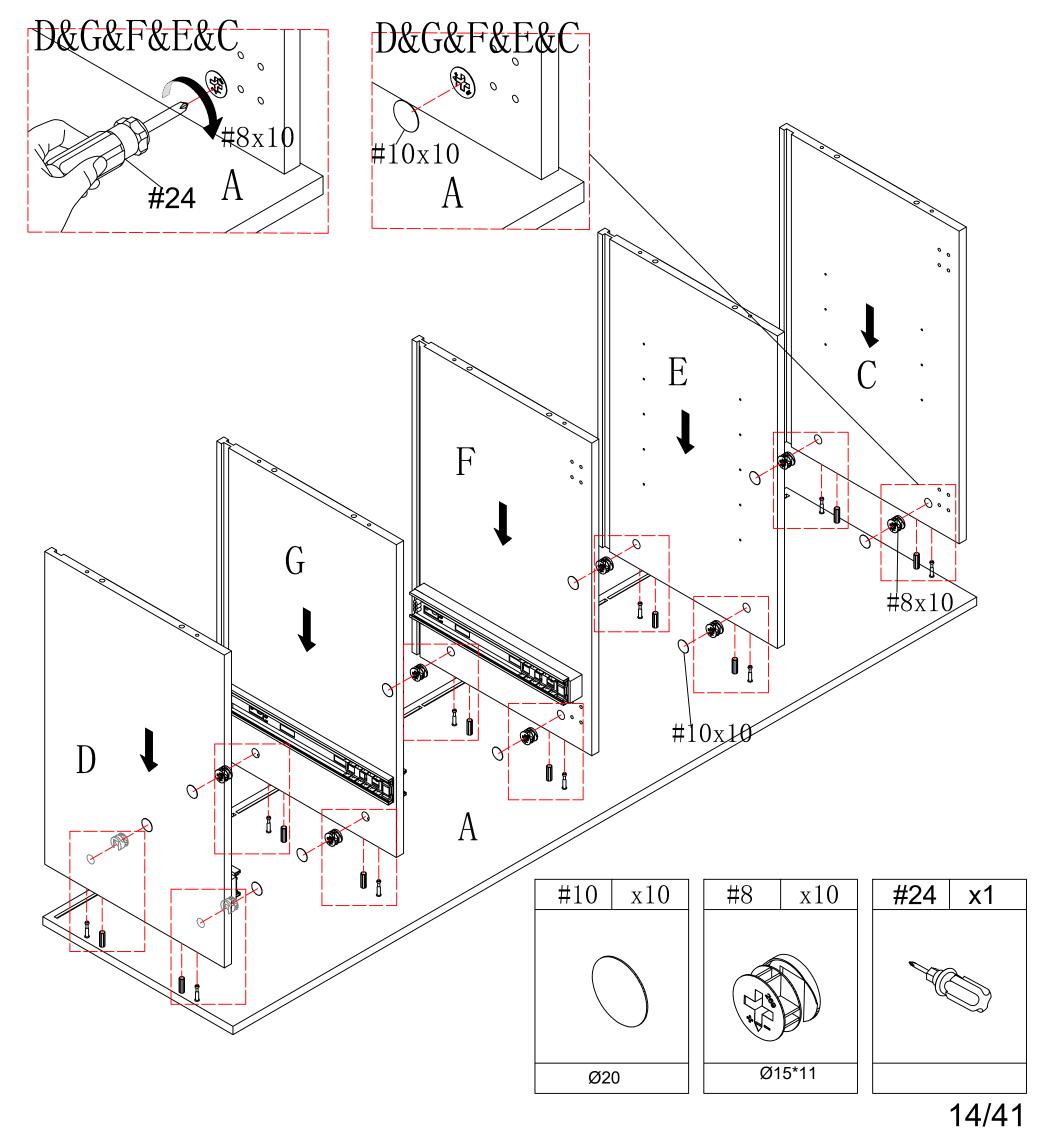


STEP-8

1.Manually insert #7 wooden dowels (C&D&E&F&G),Use screw #1 to attach wine glass holder #20 to the corresponding hole of panel(A), tighten screw with screwdriver #24.

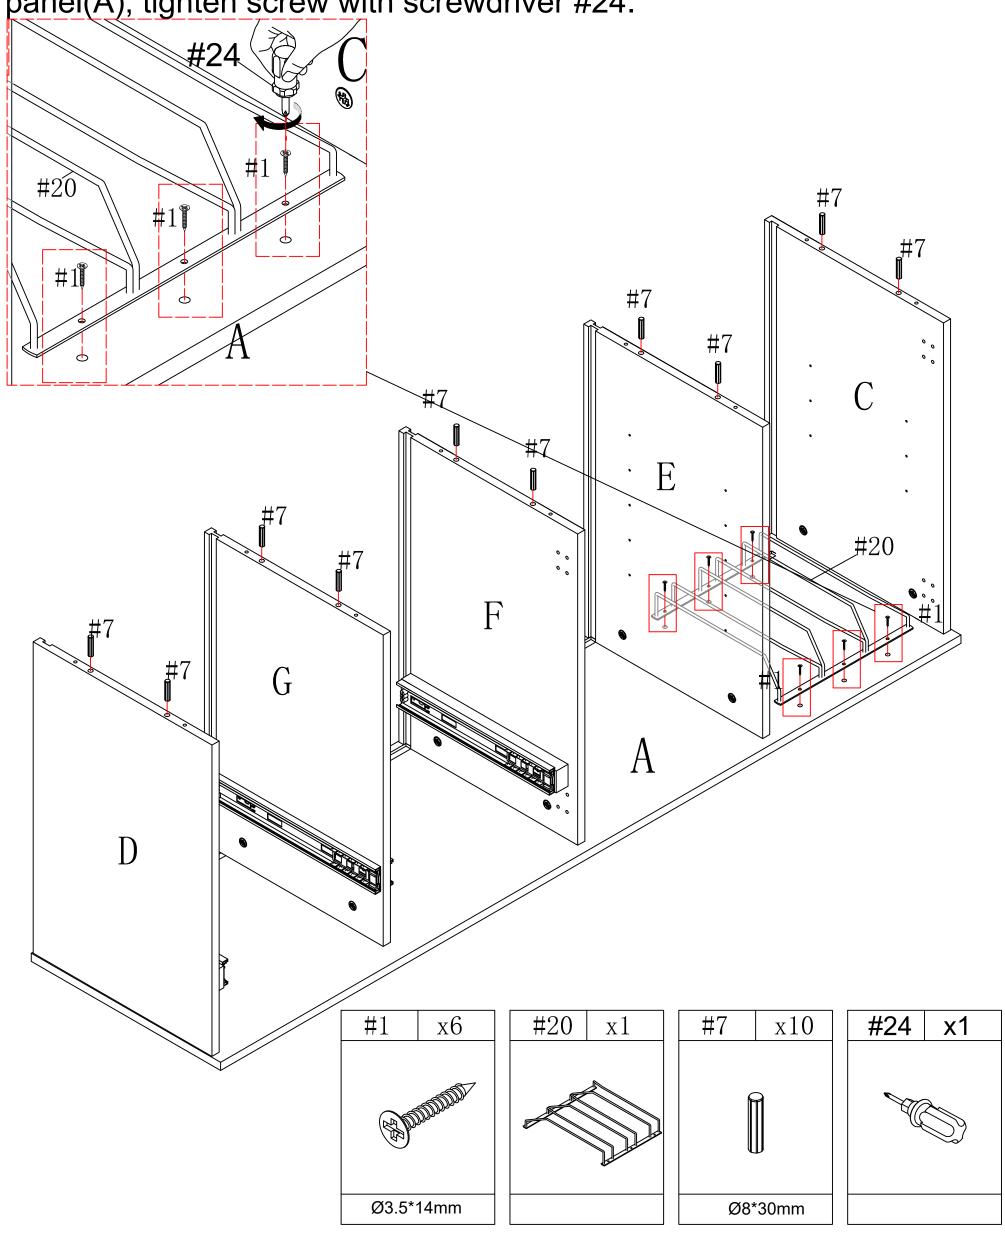

STEP-9


1.slide in the part J into the groove in part D,G and C&E, slide in the part K into the groove in part G&F and F&E. make sure they are also in groove in part A.

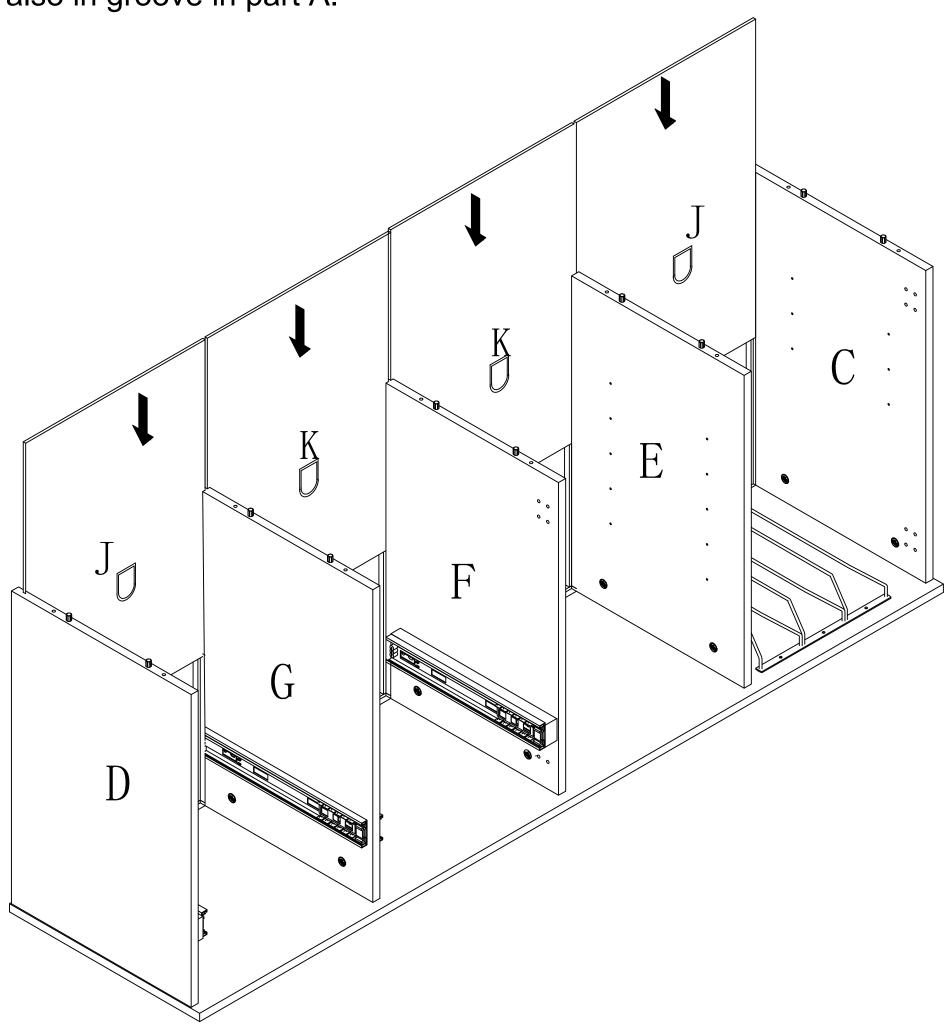

STEP-10


Connect the part B the pre-assembled unit in step 8.

Then align the holes in part B, Insert screw #4 and push it down so that it connects to parts C&D&E&F&G. Next, and tighten the screw #4 with an Allen key #23.

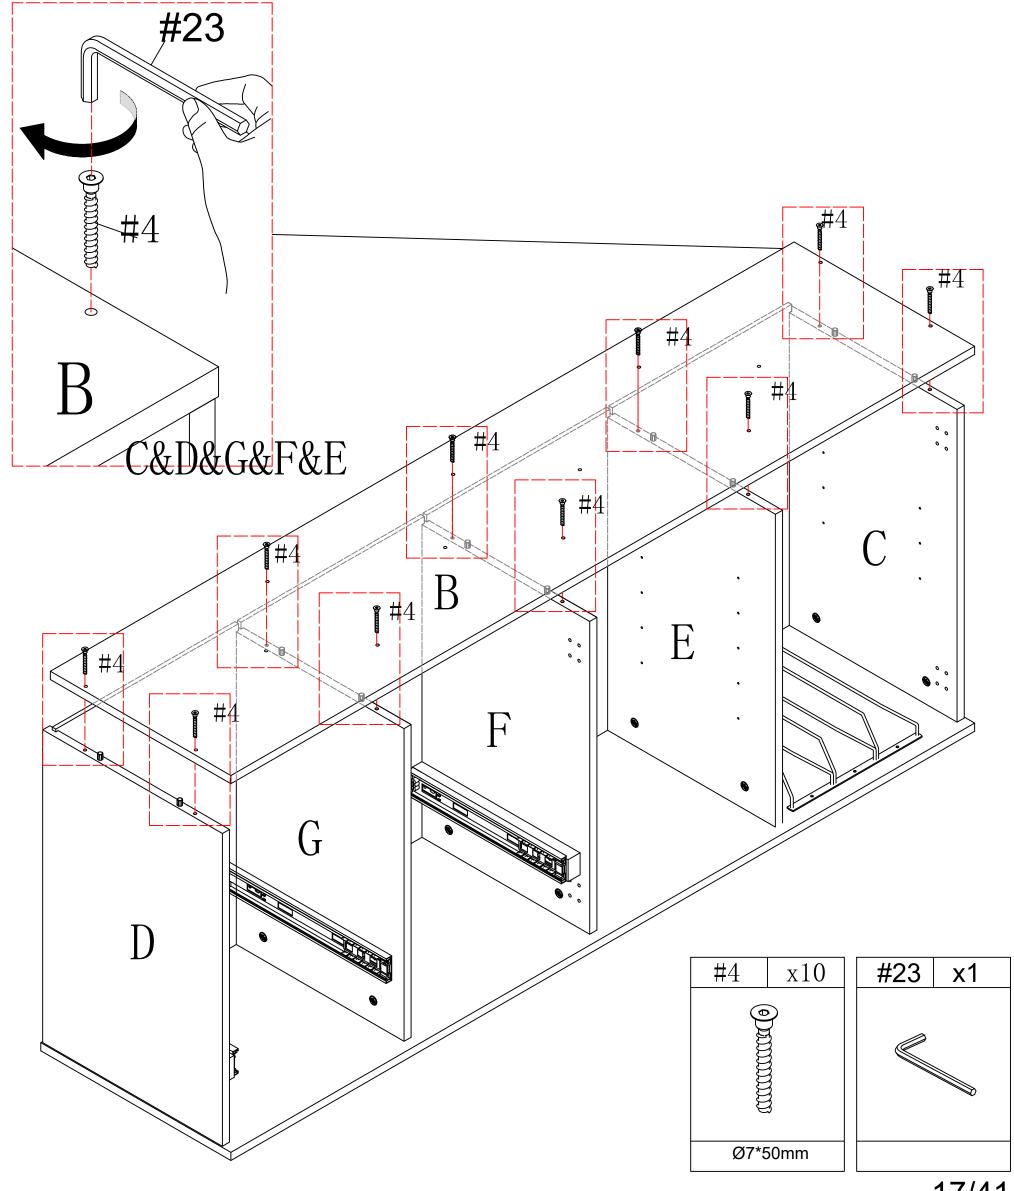


STEP-11


1.Align the holes of part b, insert the bolt #6, and bolt the middle foot into the bolt #Q.

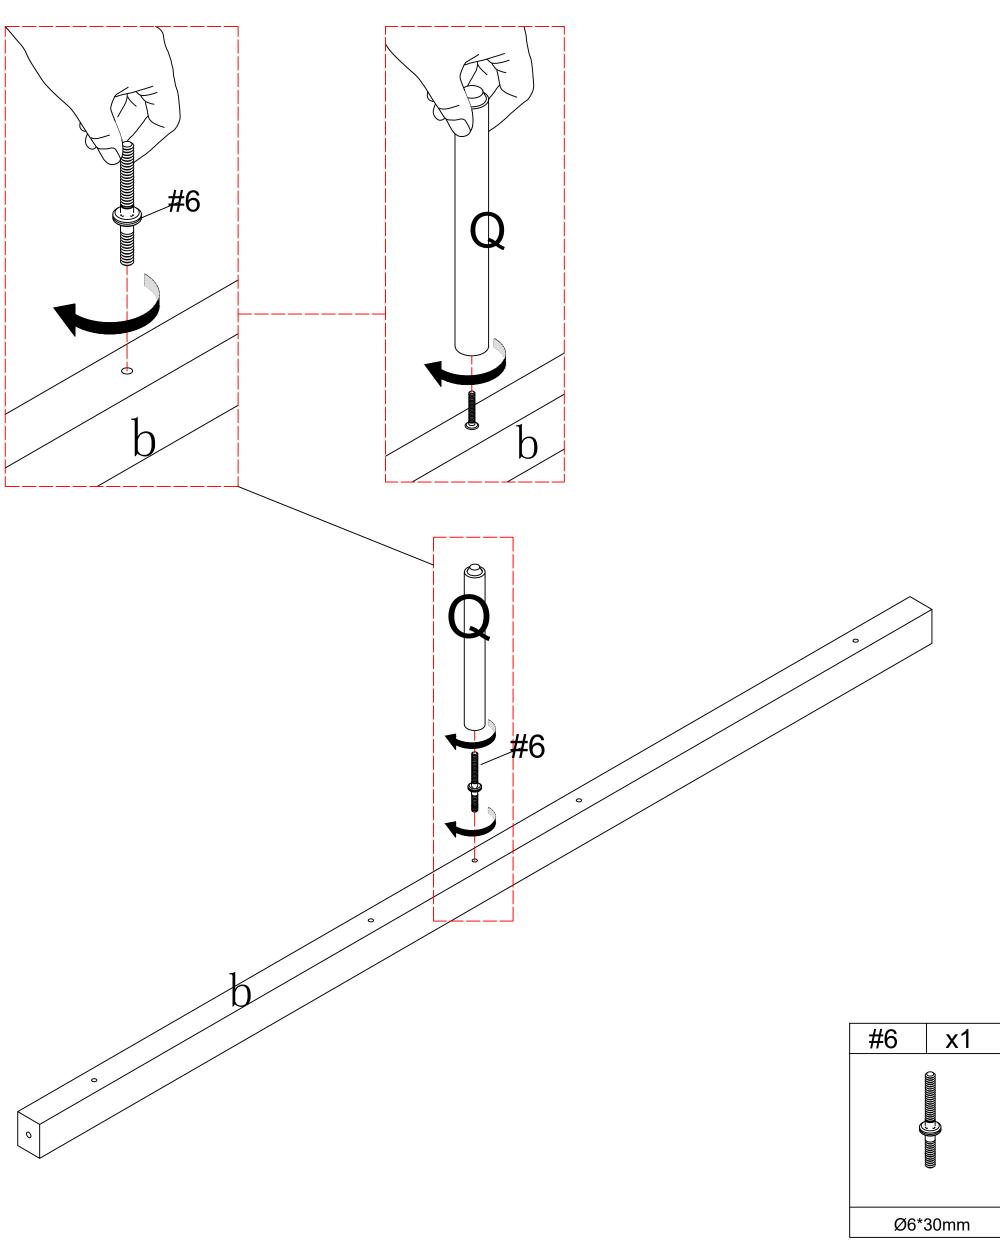

STEP-12

1.Prepare the leg racks. Align the holes of the a part with the holes of the b part, insert the screw #3, and tighten the screw #3 with the allen key #23.

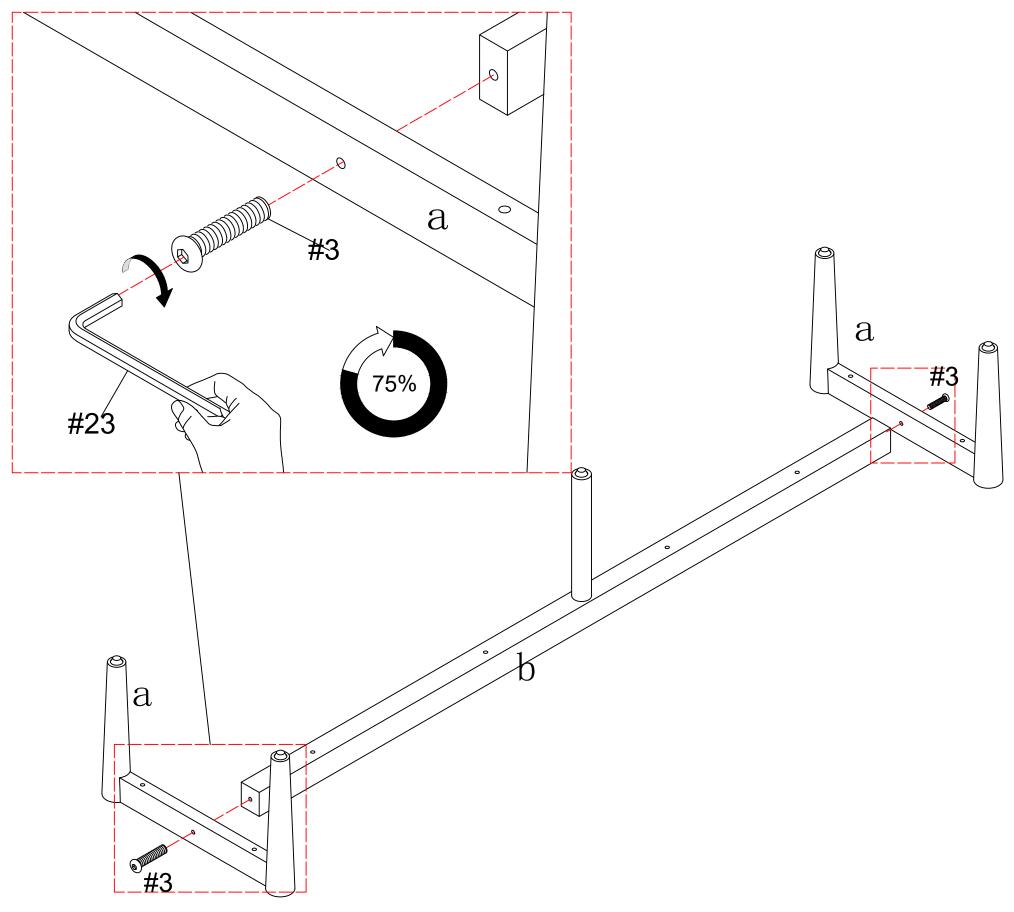


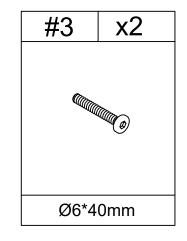




STEP-13


1.connect the leg frame to the cabinet. Attach the leg frame to the pre-assembled unit in step 9 with a screw #2 and tighten #2 with a allen key #23.

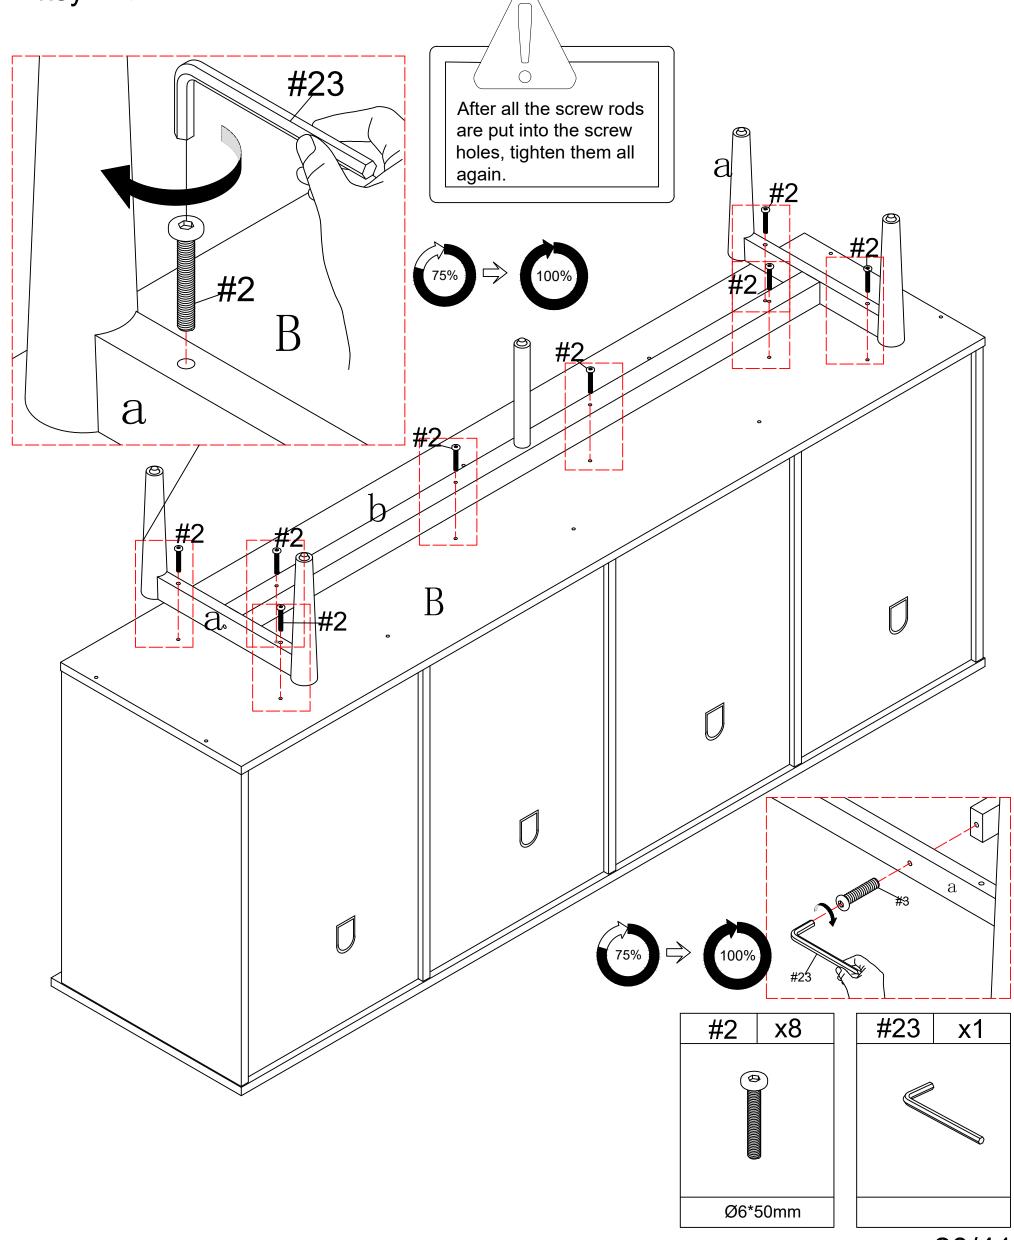



STEP-14

1.Insert hardware #9 into part K&J as shown, screw in screw #1 using screwdriver #24 and tighten fully.

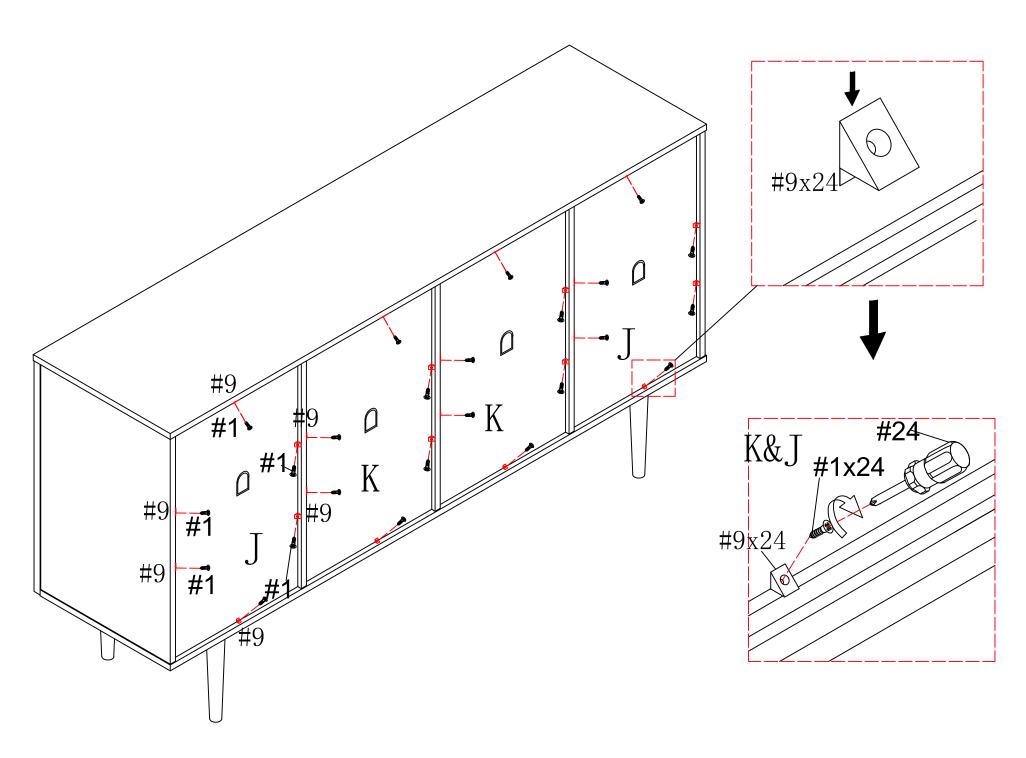


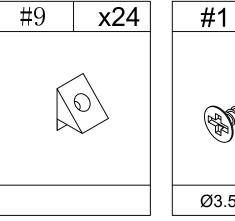

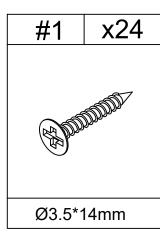

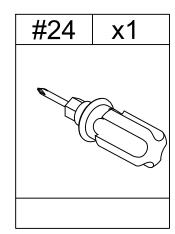


ASSEMBLY INSTRUCTIONSSTEP-15

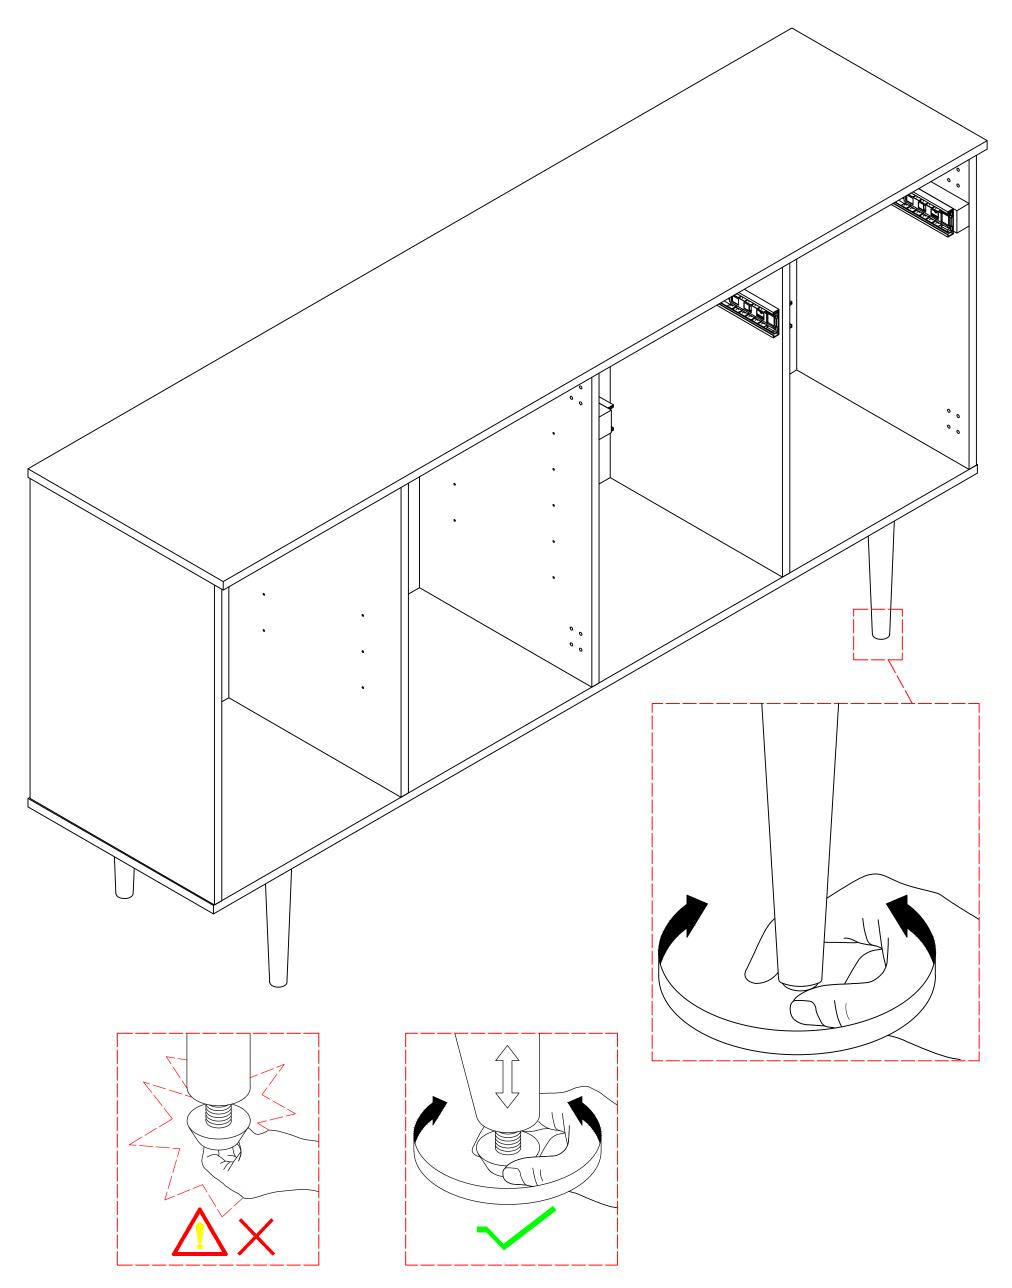


STEP-16

Prepare for part T&V. Align the holes in part A, i tighten with screwdriver #24 tighten #5.

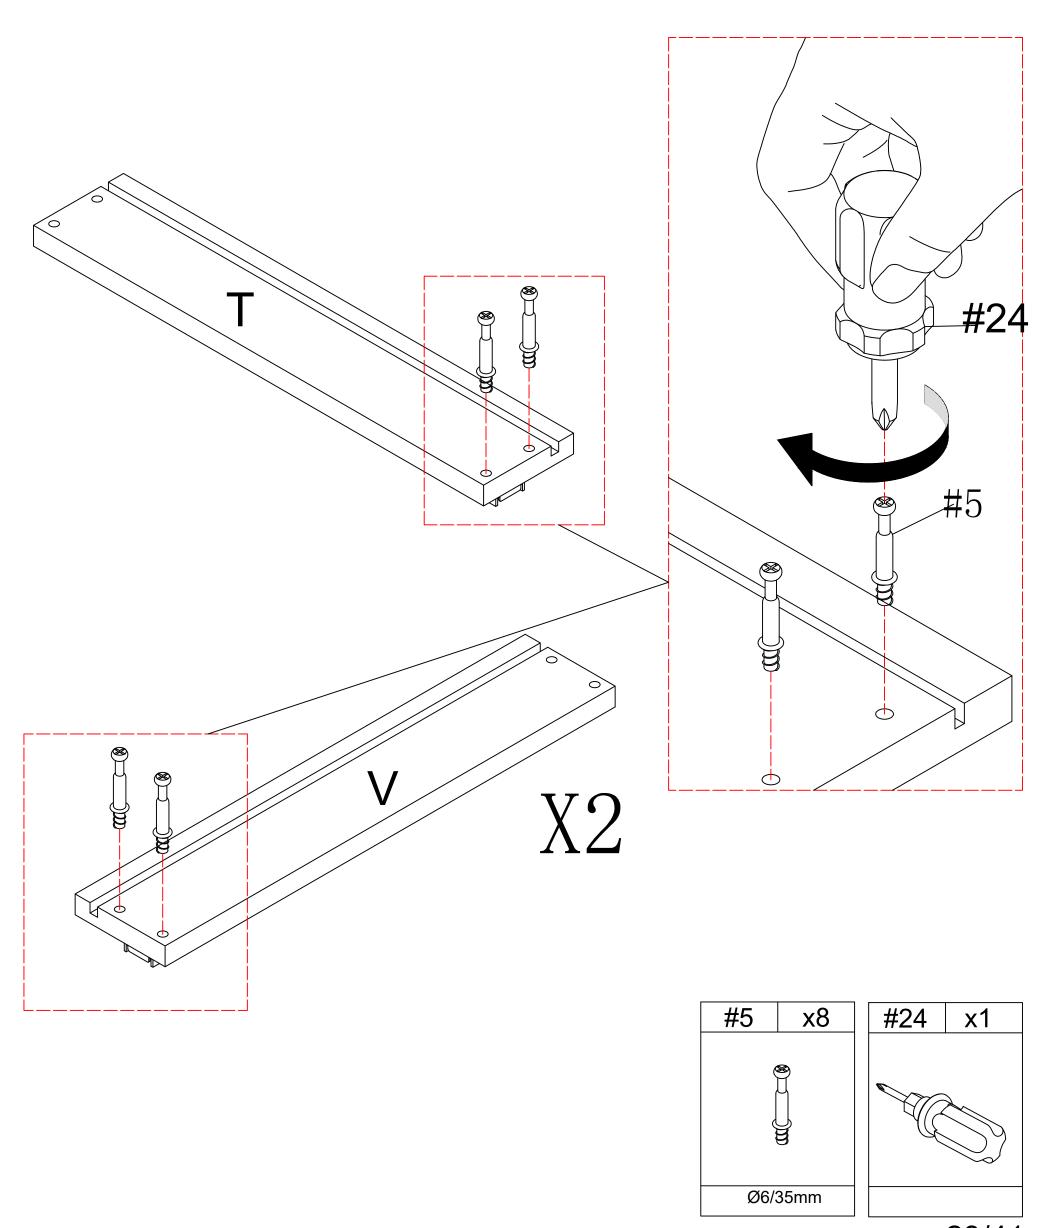


STEP-17

Connect the part R with part T&V align the hole in the part R. ,insert the bolt #5 in part T&V into part R. insert cam bolt #8 into the corresponding hole of side panel R ,and tighten the nuts #8 with a screwdriver #24. After installation, cover the screw holes with #10. Make sure the groove is in same side as picture show. slide in the part Z into the groove in part T&V. make sure they are also in groove in part R.

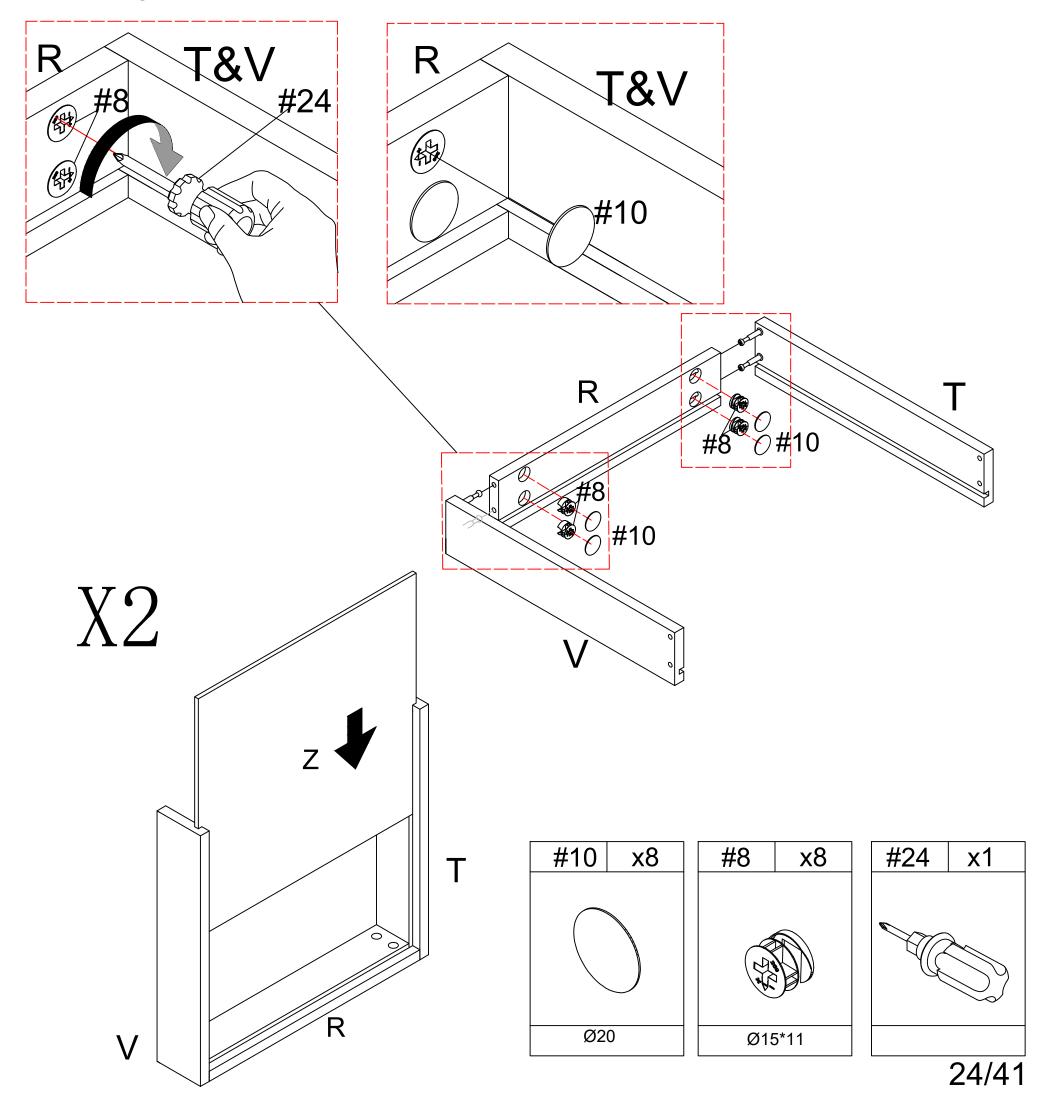


STEP-18

1.Attach the part X to the pre-assembled unit in step 16 with a screw #12 and tighten #12 with a screwdriver #24

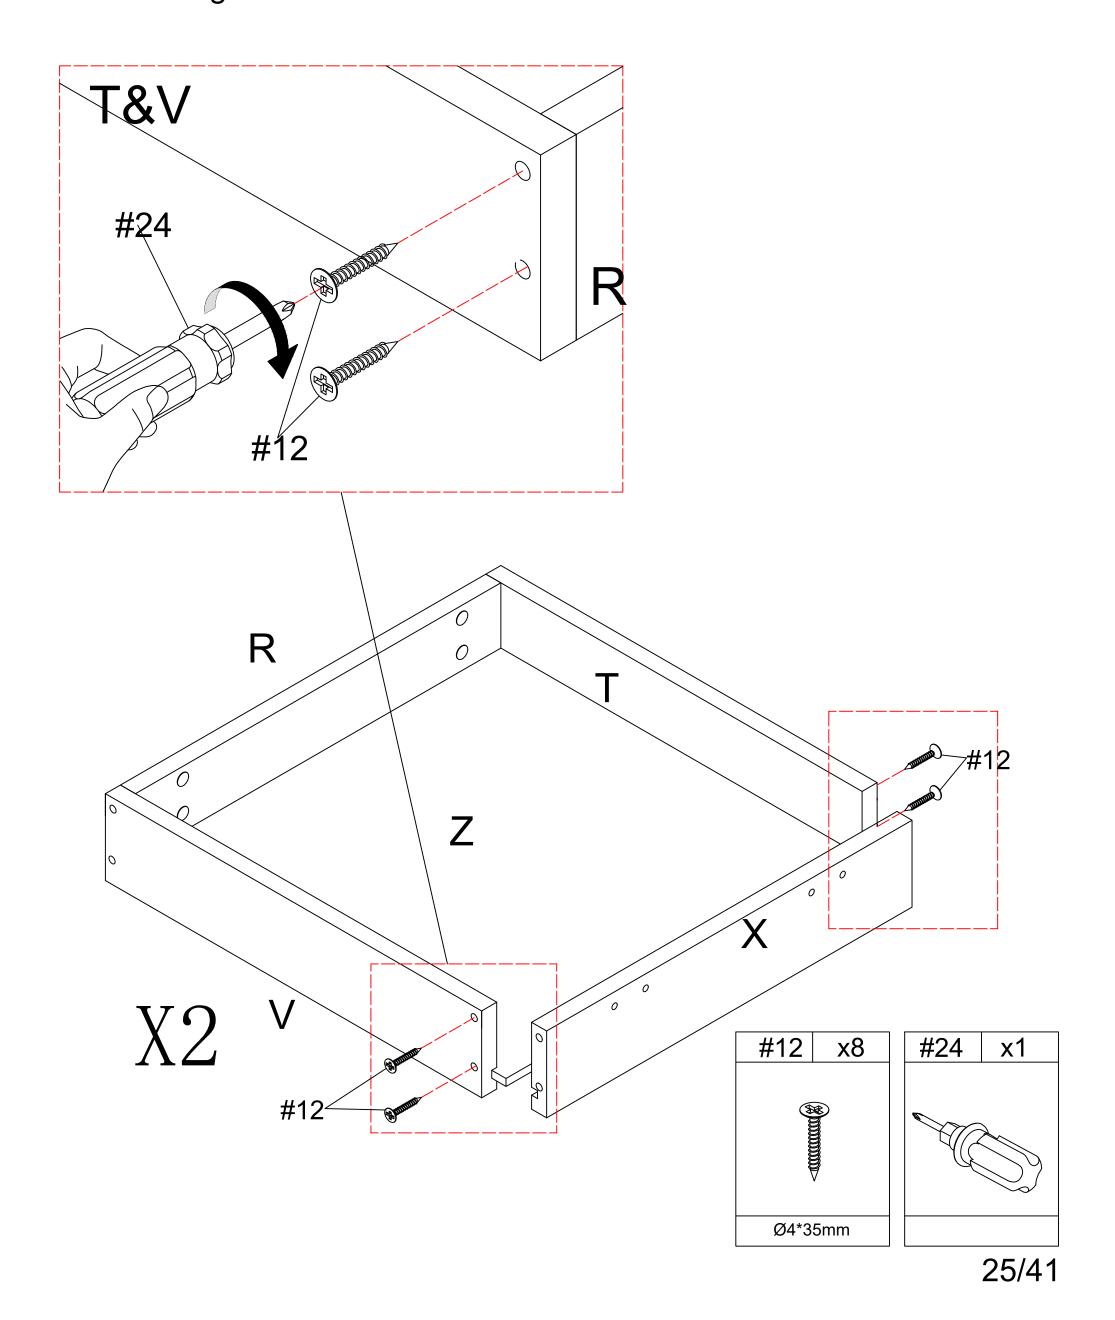


STEP-19

Use #1 screws to fix the slide rail #19 to the corresponding position of the part (T&V), and tighten the screws with a screwdriver#24.

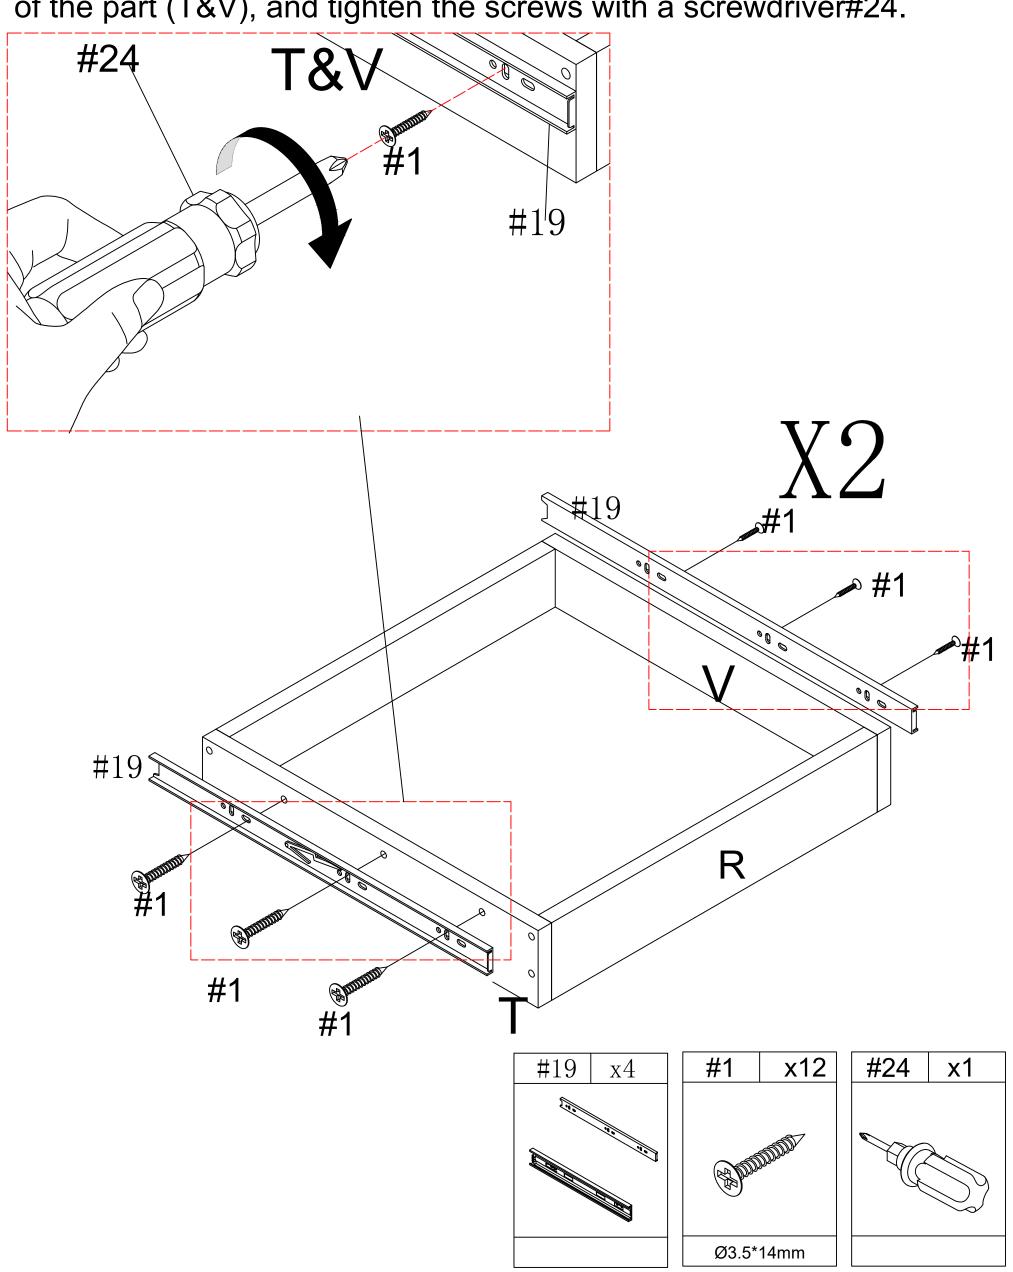


STEP-20

1.Connect part (U&S) to part W using screw #12 and tighten it with screwdriver #24 .Slide in the part (Y) into the groove in part (S&U). make sure they are also in groove in part (W).

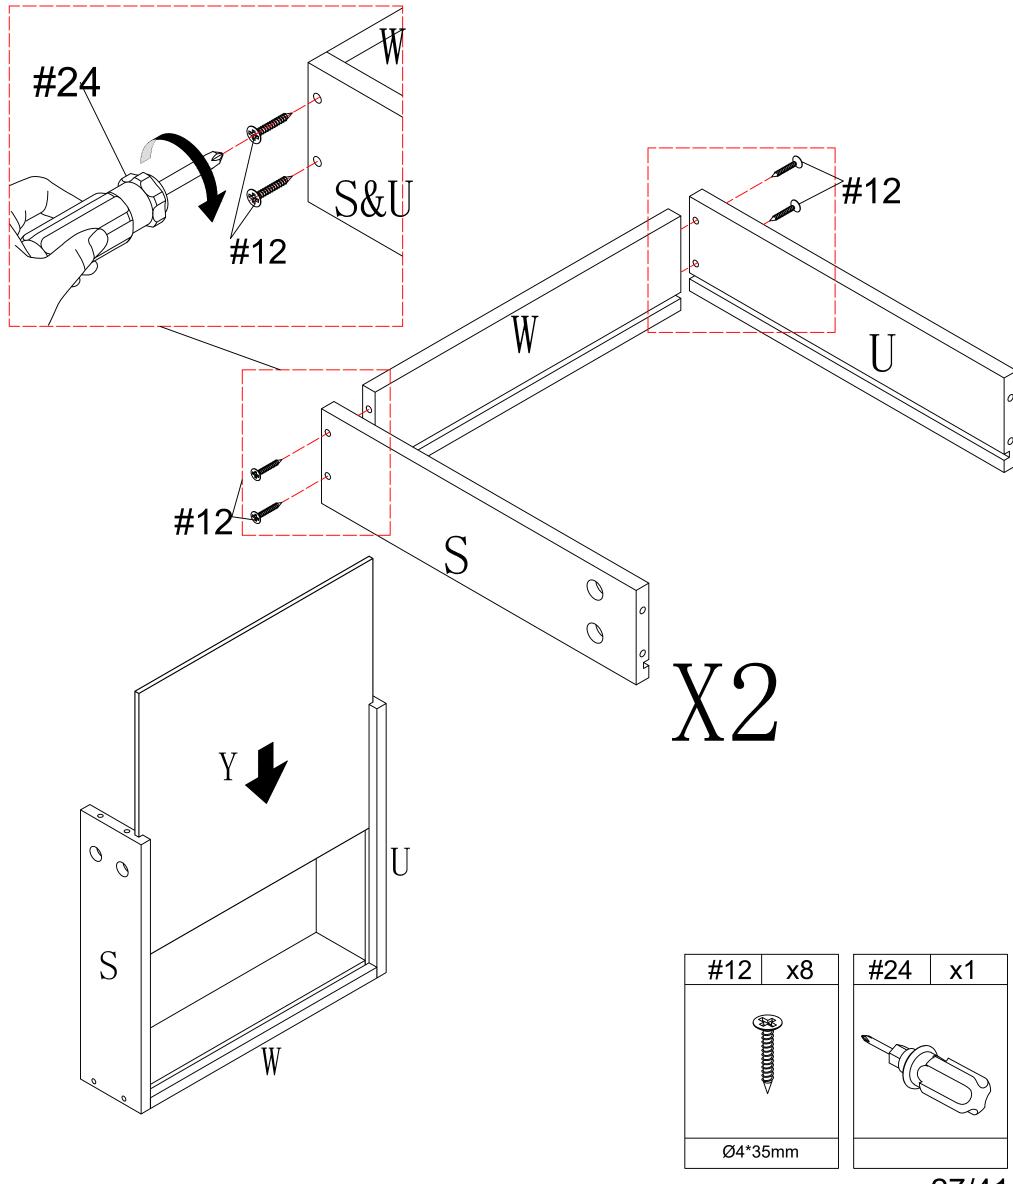


STEP-21

Align the holes in part P, tighten with screwdriver #24 tighten #5. Connect the part P with part S&U align the hole in the part <u>S&U</u>, insert the bolt #5 in part P into part S&U. insert cam bolt #8 into the corresponding hole of side panel S&U, and tighten the nuts #8 with a screwdriver #24. After installation, cover the screw holes with #10. Make sure the groove is in same side as picture show.

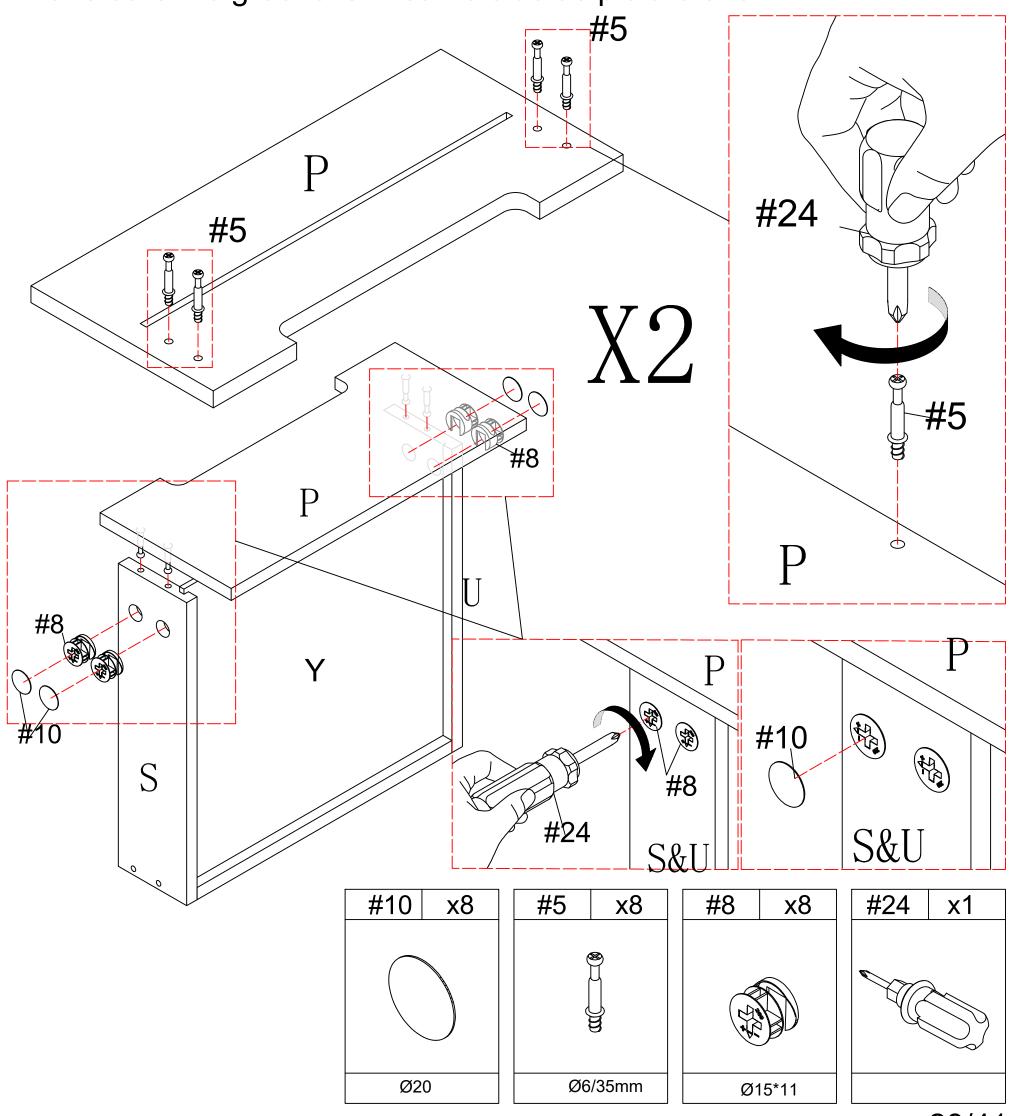


STEP-22

1.Use screw# 1 to attach hinge #22 to the corresponding hole of panel(W&X), tighten screw with screwdriver #24.

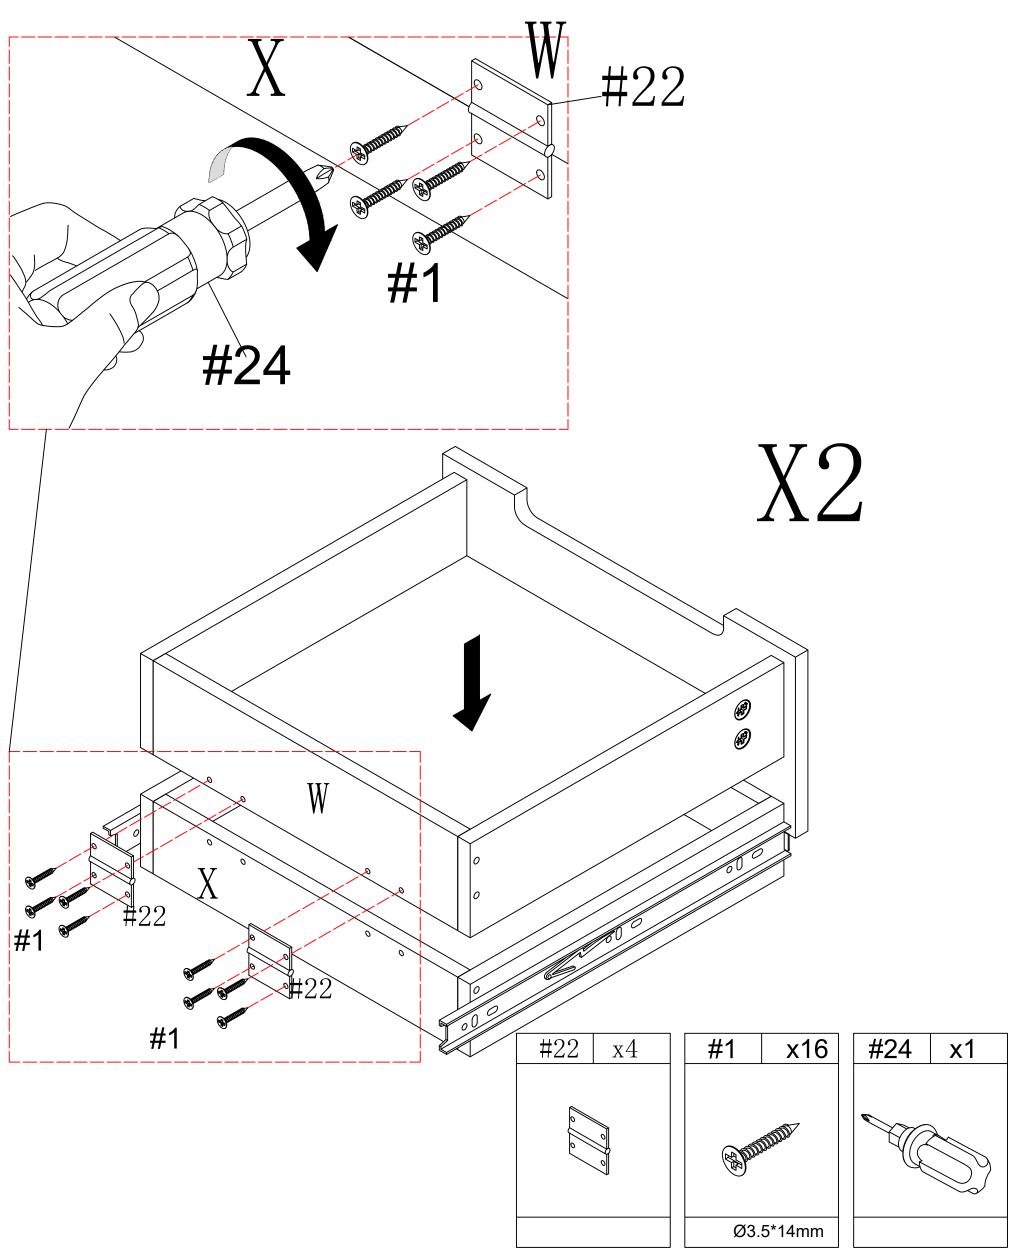


- 1.Use screw #1 to attach the hinges #18 to door panel (O&N), tighten screws #6 with screwdriver #24.
- 1.Use screw# 1 to attach handle #11 to the corresponding hole of panel(O&N), tighten screw with screwdriver #24.

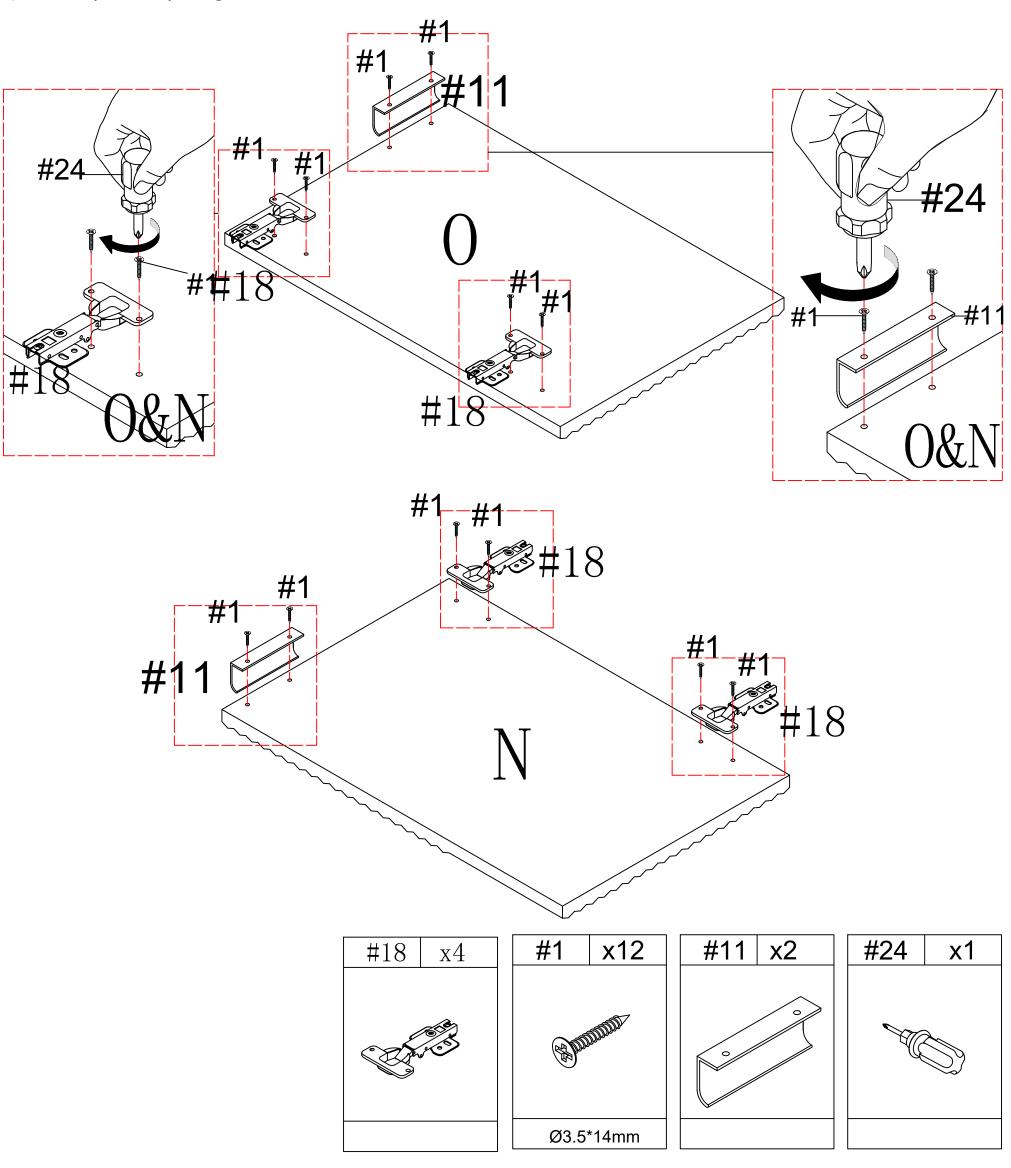


ASSEMBLY INSTRUCTIONSSTEP-24

1.Use screw #1 to attach left door (N) and right door (O) to pre-assemble unit at step 14 ,tighten screw #1 with screwdriver #24 .

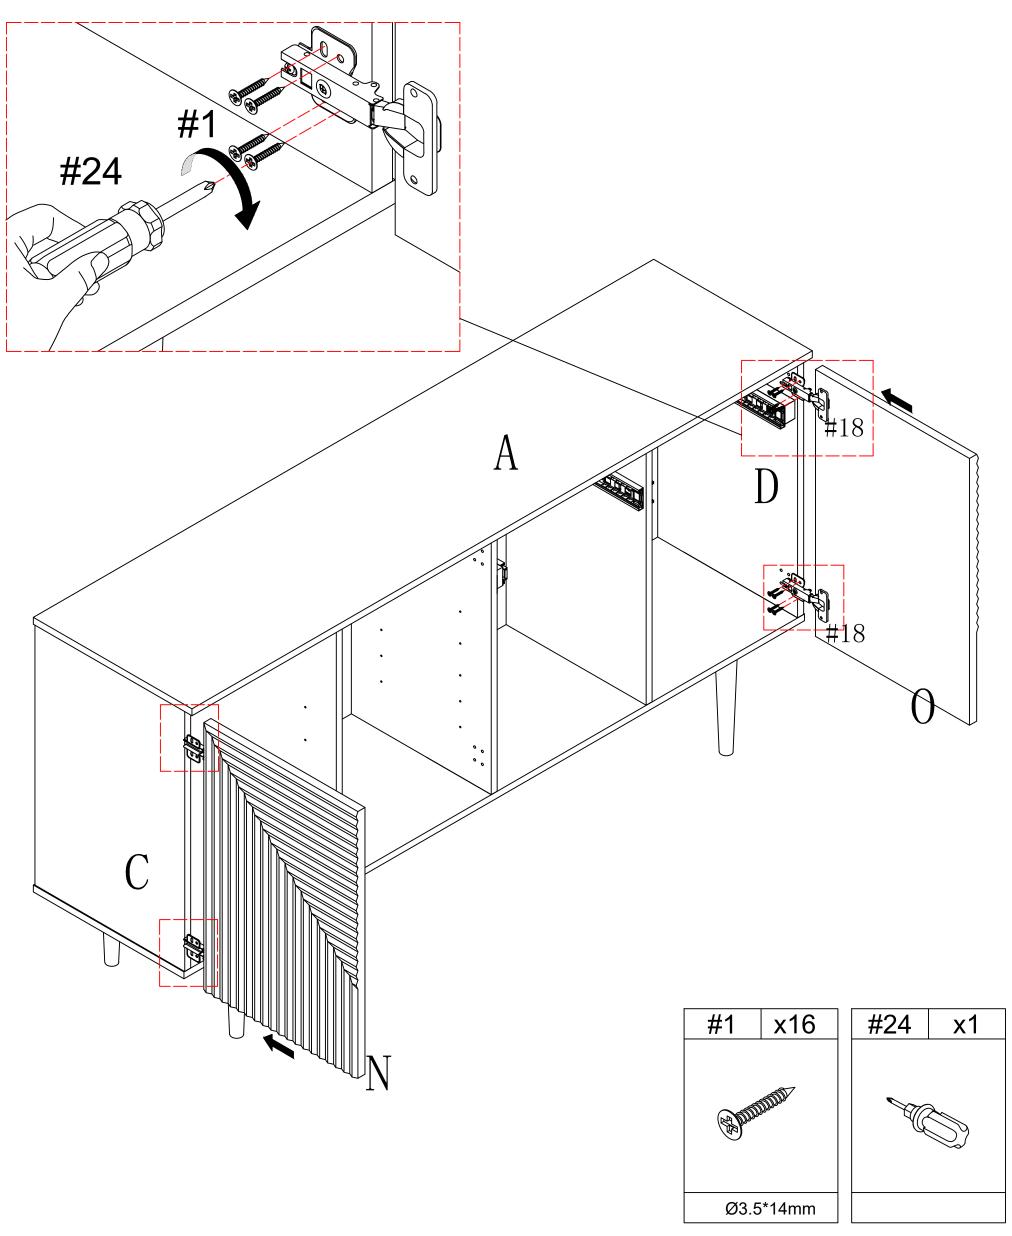


- 1.Use screw #1 to attach the hinges #17 to door panel (O&N), tighten screws #6 with screwdriver #24.
- 1.Use screw# 1 to attach handle #11 to the corresponding hole of panel(O&N), tighten screw with screwdriver #24.

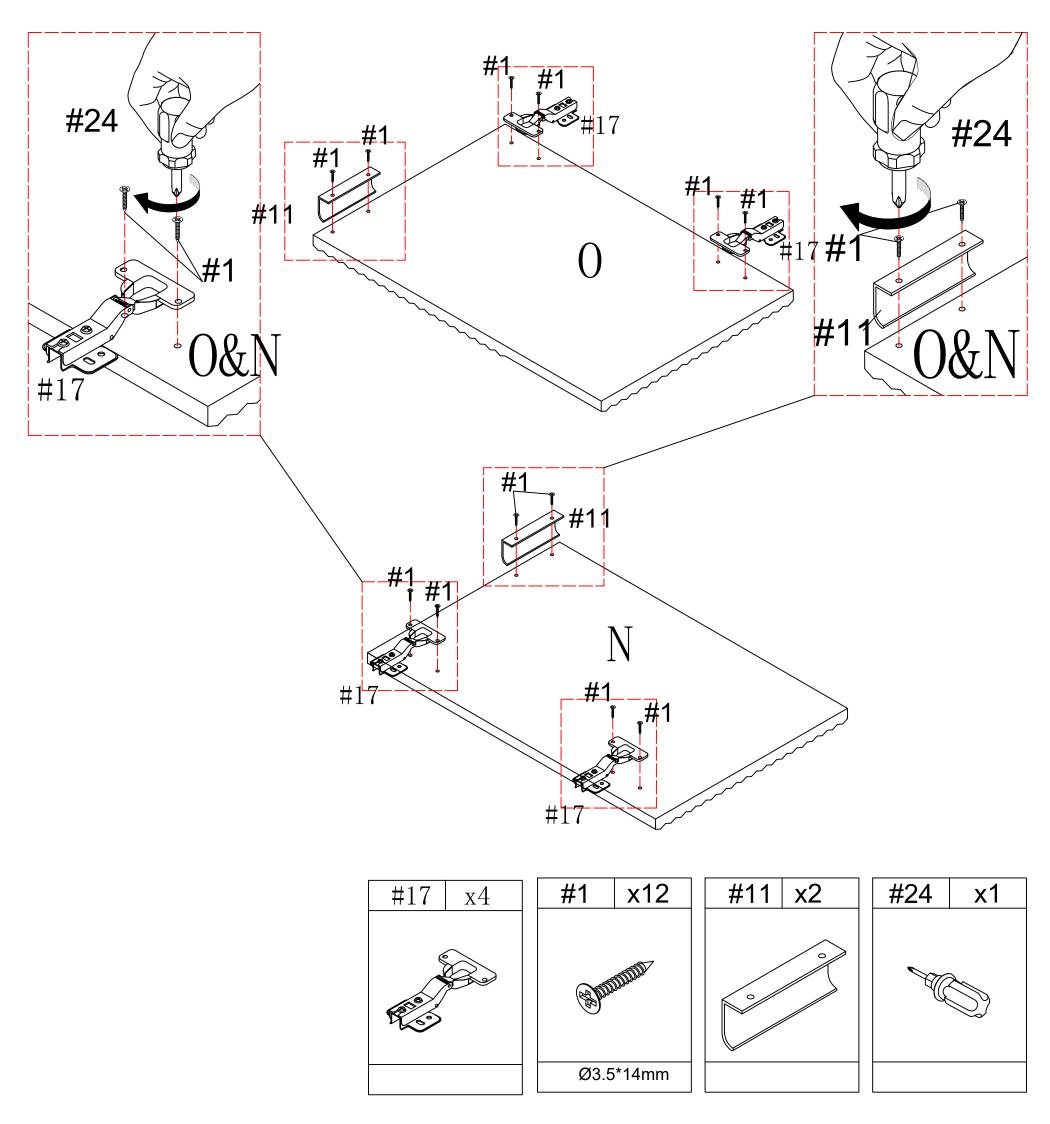


STEP-26

1.Use screw #1 to attach middle door (O) to pre-assemble unit at step 25 ,tighten screw #1 with screwdriver #24 .

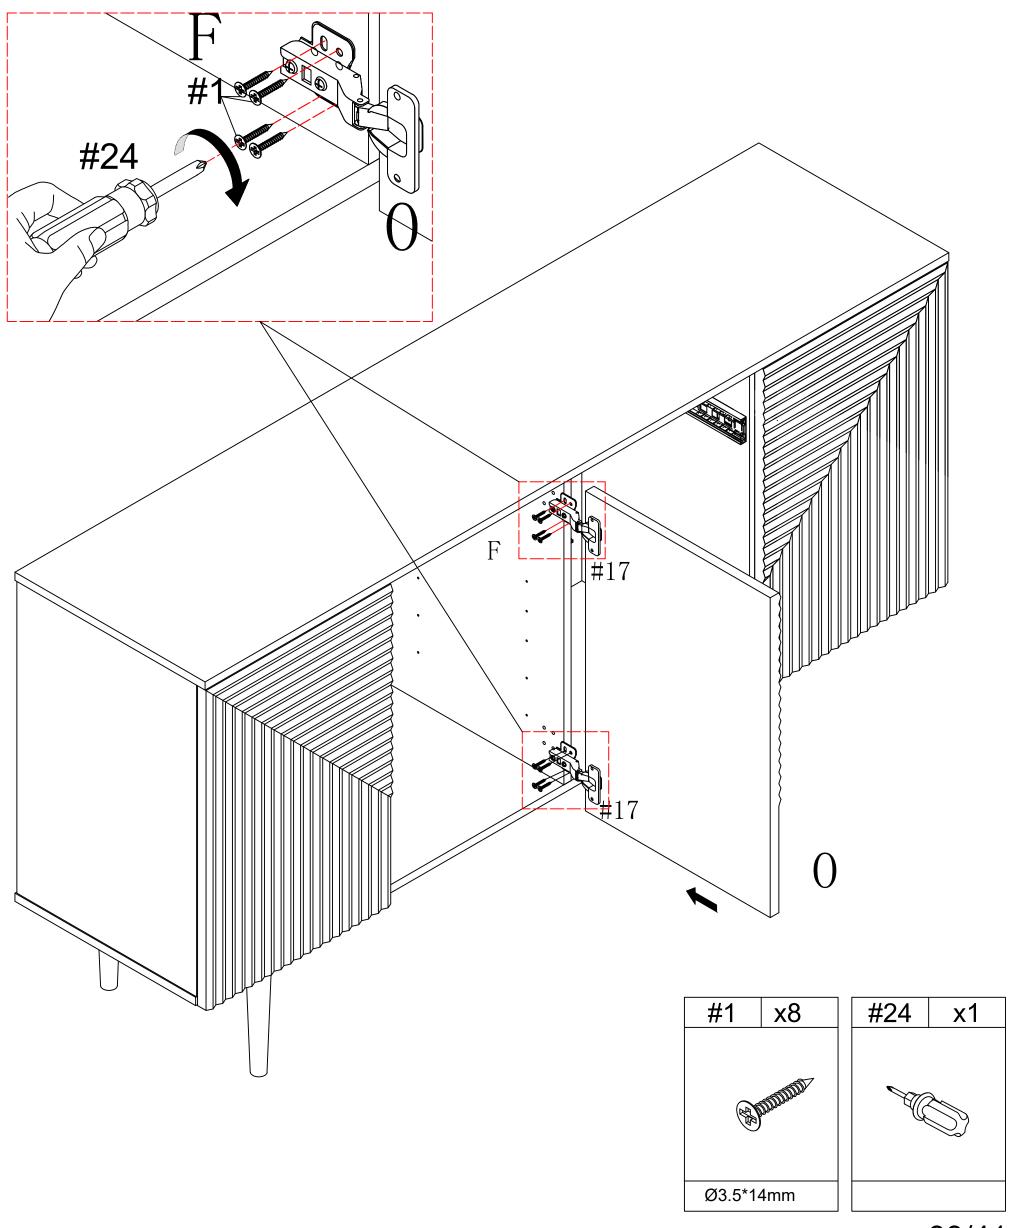


ASSEMBLY INSTRUCTIONSSTEP-27

1.Use screw #1 to attach middle door (N) to pre-assemble unit at step 27 ,tighten screw #1 with screwdriver #24 .

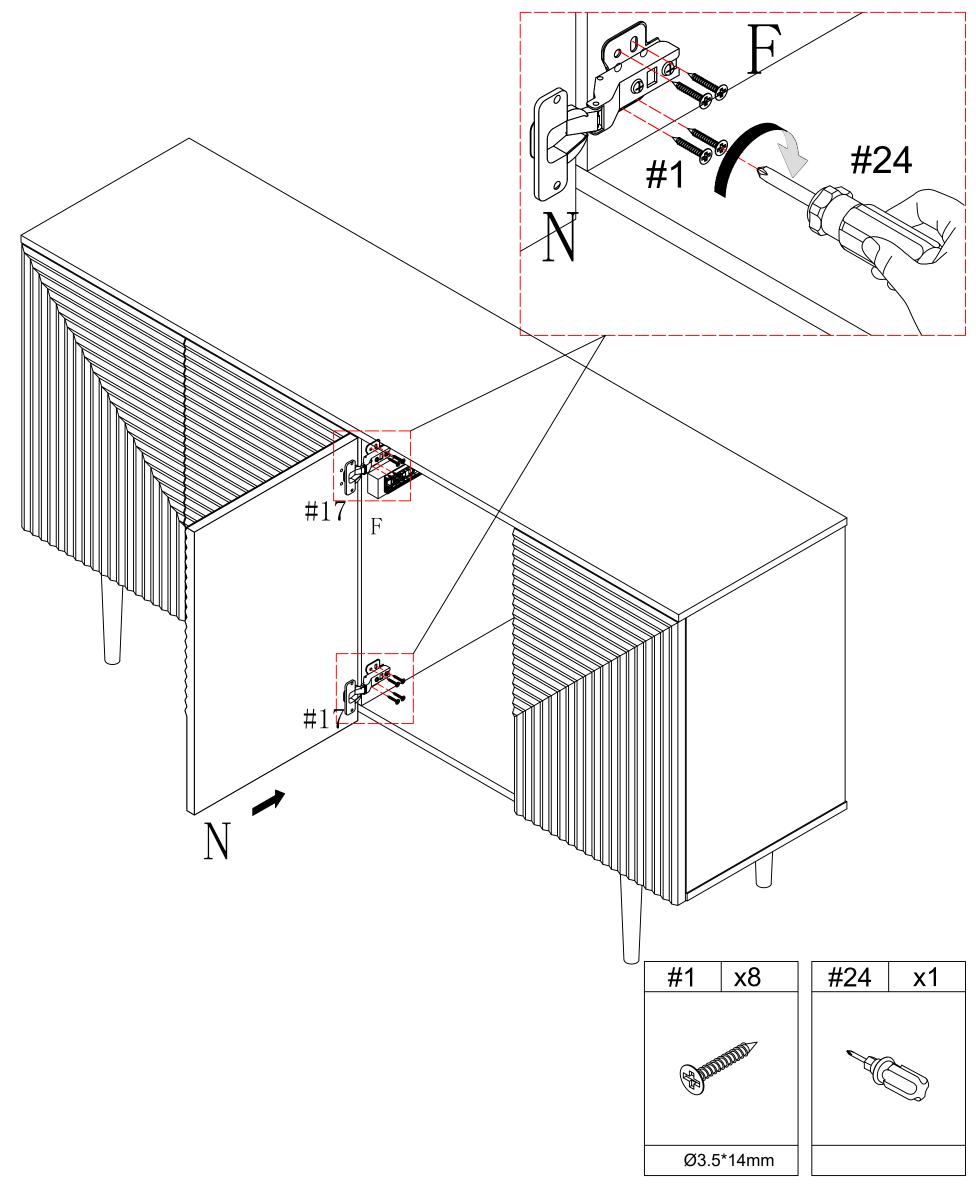


STEP-28

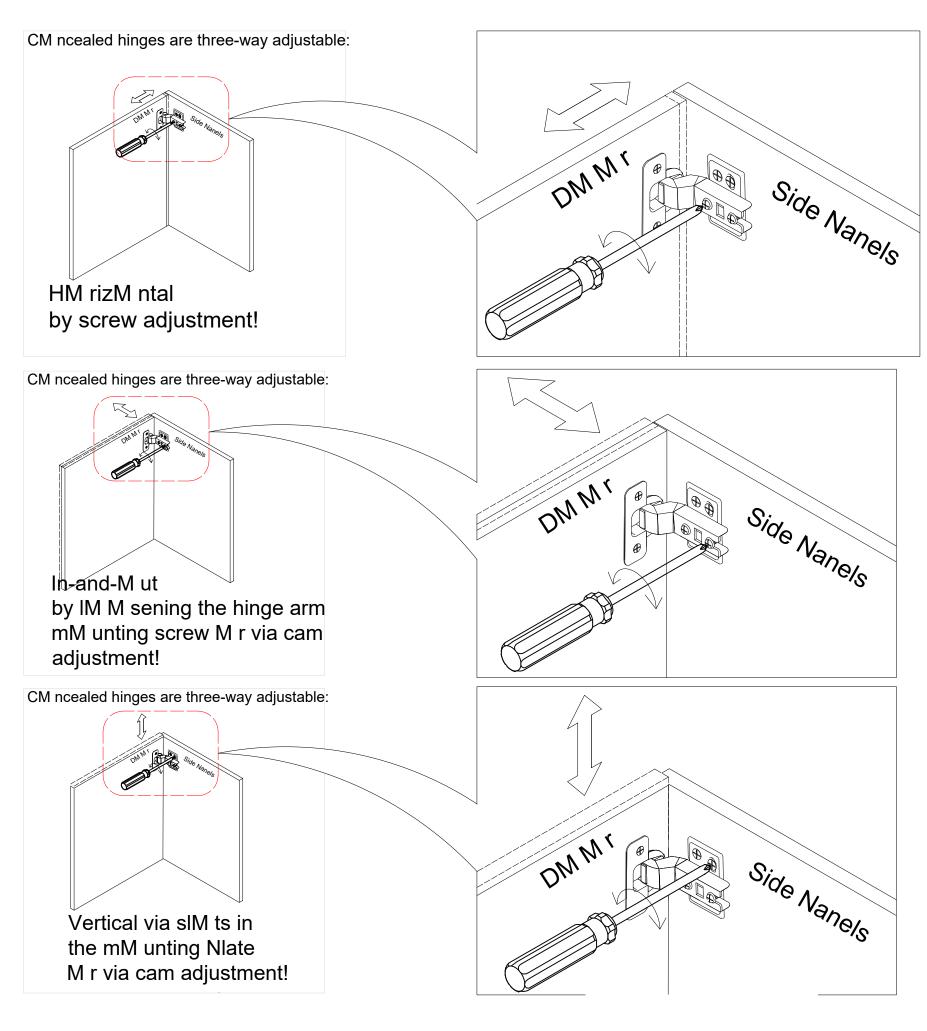




Hinge adjustment method


ASSEMBLY INSTRUCTIONSSTEP-29

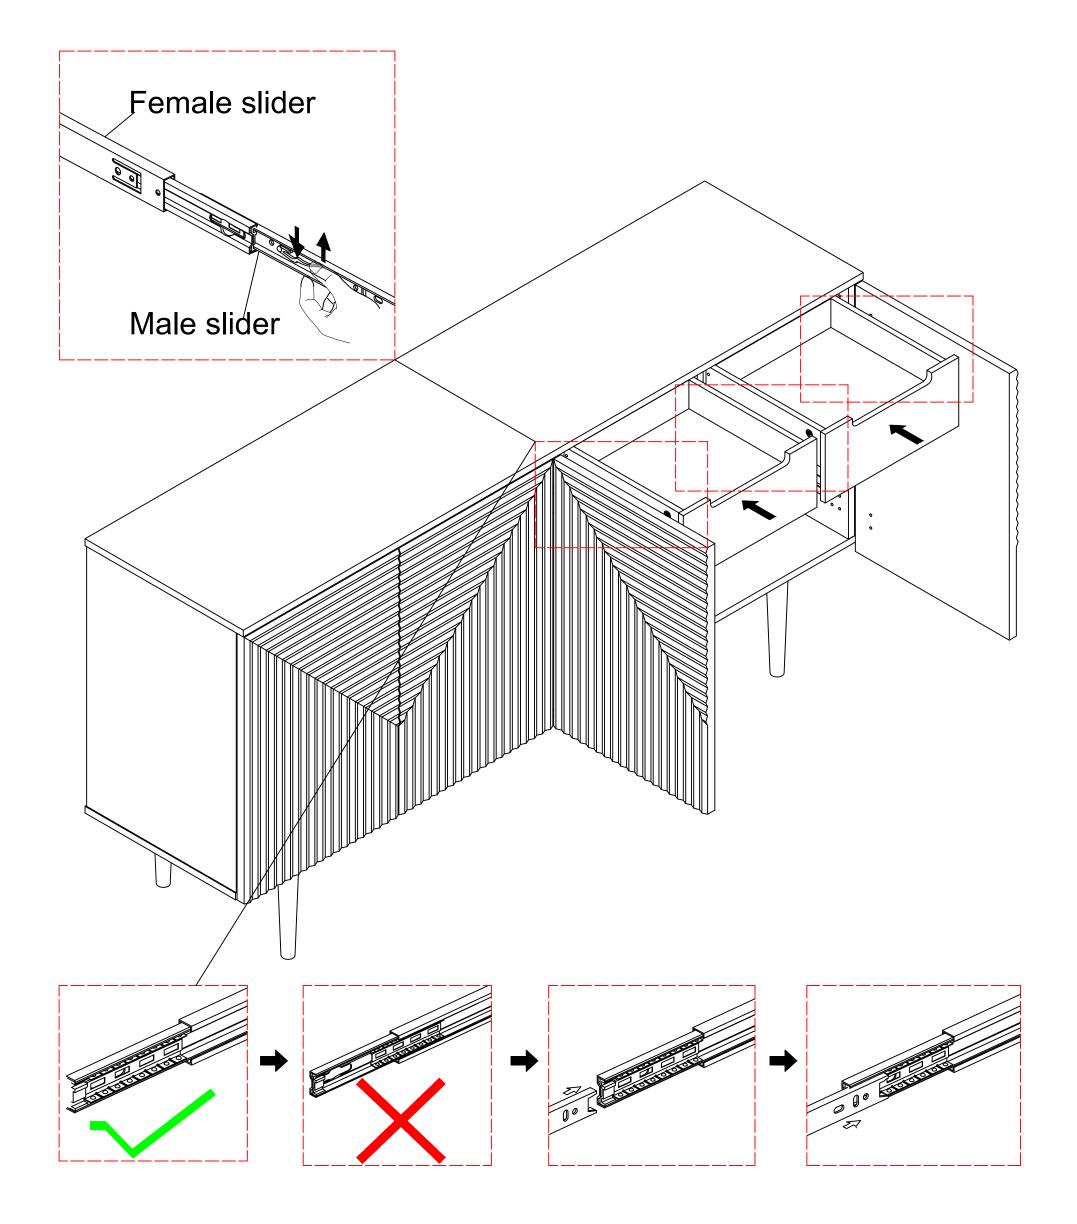


STEP-30


Place the adjustable shelf #H&I into the pre-assembled unit in step 30 and insert the shelf pins #16 into the side panels C&E&F.

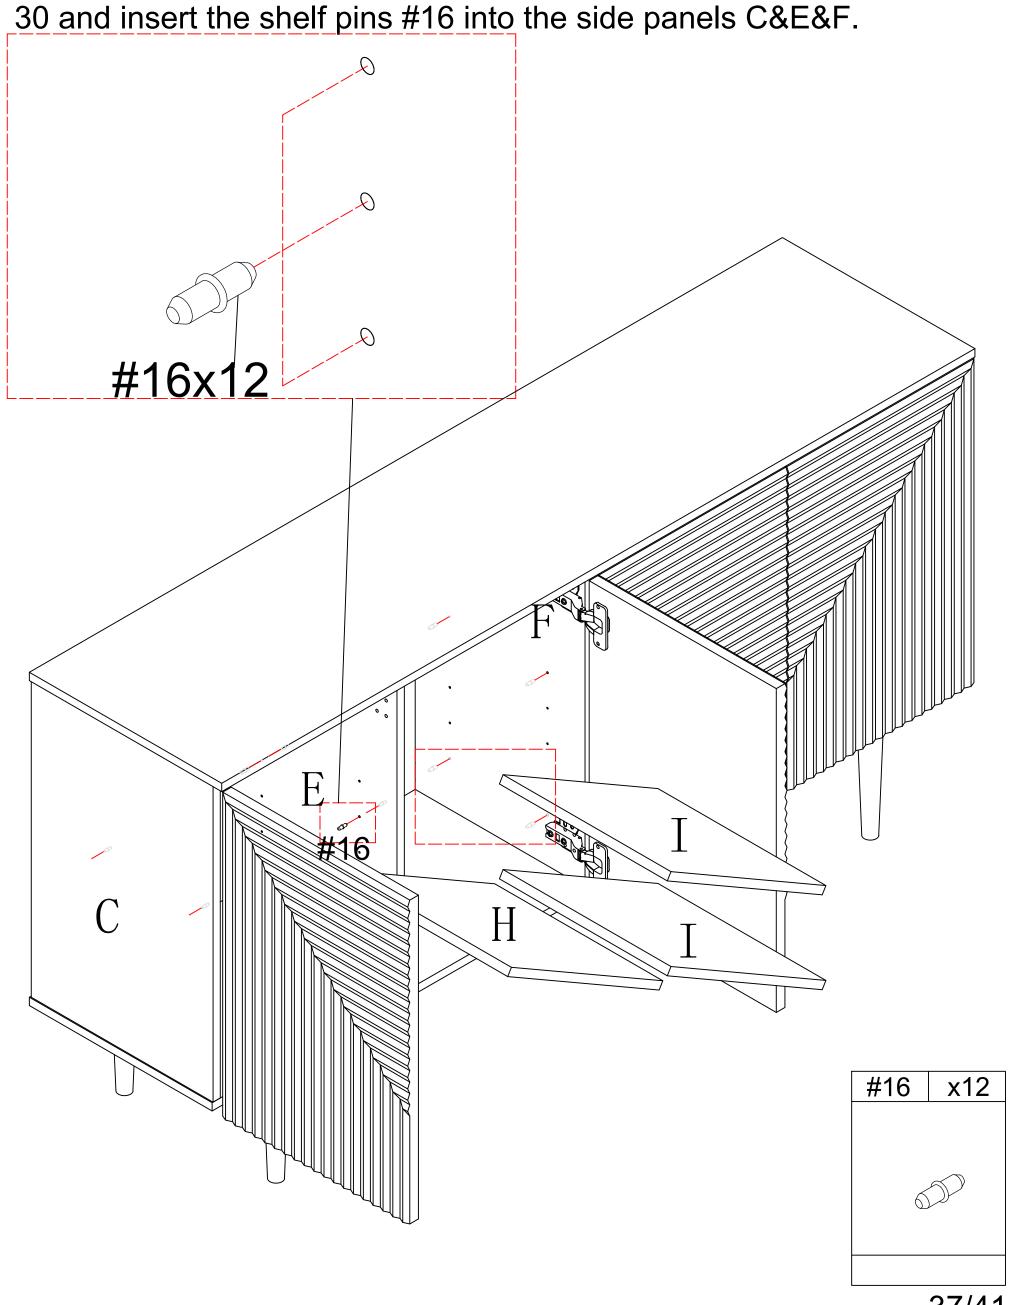

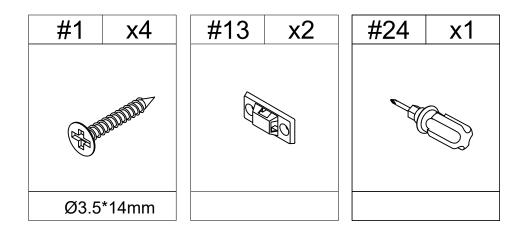



- 1.Use screw #1 to attach part #13 to pre-assemble unit at step
- 31, tighten screws with screwdriver #24.

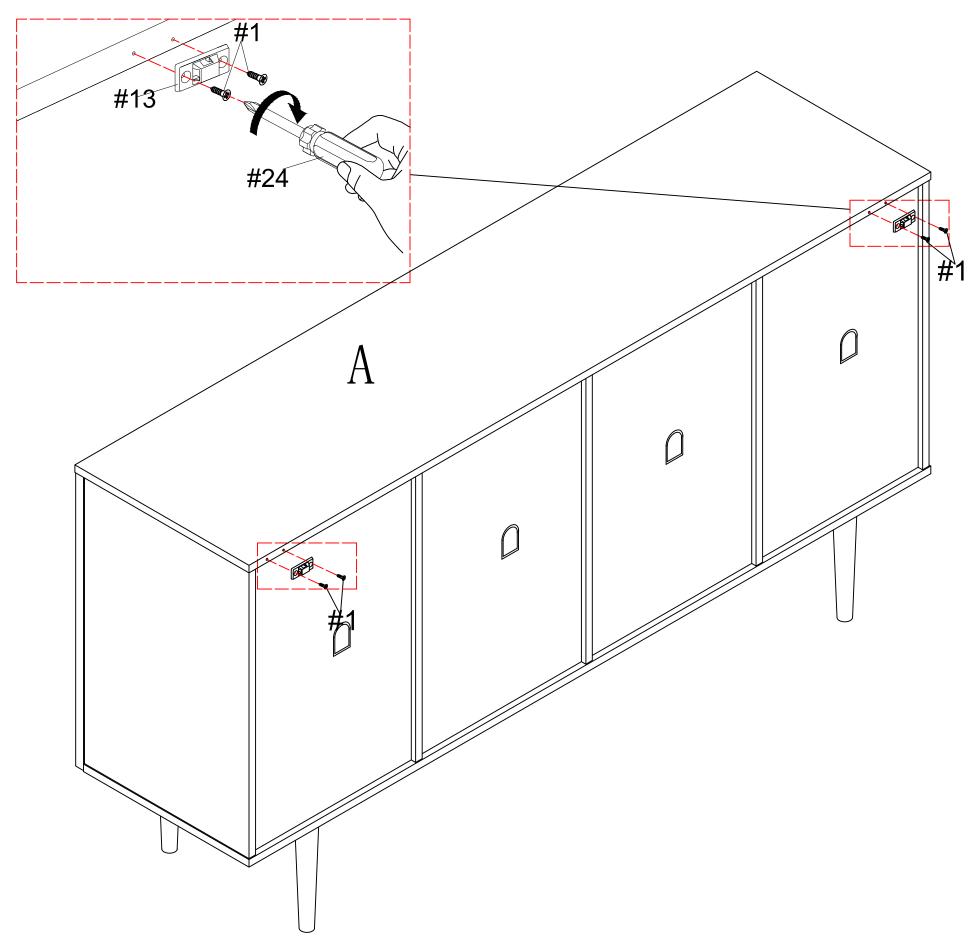


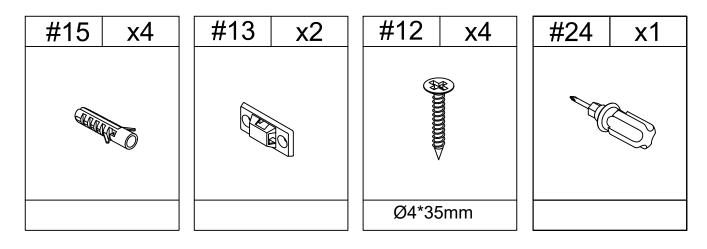

- 1.Install the anti-collapse device.
- 2.Mark the position on the wall, that corresponds to the location of part#13 on the of panel (A); Drill and insert the expandable screw #15 by hammer.
- 3.Assemble the part #13 to the wall. Align the hole in the part #13 with the expandable screw #15, use screw #12 to attach it and tighten by screwdriver#24.

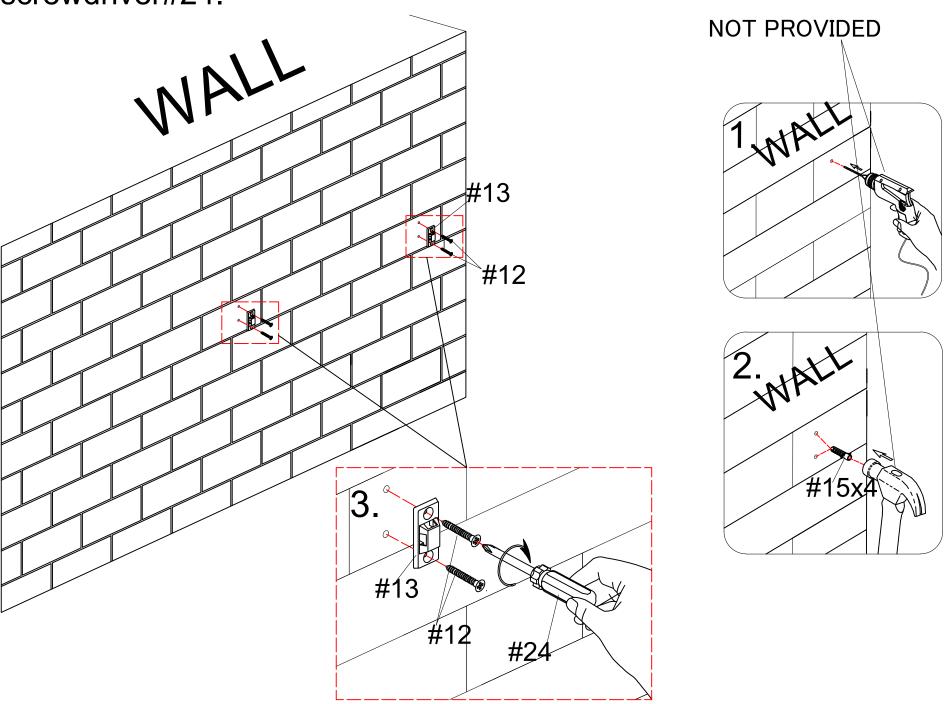

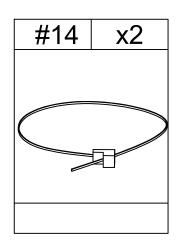

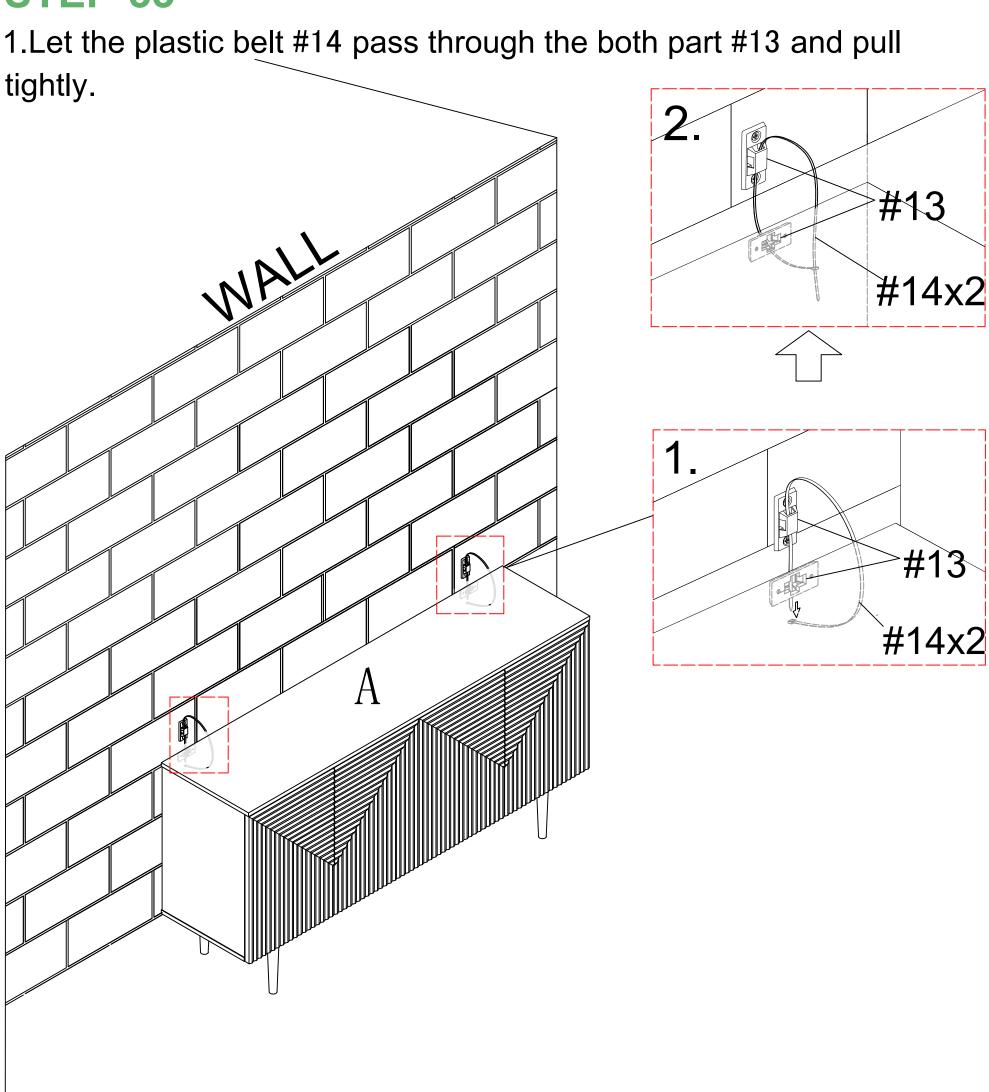

WARRANTY

- 1.We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
- 2.We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
- 3.Replacement parts by purchasing them with our company if they are available.

Are you having difficulty
With assembly? Missing parts?
Please send email with your order No to
customerservice@hulalahome.com

For return, please check the return policy with the retailer or market place you bought from.

Appreciate your purchasing from us. Pop up your life by our furniture piece!