

ITEM NO.SCBSD0807

NOTE:


This brochure contains IMPORTANT safty info. Please read and keep for future reference.

MAINTAINANCE AND WARNING


- 1.Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight, material will possibly fade over time.
- 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protected by a padded barrier.
- 6.Not for commercial use, only for residential use.



EXPLOSIVE VIEW

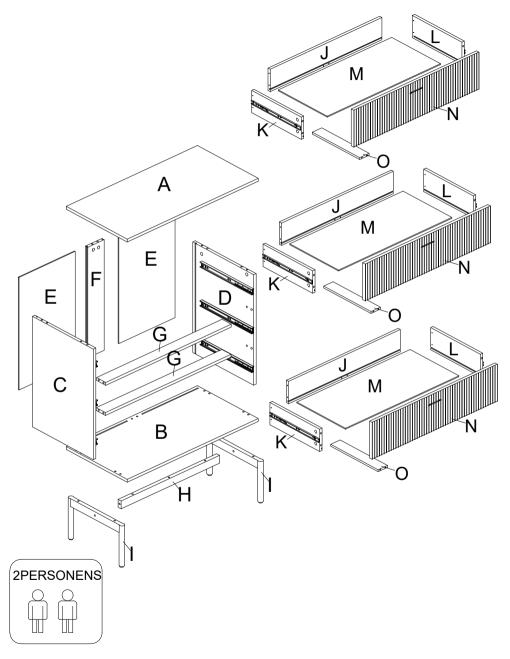

PARTS LIST

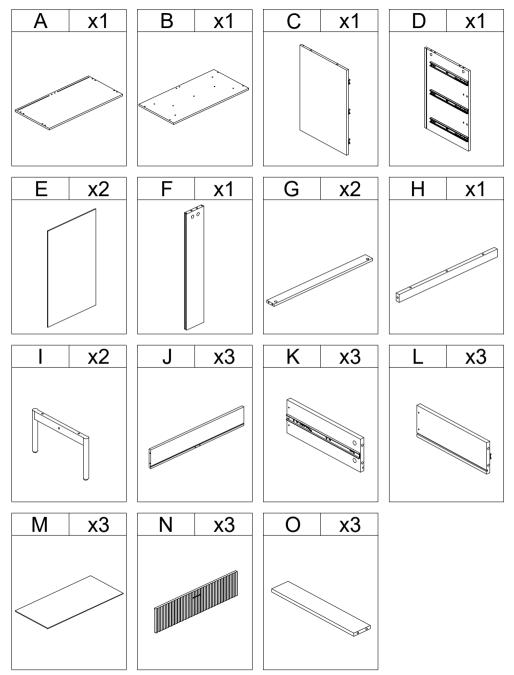

HARDWARE LIST

#1	x16	#2	x7	#3	x2	#4	x6	#5	x6
The second secon		6 Marine		J.		O Management		Company (CC)	
Ø3	¢3.5*14mm		M6*50mm		M6*35mm			M7*	*50mm
#6	x28	#7	x22						
All So		Sec. 1	MMMMMM -						
¢6*35mm M4*35mm									

HARDWARE SPARE LIST

#1	x1	#2	x1	#3	x1	#4	x1	#5	x1
The second secon		Oleven		J.		Orania		COMPANYANE CO	
Ø3	3.5*14mm	M	6*50mm	Me	6*35mm			M7'	*50mm
#6	x2	#7	x2						
Carlos Ca		(B)	MIMMM -						
ø6*35mm M4*35mm									


HARDWARE LIST


#8	x12	#9	x28	#10	x12	#11	x28	#12	x3
		X		<u>lo</u>					
ø8*30mm		ø15*11mm				¢20mm			
#13	x4	#14	x4	#15	x2	#16	x7		
		0,		\langle	\sum	6			
						Ø13	*6.5*1mm		

TOOL LIST


#17	x1	#18	x1
	M4	Ø	

1.Prepare for part (D&C). Align the holes in part (D&C), tighten with screwdriver #18 tighten $#6_{\circ}$

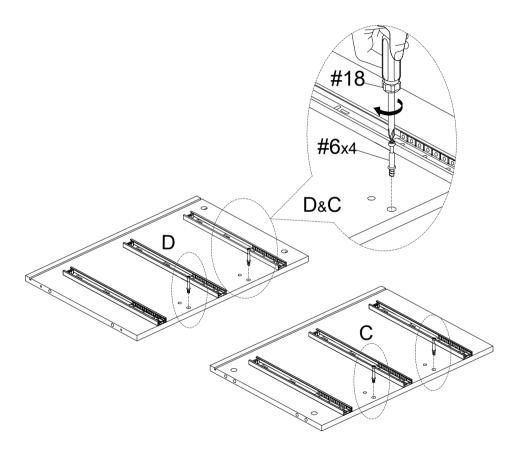




Align the holes in part G, insert wooden dowel #8 by hand,Insert panel (C&D) into panel (G),make sure all holes aligned and then insert cam bolt #9 into the corresponding hole of panel (G),and then tighten cam bolt #9 with screwdriver #18.after installation, cover the screw holes with

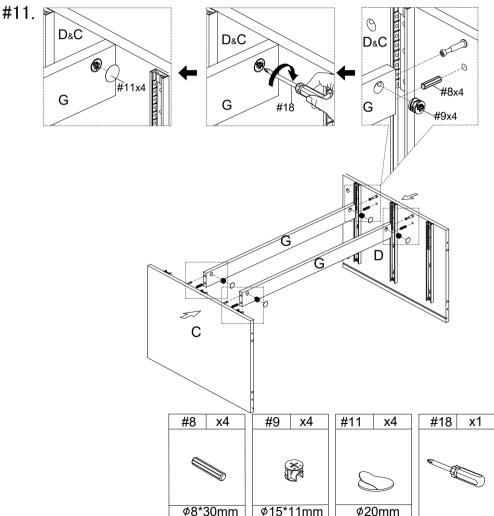


1.Prepare for part A. Align the holes in part A, insert wooden dowel #8 by hand, tighten with screwdriver #18 tighten #6.

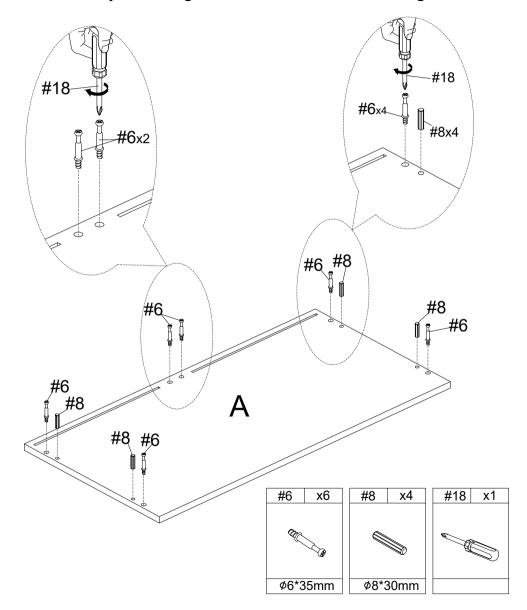


STEP-4


1.Insert the preassemble step 3 into the panel (A),make sure all holes aligned and insert cam bolt #9 into the corresponding hole of side panel(C)&(D),tighten cam bolt #9 with screwdriver #18 .after installation, cover the screw holes with #11.

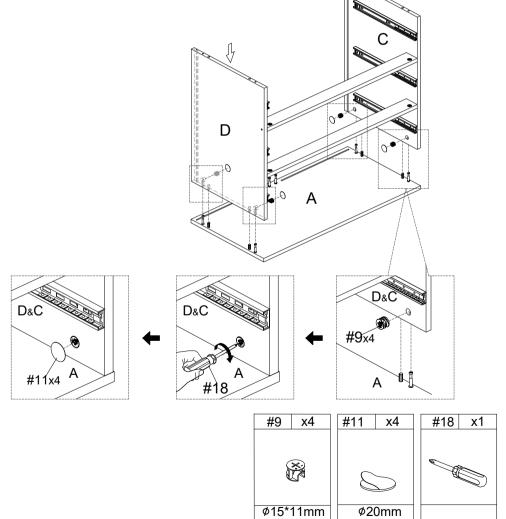

1.Insert the part (F) into the panel (A),make sure all holes aligned and insert cam bolt #9 into the corresponding hole of side panel (F),tighten cam bolt #9 with screwdriver #18 .after installation, cover the screw holes with #11.

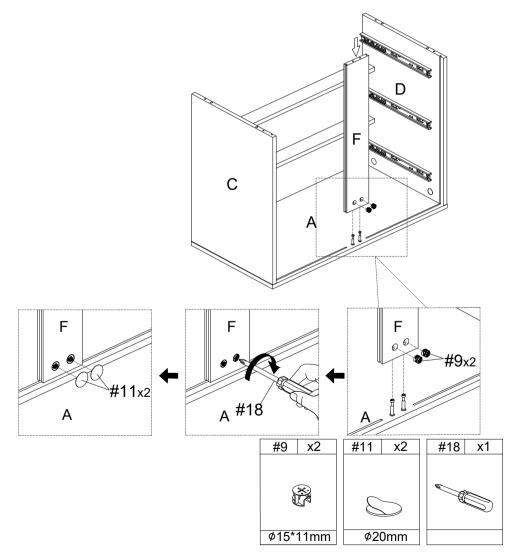


slide in the part E into the groove in part (C&F) and (D&F) and. make sure they are also in groove in part A.

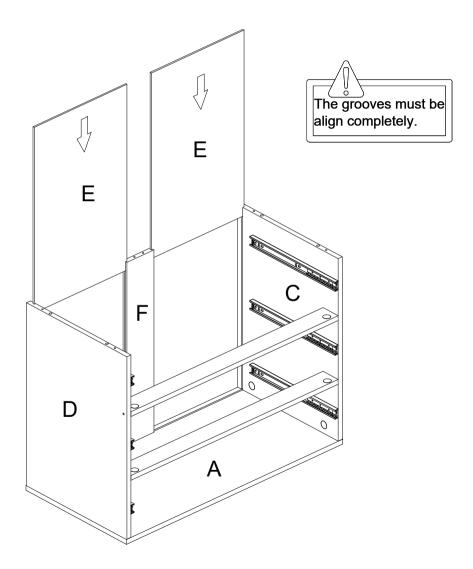


STEP-7

1.Connect the part B the pre-assembled unit in step 6. Insert the wooden dowel #8 into the part C&D as the picture show.


Then align the holes in part B,Insert screw #5 and push it down so that it connects to parts C&D. Next,and tighten the screw #5 with an Allen key #17.

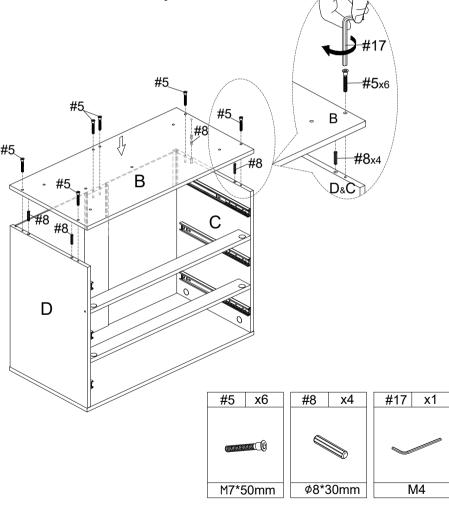


1.Prepare the leg racks. Align the holes of the (H) part with the holes of the (I) part, insert the screw #3, and tighten the screw #3 with the allen key #17.

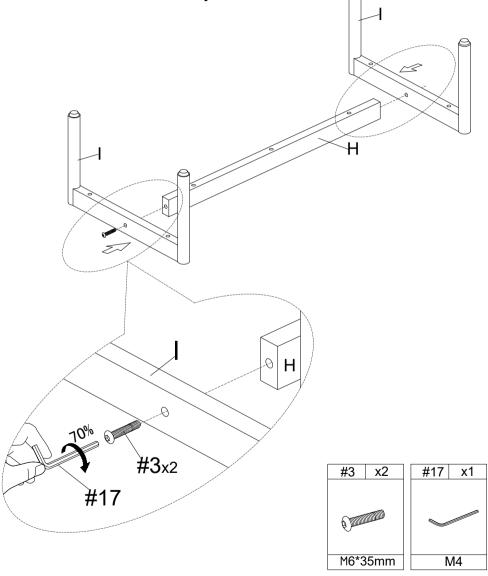


1.Connect the leg frame to the cabinet.Attach the leg frame to the pre-assembled unit in step 7 with a screw #2 and tighten #2 with a allen key #17.

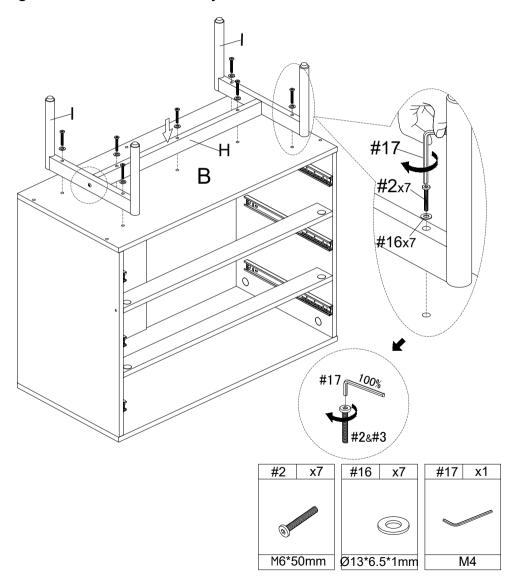

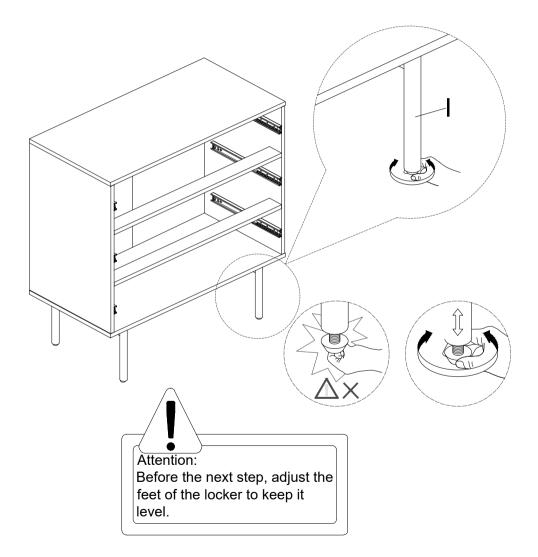


STEP-11

1.Insert hardware #10 into part E as shown, screw in screw #1 using screwdriver #18 and tighten fully.

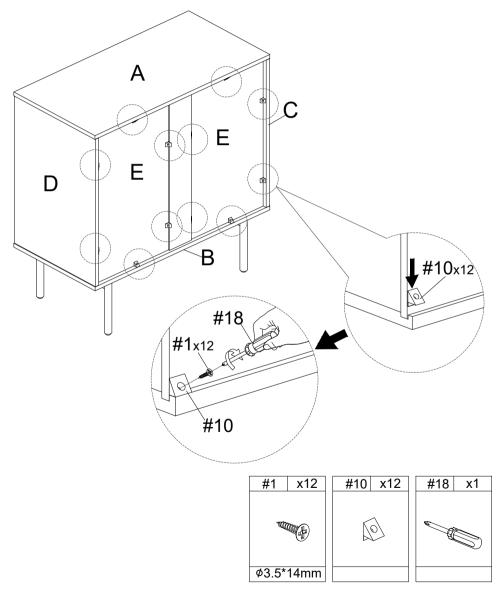


1.Use bolt #7 to attach drawer side (L&K) to drawer back (J),tighten bolt #7 with screwdriver #18, and use bolt #7 to attach part (O) to drawer back (J),tighten bolt #7 with screwdriver #18.

slide in the part (M) into the groove in part (K&L) . make sure they are also in groove in part (J).

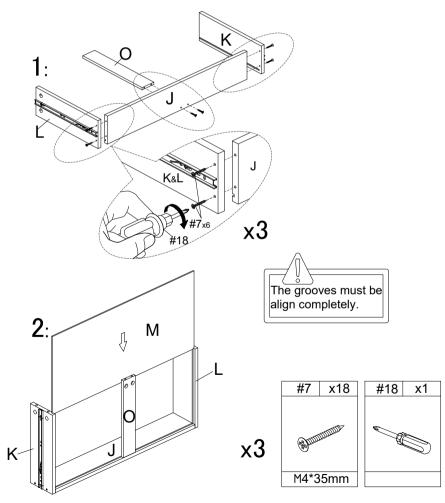


1.Insert bolt #6 into the corresponding hole of drawer front(N),tighten bolt #6 with screwdriver #18.


2.Insert drawer front (N) into preassemble step 12, make sure all holes aligned and insert cam bolt #9 into the corresponding hole of drawer K&L&O, tighten cam bolt #9 with screwdriver #18.after installation, cover the screw holes with #11.

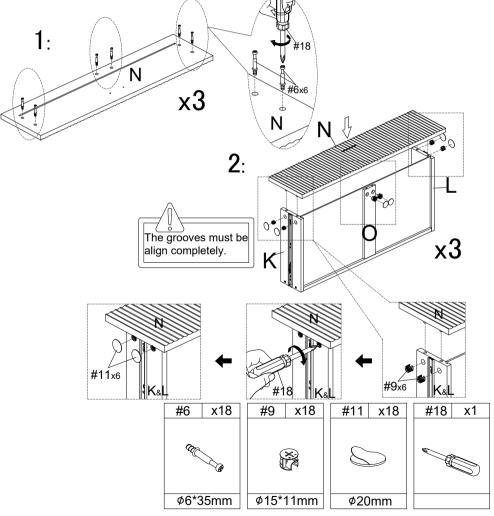


STEP-14

1.Use bolt #4 to attach handle #12 to drawer front (N), tighten bolts #4 with screwdriver #18.

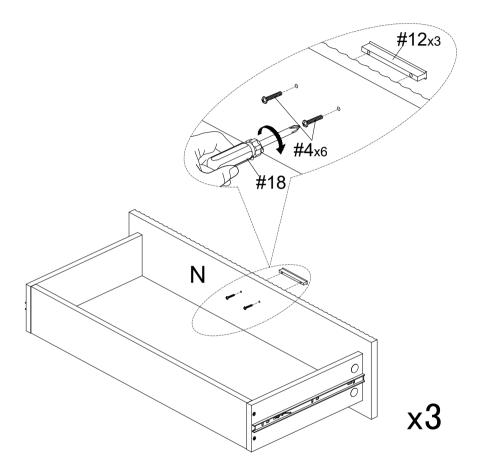





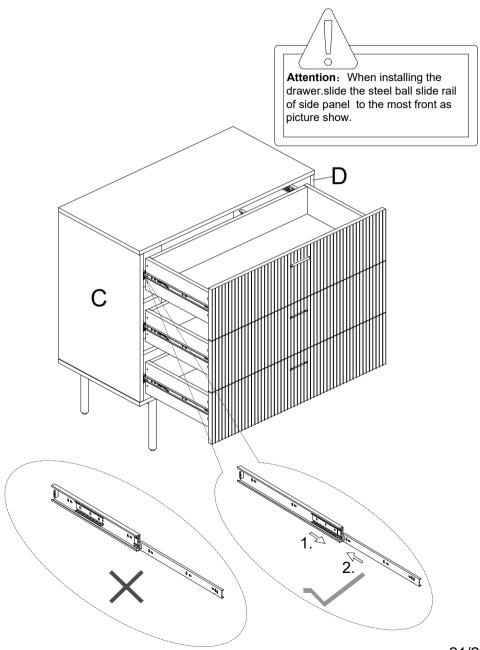

STEP-16

1.Attach part #13 to side panel D, C with bolt #1 and tighten the bolt with screwdriver #18.

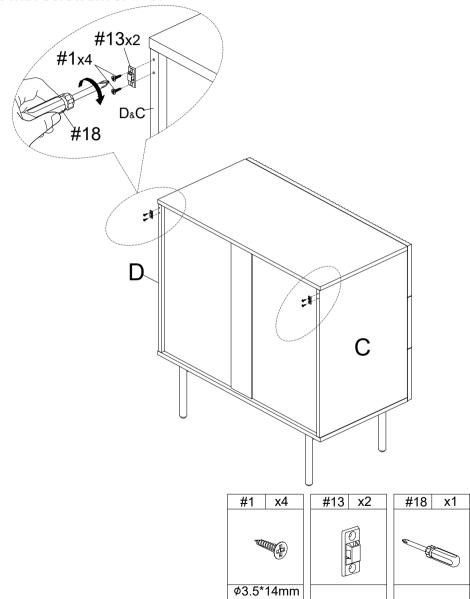


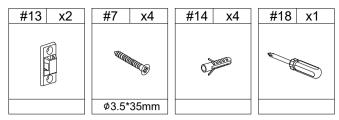

STEP-17

1. Mark the position on the wall, that corresponds to the location of bracket #13 on the side panel(C&D); Drill and insert the expandable screw #14 by hammer.


2. Assemble the bracket #13 to the wall. Align the hole in the bracket #13 with the expandable screw #14,use screw #7 to attach it, tighten screw #7 with screwdriver #18.

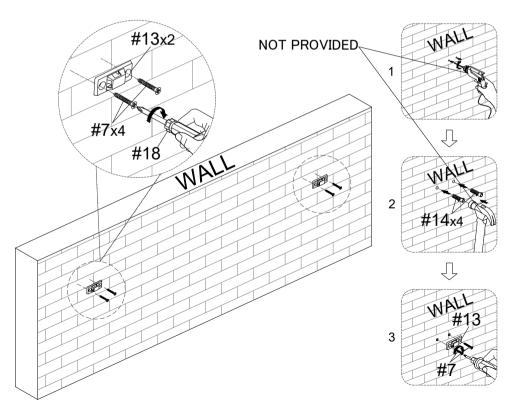



STEP-18

1.Let the plastic belt #15 pass through the both part #13 and pull tightly.

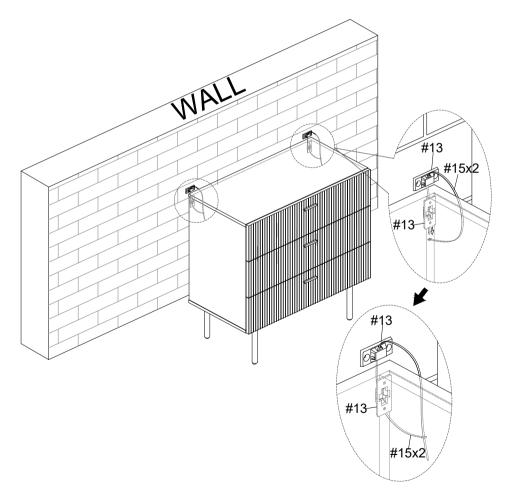

WARRANTY

- 1.We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
- 2.We provide 30 days warranty starting from the time you receive the item.Each customer must provide a record of their order such as the order number,or item receipt for any items that are out of the warranty period you may also still receive.
- 3.Replacement parts by purchasing them with our company if they are available.

Are you having difficulty With assembly?Missing parts? Please send email with your order No to **customerservice@hulalahome.com** For return,please check the return policy with the retailer or market place you bought from.

> Appreciate your purchasing from us. Pop up your life by our furniture piece!