

#### **ITEM NO.TVSBSD0589**

#### NOTE:


This brochure contains IMPORTANT safty info. Please read and keep for future reference.

## MAINTAINANCE AND WARNING

- 1. Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight, material will possibly fade over time.
- 4.Do not use on site dry cleaning machine. Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protected by a padded barrier.
- 6.Not for commercial use, only for residential use.




# **EXPLOSIVE VIEW**

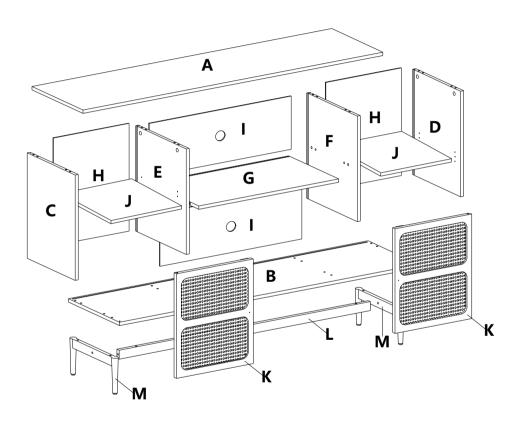






## **PARTS LIST**

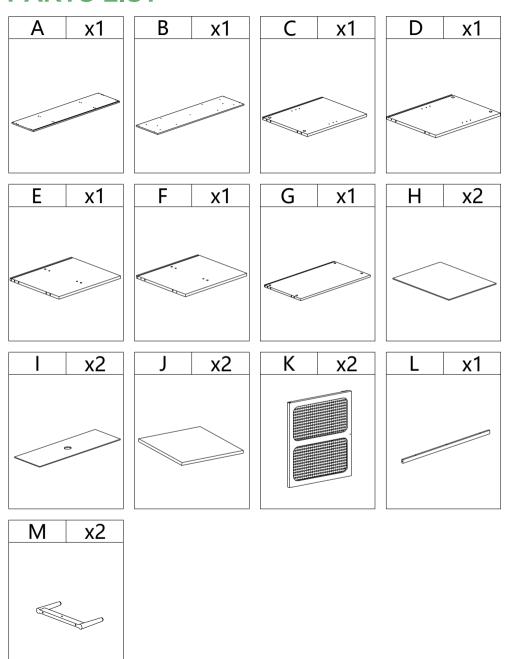

## **HARDWARE LIST 1**


















## **TOOL LIST**



## HARDWARE SPARE LIST

















## **HARDWARE LIST 2**

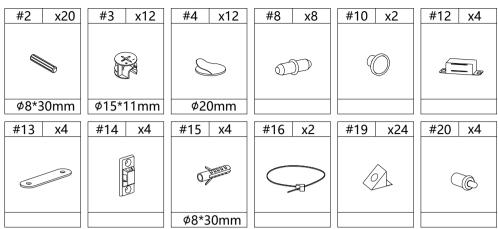




#### STEP-1:

Screw bolt #1 into top panel (A) ,tighten bolt #1 with screwdriver #18.Insert wooden dowel #2 into side panel (E)&(F),and then screw bolt #1 into the corresponding hole of side panel (E)&(F),tighten bolt #1 with screwdriver #18.

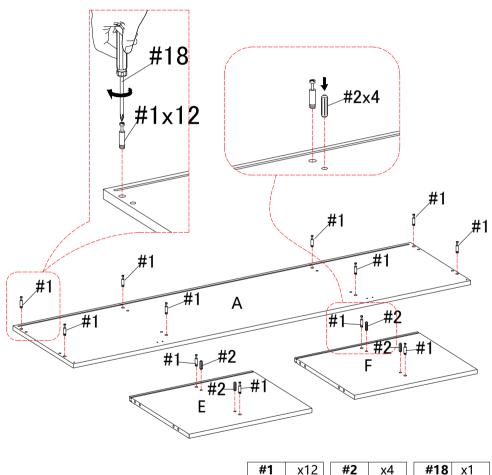





07/26

#### STEP-2:

Insert panel (G) into the corresponding hole of side panel (E), and then insert cam bolt #3 into the corresponding hole of panel (G), tighten cam bolt #3 with screwdriver #18.Insert panel (F) into the corresponding hole of preassemble panel (G), and then insert cam bolt #3 into the corresponding hole of panel (G), tighten cam bolt #3 with screwdriver #18.

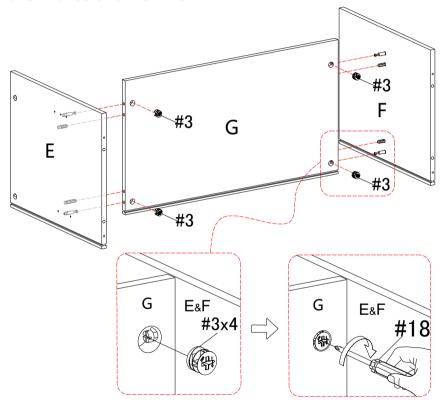

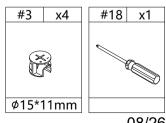


08/26

#### STEP-3:


Stick paster #4 to the corresponding hole of panel(G).


Insert rubber ring into the corresponding hole of panel (I) and then carefully align and slide panel (I) into the groove along rear edge of

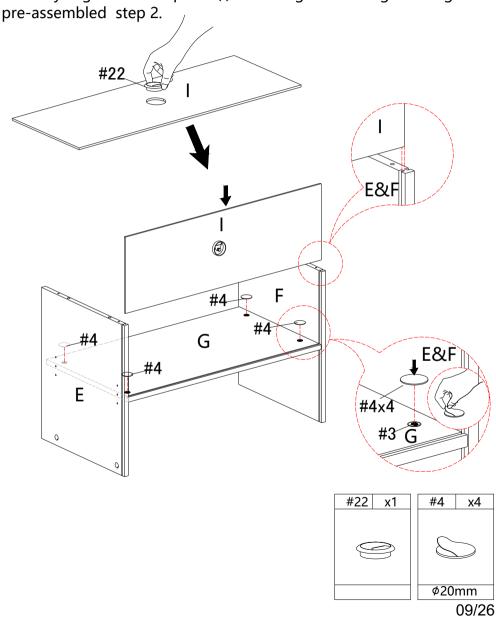

#### STEP-4:


Insert wooden dowel #2 into the corresponding hole of panel (E)&(F),and then insert panel (B) into the preassemble unit at step 3,make sure all holes aligned and then use bolt #9 to attach them , tighten bolt #9 with allen key #17.

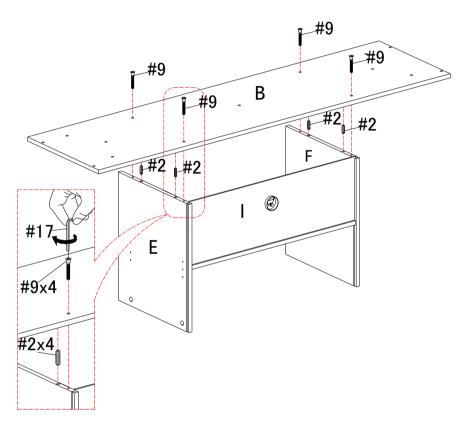




#### STEP-5:

Insert wooden dowel #2 into the corresponding hole of panel (B),and then insert side panel (C)&(D) into the preassemble panel (B),use bolt #9 to attach them ,tighten bolt #9 with allen key #17.

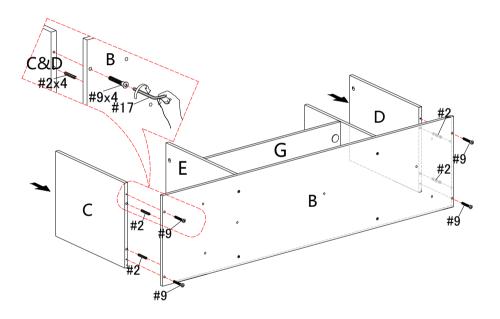


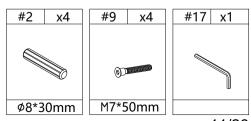


#### STEP-6:

Insert rubber ring #22 into the corresponding hole of panel (I) and then carefully align and slide panel (I)&(H) into the groove along rear edge of pre-assemble unit at step 5.


Insert wooden dowel #2 into the corresponding hole of panel (C)&(E)&(F)&(D).

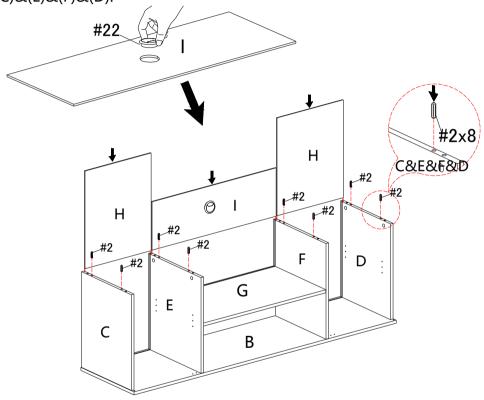


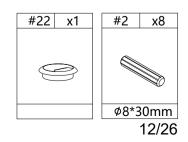

#### STEP-7


Insert top panel (A) into the preassemble unit at step 6, make sure all holes aligned , and then insert cam bolt #3 into the corresponding hole of panel (C)&(E)&(F)&(D),tighten cam bolt #3 with screwdriver #18.Stick paster #4 to the corresponding hole of panel (C)&(D)&(E)&(F).

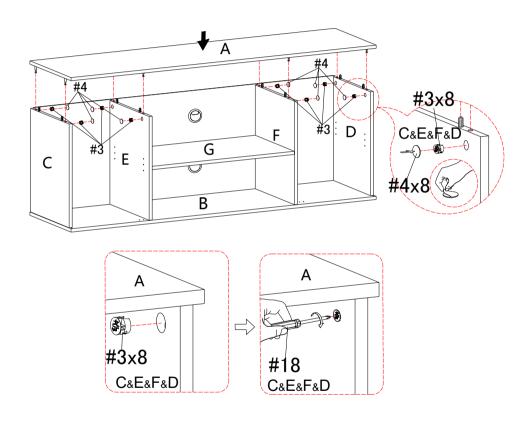




## STEP-8:


Use bolt #5 to attach leg(M) to rail (L), tighten bolt #5 with allen key #17.

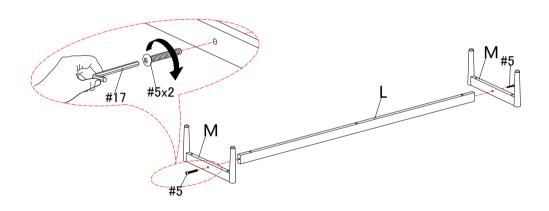


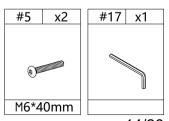

#### STEP-9:

Use bolt #6 to attach preassemble leg(L)&(M) to bottom panel (B), tighten bolt #6 with allen key #17.

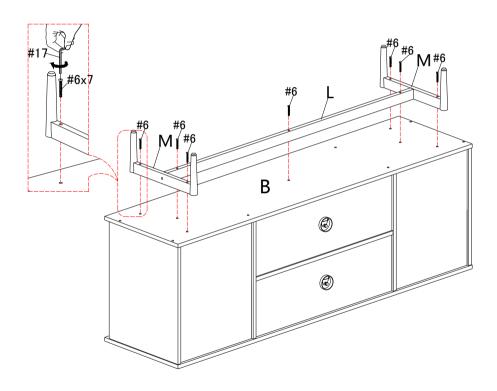




# ASSEMBLY INSTRUCTIONS STEP-10:


#### Attention:

Before the next step, adjust the feet of the locker to keep it level.

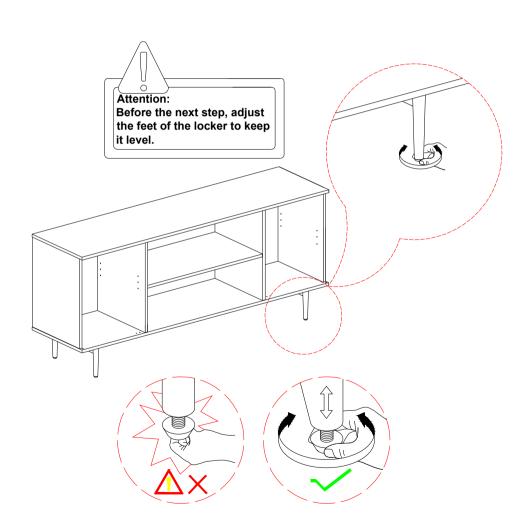


#### **STEP-11:**


Use screw #11 to attach plastic shelf #19 to panel(D)&(C)&(A)&(E)&(F) &(G)&(B),tighten screw #11 with screwdriver #18.

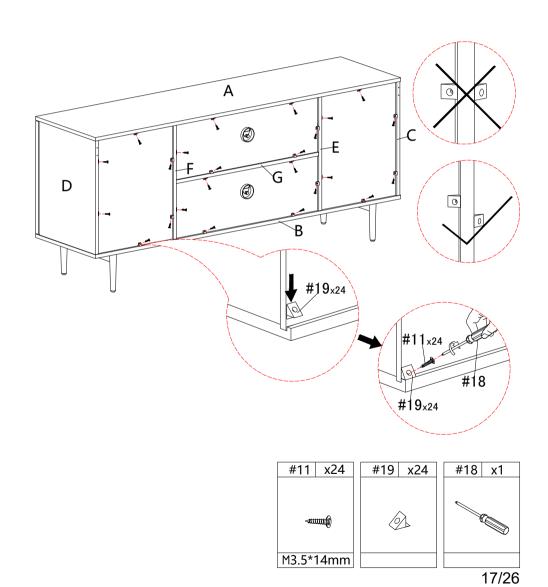

#### **STEP-12:**


Insert shelf holder #8 into the corresponding hole of panel(C)&(D)&(E)&(F), and then attach adjustable shelf (J) to it.

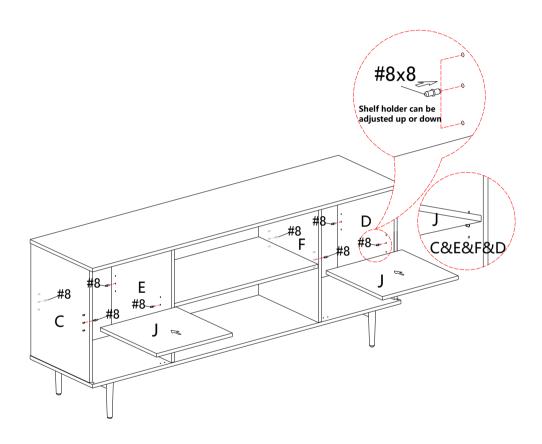




#### **STEP-13:**

Use screw #11 to attach part #13 to door (K), tighten screw #11 with screwdriver #18 and then insert part #20 into the corresponding hole of door (K).

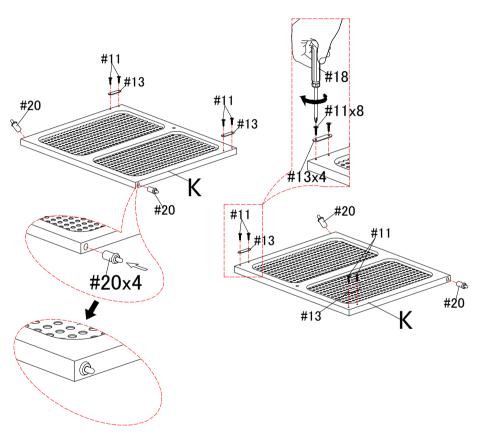





19/26

#### **STEP-14:**

Use bolt #7 to attach handle #10 to door (K), tighten screw #7 with screwdriver #18.

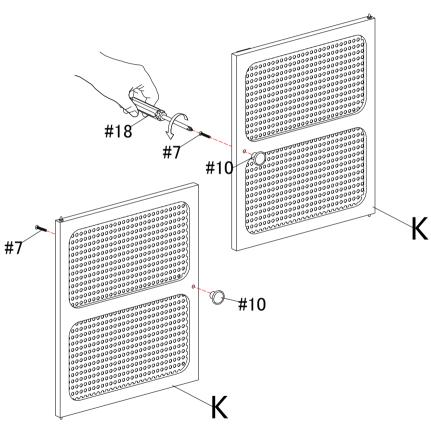




20/26


#### **STEP-15:**


Please the corner of door (K) to bottom panel (B),and then press the button on door (K) with hand, move door (K) to the corresponding position as picture show.

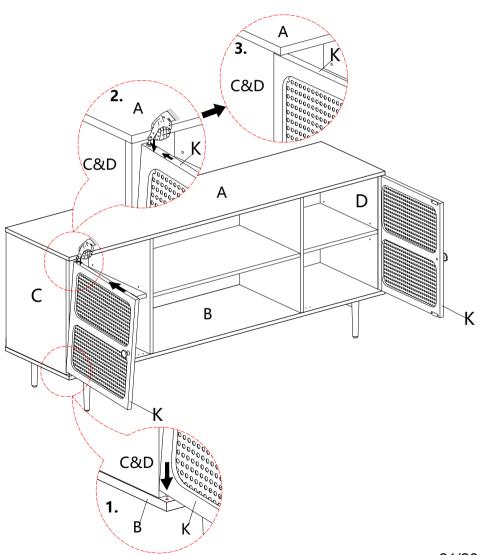


#### **STEP-16:**

Use screw #11 to attach mangetic catch #12 to panel (A)&(B),tighten screw #11 with screwdriver #18.

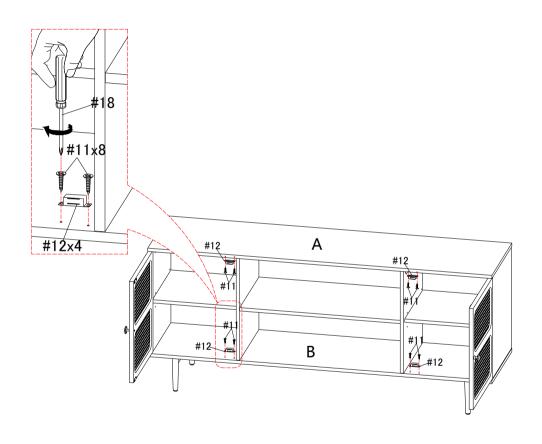





22/26

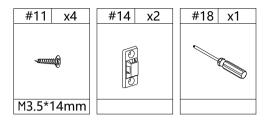

#### **STEP-17:**


Use screw #11 to plastic bracket #14 to panel (C)&(D),tighten screw #11 with screwdriver #18.

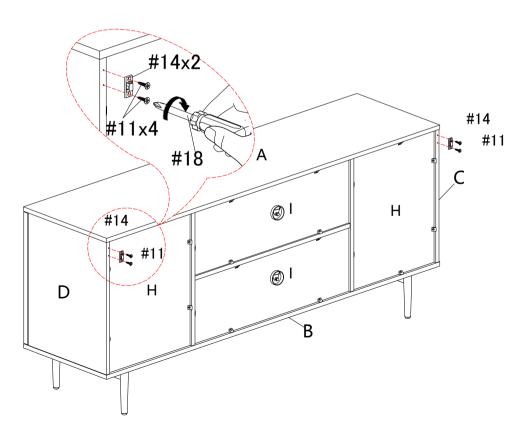


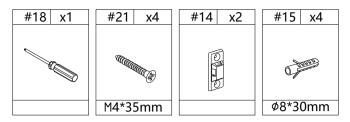

#### **STEP-18:**


- 1. Mark the position on the wall, that corresponds to the location of bracket #14 on the side panel (C)&(D); Drill and insert the expandable screw #15 by hammer.
- 2. Assemble the bracket #14 to the wall. Align the hole in the bracket #14 with the expandable screw #15, use screw #21 to attach it, tighten screw #21 with screwdriver #18.

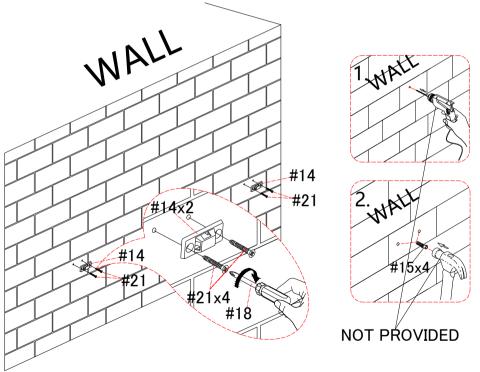



#### STEP-19

3. Let the plastic belt #16 pass through bracket #14 and pull tightly.

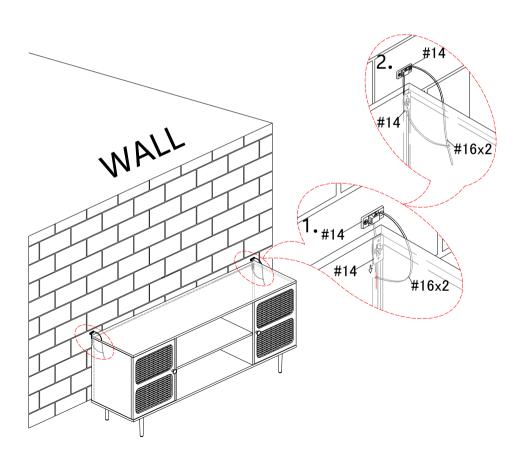

## WARRANTY

- 1. We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
- 2. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
- 3. Replacement parts by purchasing them with our company if they are available.

Are you having difficulty With assembly? Missing parts? Please send email with your order No to

# customerservice@hulalahome.com

For return, please check the return policy with the retailer or market place you bought from.

Appreciate your purchasing from us. Pop up your life by our furniture piece!