


HULALA

H O M E

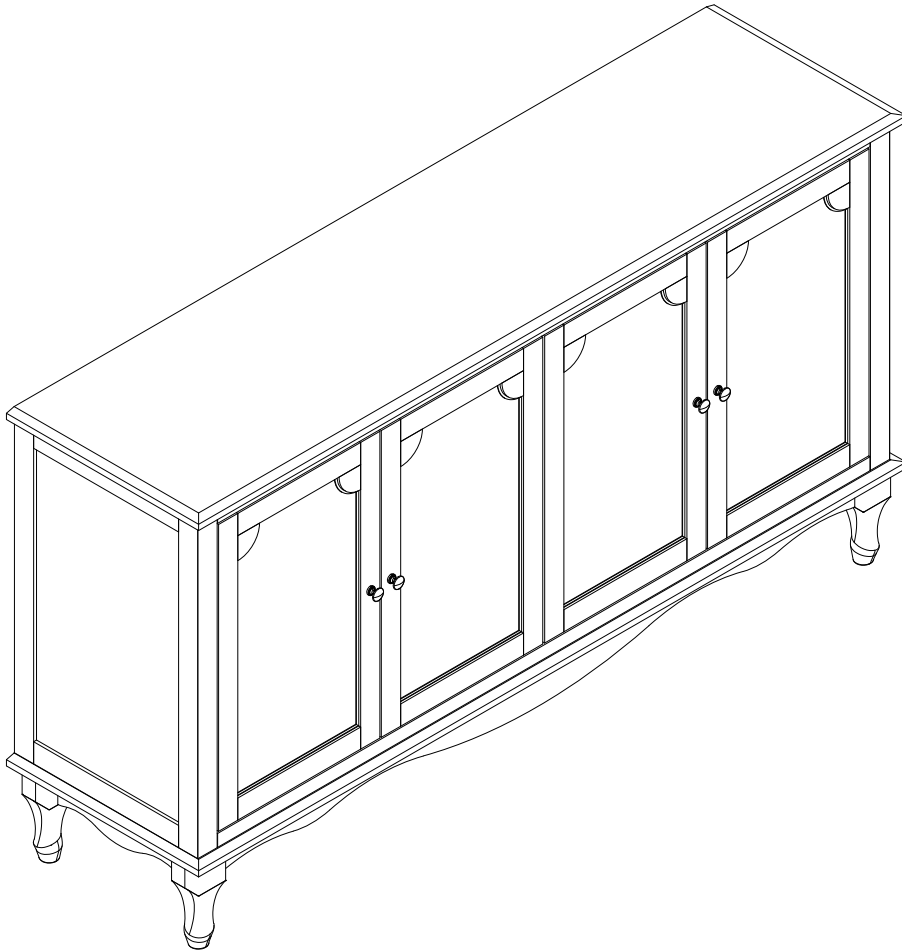

ITEM NO.SBRB1375

NOTE:

This brochure contains IMPORTANT safety info. Please read and keep for future reference.

MAINTAINANCE AND WARNING



1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Carefully check that you have all the parts before beginning assembly.
3. Keep fittings out of children's reach and keep children well away from construction area
4. We suggest you retain these instructions for future reference.
5. Keep furniture away from heat sources.
6. Do not clean furniture with harsh cleaner or polishes.
7. Do not use detergents, solvents, abrasives, spray packs or leather cleaner.
8. Use non-color mild soap with warm water to clean spills (Mix 1:10 soap to water).
9. Do not place furniture under direct sunlight, material will possibly fade over time.
10. Do not use on site dry cleaning machine.
Children should not climb or jump on the furniture.
11. Do not write on furniture that is not protected by a padded barrier.
12. Not for commercial use, only for residential use.




Weight Limitation

150 LBS

Exploded Diagram


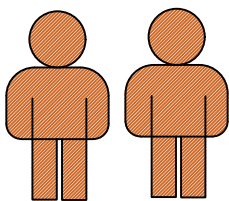
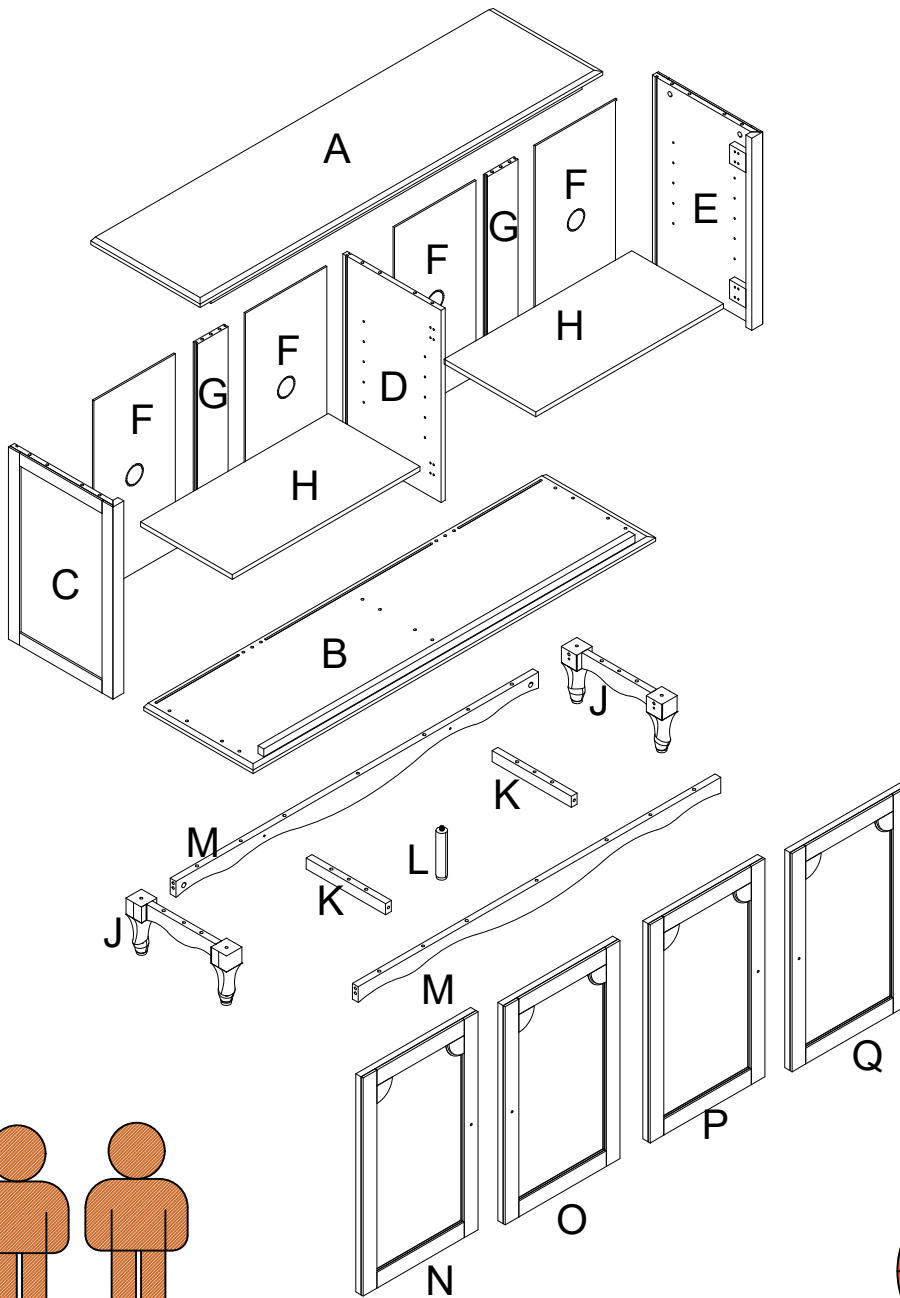

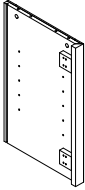
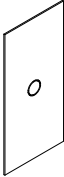

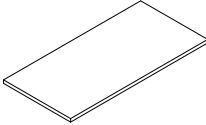
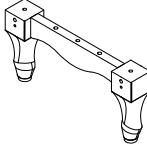
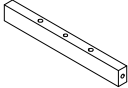

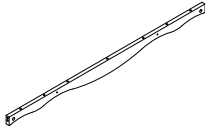
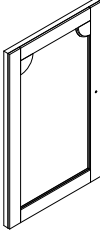
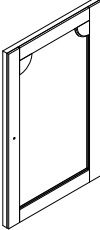
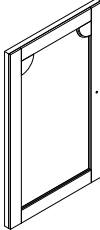
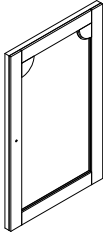


Two persons

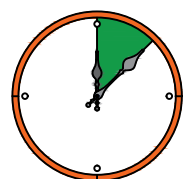


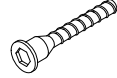






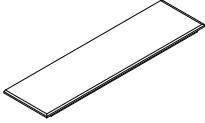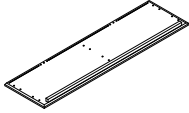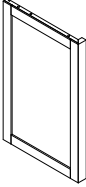




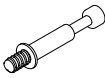



Around 45 min



PARTS LIST

| | | | | |
|---|--|--|--|--|
| <div>A</div> <div>x1</div> <div></div> | <div>B</div> <div>x1</div> <div></div> | <div>C</div> <div>x1</div> <div></div> | <div>D</div> <div>x1</div> <div></div> | <div>E</div> <div>x1</div> <div></div> |
| <div>F</div> <div>x4</div> <div></div> | <div>G</div> <div>x2</div> <div></div> | <div>H</div> <div>x2</div> <div></div> | <div>J</div> <div>X2</div> <div></div> | <div>K</div> <div>X2</div> <div></div> |
| <div>L</div> <div>X1</div> <div></div> | <div>M</div> <div>X2</div> <div></div> | <div>N</div> <div>X1</div> <div></div> | <div>O</div> <div>X1</div> <div></div> | <div>P</div> <div>X1</div> <div></div> |
| <div>Q</div> <div>X1</div> <div></div> | | | | |









HARDWARE LIST
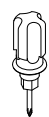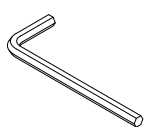
| | | | | | | | | | | | |
|---|-----|---|-----|---|-----|---|-----|---|-----|---|-----|
| #1 | x18 | #2 | x18 | #3 | x30 | #4 | x14 | #5 | x48 | #6 | x18 |
|  | |  | |  | |  | |  | |  | |
| M6*35mm | | Ø15*12mm | | Ø8*30mm | | Ø7*40mm | | 4*14mm | | | |
| #7 | x16 | #8 | x8 | #9 | x4 | #10 | x4 | #11 | x4 | #12 | x2 |
|  | |  | |  | |  | |  | |  | |
| M6*40mm | | | | Large Bend | | Medium Bend | | | | | |
| #13 | x16 | #14 | x4 | #15 | x20 | #16 | x4 | #17 | x4 | | |
|  | |  | |  | |  | |  | | | |
| | | M4*30mm | | 3.5*14mm | | | | 4*30mm | | | |

TOOL LIST
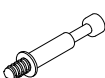
| | | | |
|---|----|---|----|
| #18 | x1 | #19 | x1 |
|  | |  | |
| | | | |

HARDWARE SPARE LIST

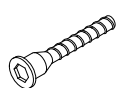
| | | | | | | | | | | | |
|---|----|---|----|---|----|---|----|---|----|---|----|
| #1 | x2 | #2 | x2 | #3 | x3 | #5 | x4 | #6 | x2 | #7 | x1 |
|  | |  | |  | |  | |  | |  | |
| M6*35mm | | Ø15*12mm | | Ø8*30mm | | 4*14mm | | | | M6*40mm | |
| #15 | x2 | #4 | x1 | | | | | | | | |
|  | |  | | | | | | | | | |
| 3.5*14mm | | Ø7*40mm | | | | | | | | | |




ASSEMBLY INSTRUCTIONS

STEP-1

Prepare for part M & J

1. Tighten the bolt #1 into the corresponding hole of M & J with screwdriver #18
2. Align the holes in part M, insert wooden dowel #3 by hand

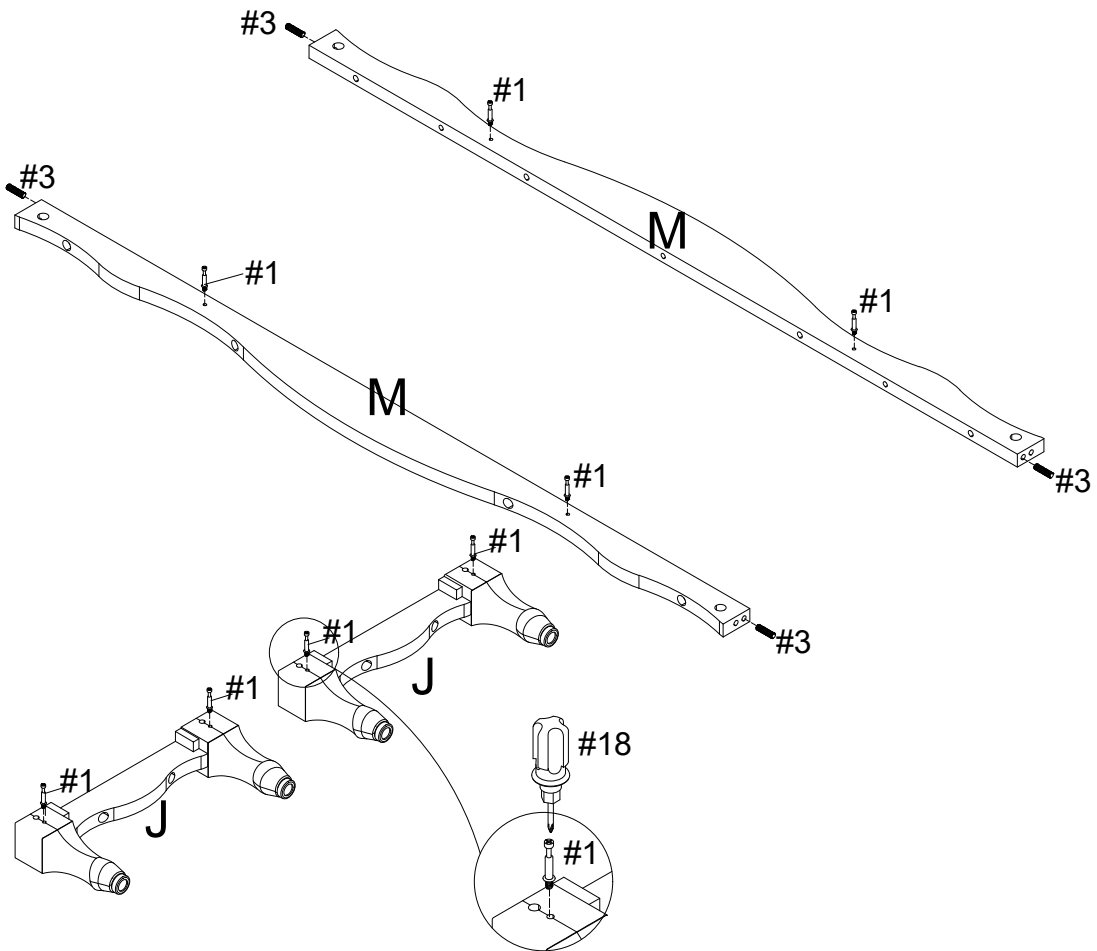


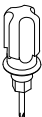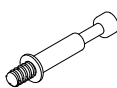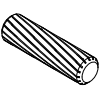


| | | | | | |
|---|----|--|----|---|----|
| #18 | x1 | #1 | x8 | #3 | x4 |
|  | |  | |  | |
| | | M6*35mm | | Ø8*30mm | |

ASSEMBLY INSTRUCTIONS

STEP-2

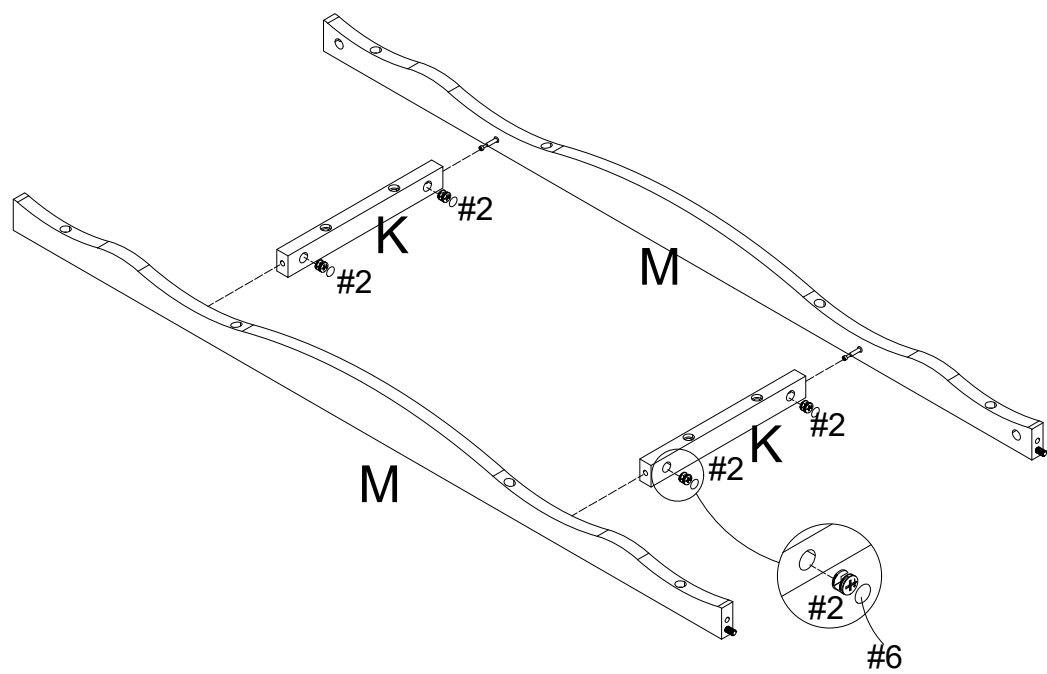- 1.Insert cam bolt #2 into the corresponding hole of panel K, then tighten the cam bolt #2 with screwdriver #18
- 2. Cover the cam lock #2 with sticker #6

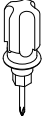





| | | | | | |
|---|----|--|----|---|----|
| #18 | x1 | #2 | x4 | #6 | x4 |
|  | |  | |  | |
| | | Ø15*12mm | | | |

ASSEMBLY INSTRUCTIONS

STEP-3

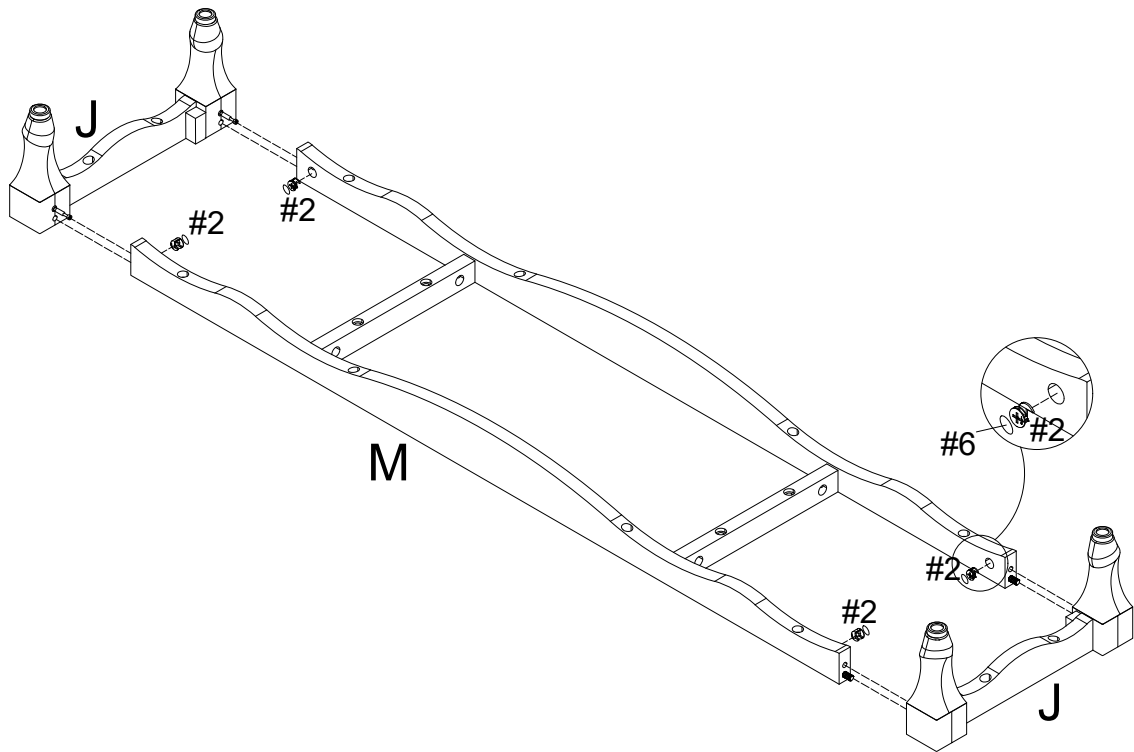- 1.Insert cam bolt #2 into the corresponding hole of panel M, then tighten the cam bolt #2 with screwdriver #18
- 2. Cover the cam lock #2 with sticker #6







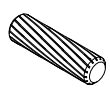

| | | | | | |
|---|----|--|----|---|----|
| #18 | x1 | #2 | x4 | #6 | x4 |
|  | |  | |  | |
| | | Ø15*12mm | | | |

ASSEMBLY INSTRUCTIONS

STEP-4

1. Tighten the bolt #1 into the corresponding hole of A with screwdriver #18 as picture show
2. Align the holes in part A, insert wooden dowel #3 by hand
3. Connect the part G with part A, insert cam bolt #2 into the corresponding hole of panel G. then tighten the cam bolt #2 with screwdriver #18
4. cover the cam lock #2 with sticker #6

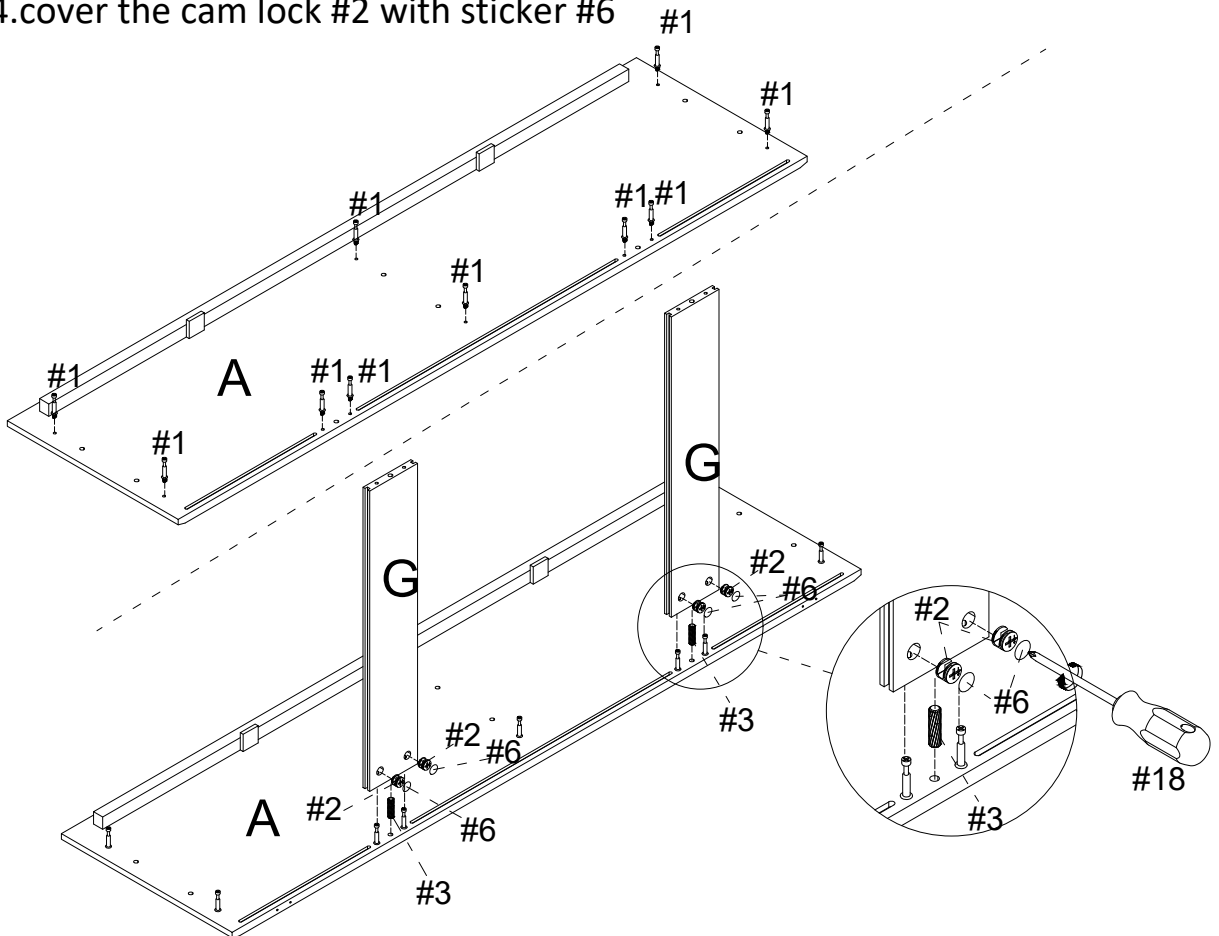


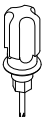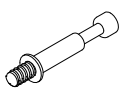



| | | | | | | | | | |
|---|----|---|-----|---|----|--|----|---|----|
| #18 | x1 | #1 | x10 | #2 | x4 | #3 | x2 | #6 | x4 |
|  | |  | |  | |  | |  | |
| | | M6*35mm | | Ø15*12mm | | Ø8*30mm | | | |

ASSEMBLY INSTRUCTIONS

STEP-5

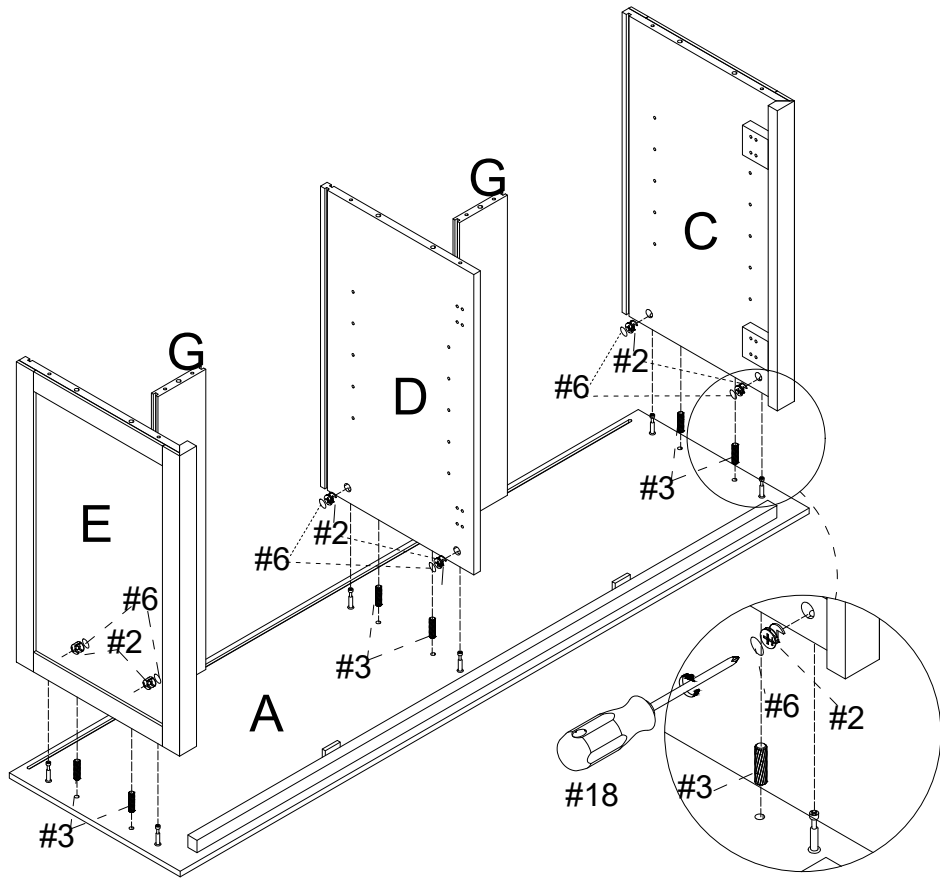- 1.Align the holes in part A, insert wooden dowel #3 by hand
- 2.Connect the part C&D&E with part A,
insert cam bolt #2 into the corresponding hole of panel C&D&E,then
tighten the cam bolt #2 with screwdriver #18
- 3.cover the cam lock #2 with sticker #6

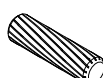


| | | | | | | | |
|---|----|---|----|--|----|---|----|
| #18 | x1 | #2 | x6 | #3 | x6 | #6 | x6 |
|  | |  | |  | |  | |
| | | Ø15*12mm | | Ø8*30mm | | | |

ASSEMBLY INSTRUCTIONS

STEP-6


Slide in the part F into the groove in part E,G and G,D and D,G,and G,C .
make sure they are also in groove in part A



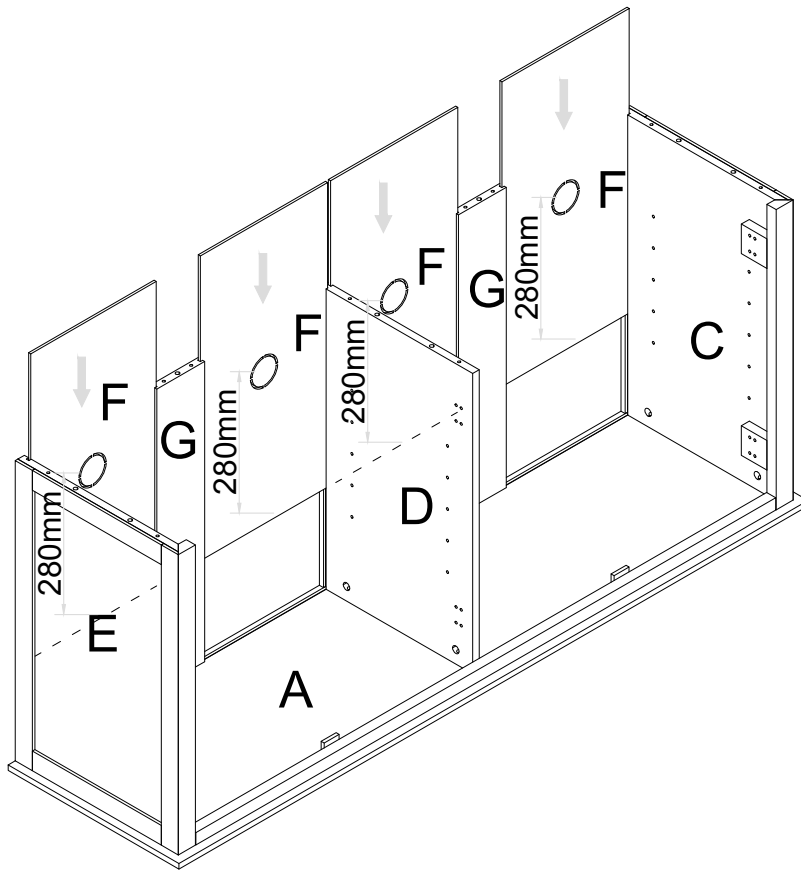


ASSEMBLY INSTRUCTIONS

STEP-7

- 1.Align the holes in part C&D&E, insert wooden dowel #3 by hand
- 2.Connect the part C&D&E with part B,tighten screw #4 with allenkey #19

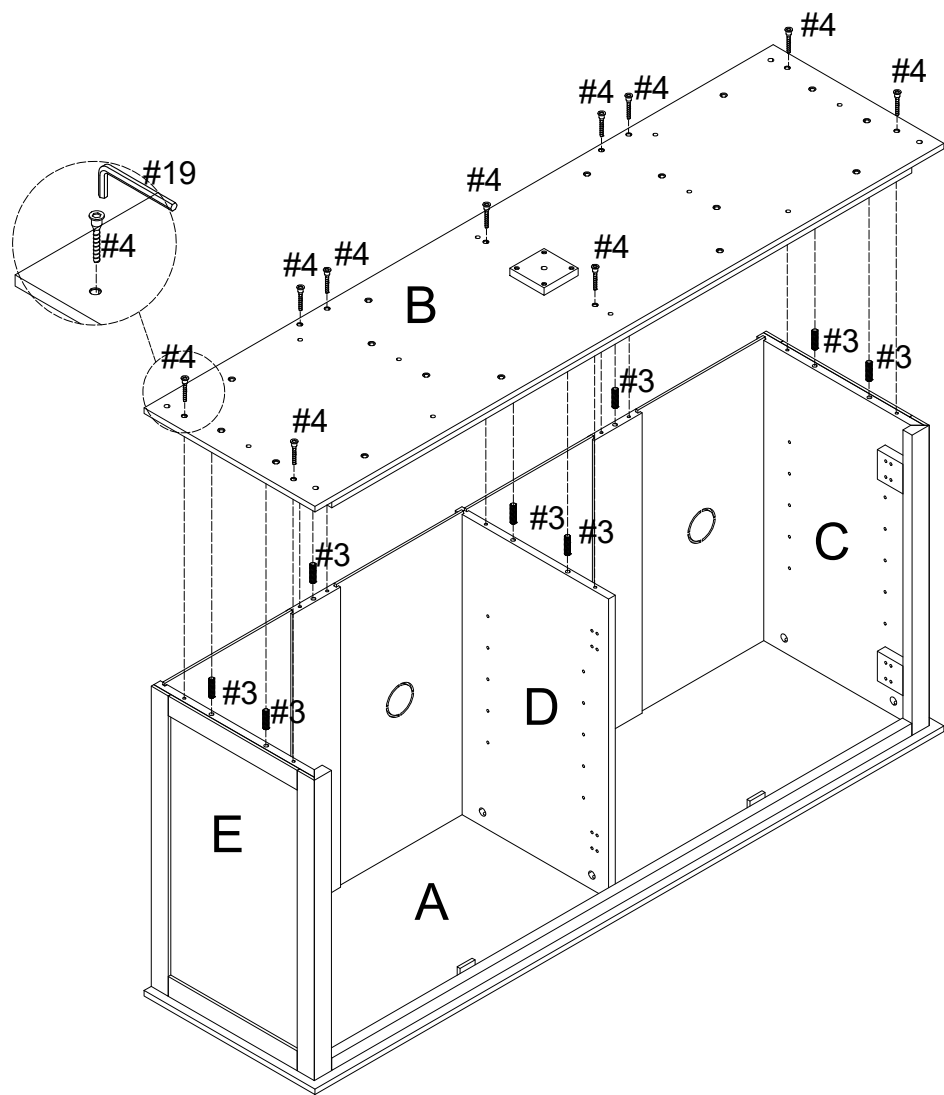


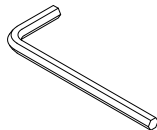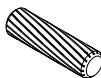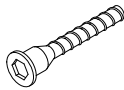
| | | | | | |
|---|----|--|----|---|-----|
| #19 | x1 | #3 | x8 | #4 | x10 |
|  | |  | |  | |
| | | Ø8*30mm | | Ø7*40mm | |


ASSEMBLY INSTRUCTIONS


STEP-8

- 1.Align the holes in part B, insert wooden dowel #3 by hand
- 2.Connect the leg with part B,tighten screw #7 with allenkey #19
- 3.Screw foot L into part B by hand as picture show

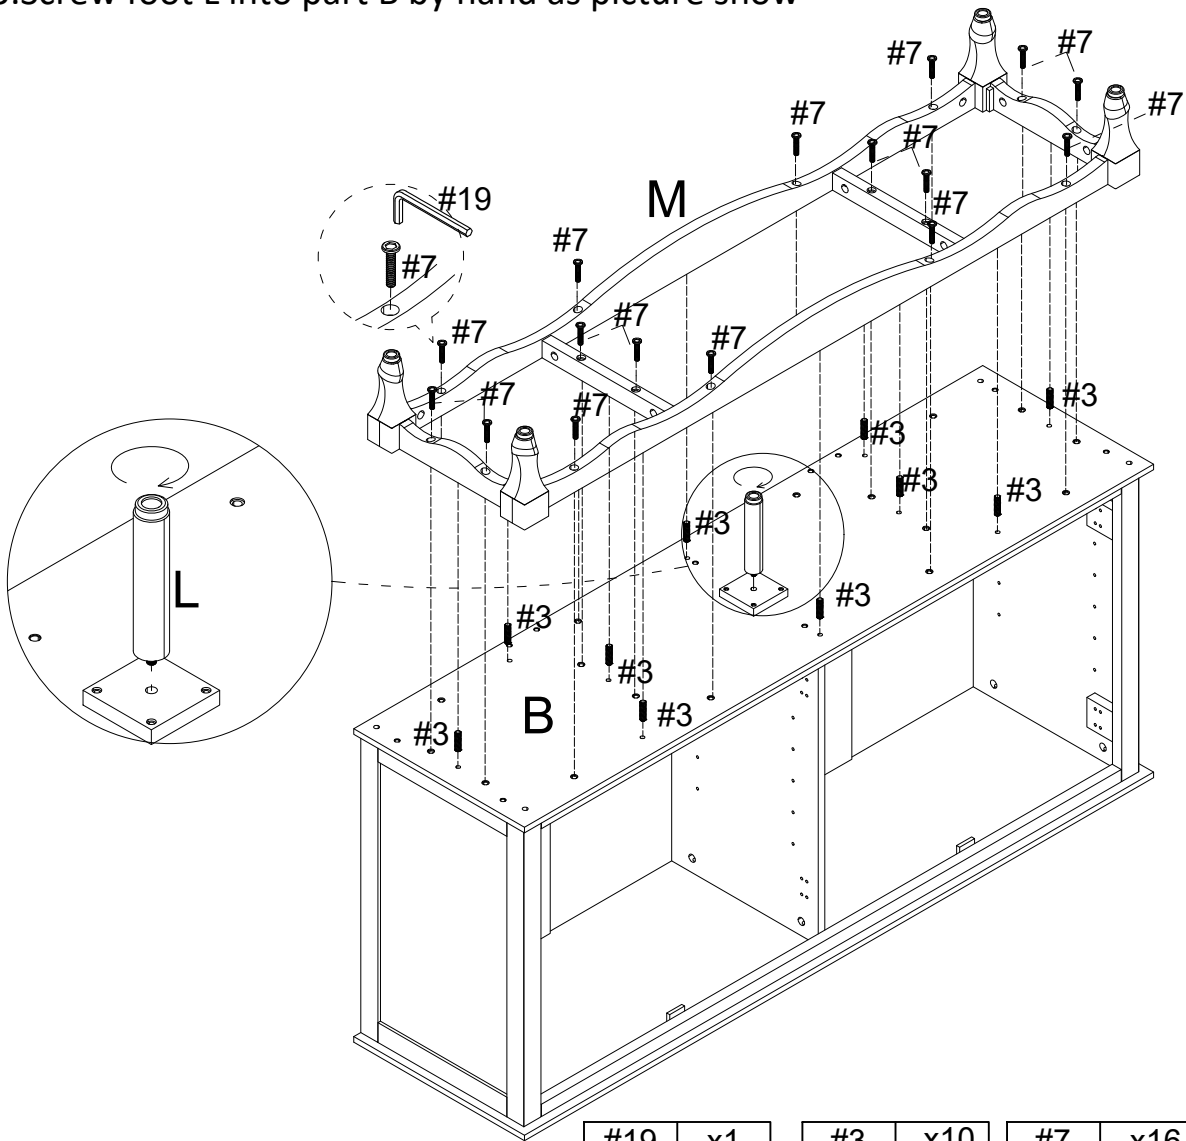
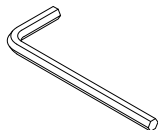
| | |
|---|----|
| #19 | x1 |
|  | |
| | |

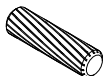
| | |
|--|-----|
| #3 | x10 |
|  | |
| Ø8*30mm | |



| | |
|---|-----|
| #7 | x16 |
|  | |
| M6*40mm | |

ASSEMBLY INSTRUCTIONS

STEP-9

Tighten screw #4 into the corresponding hole with allenkey #19

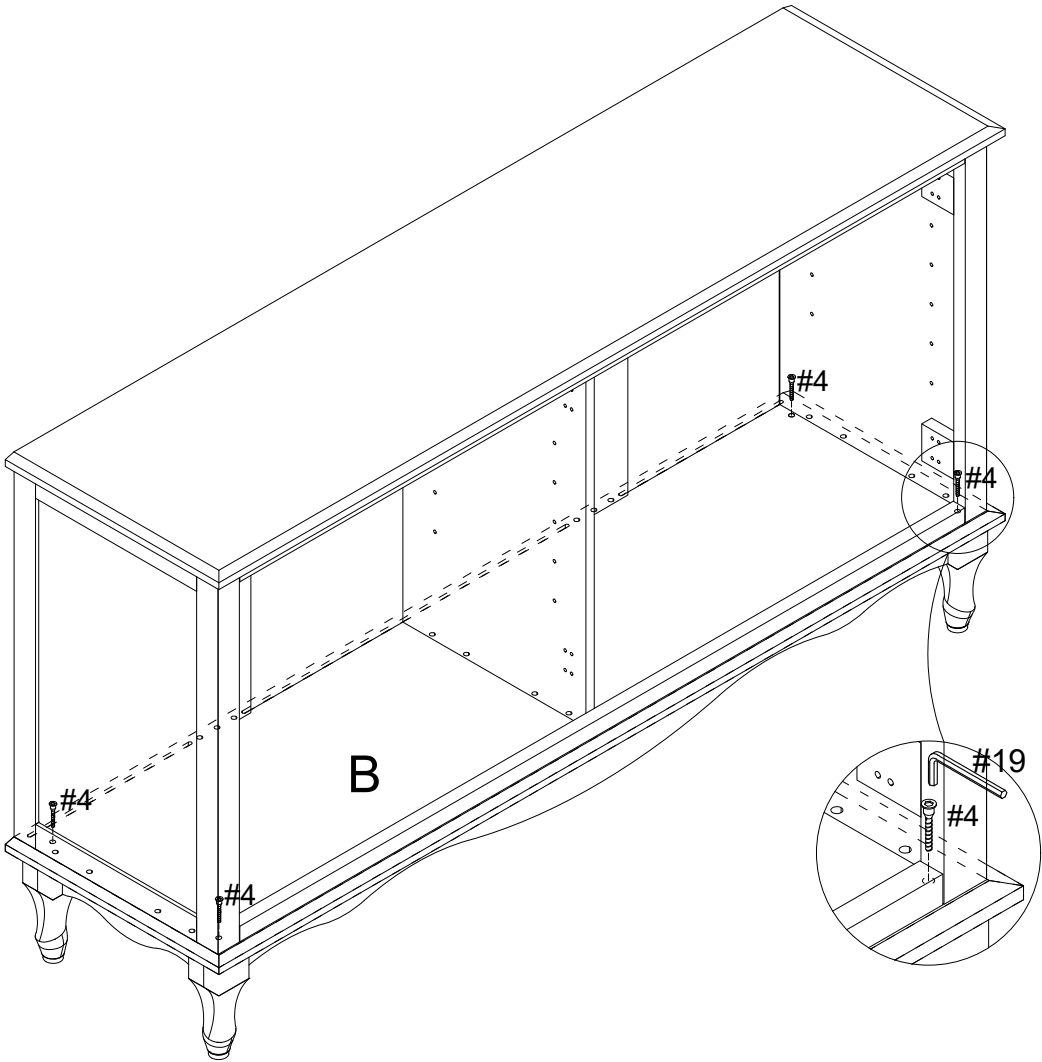

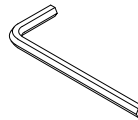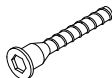
| | | | |
|--|----|---|----|
| #19 | x1 | #4 | x4 |
|  | |  | |
| | | Ø7*40mm | |

ASSEMBLY INSTRUCTIONS

STEP-10


Insert shelf pin #8 into the holes attach adjustable shelf H to pin #8

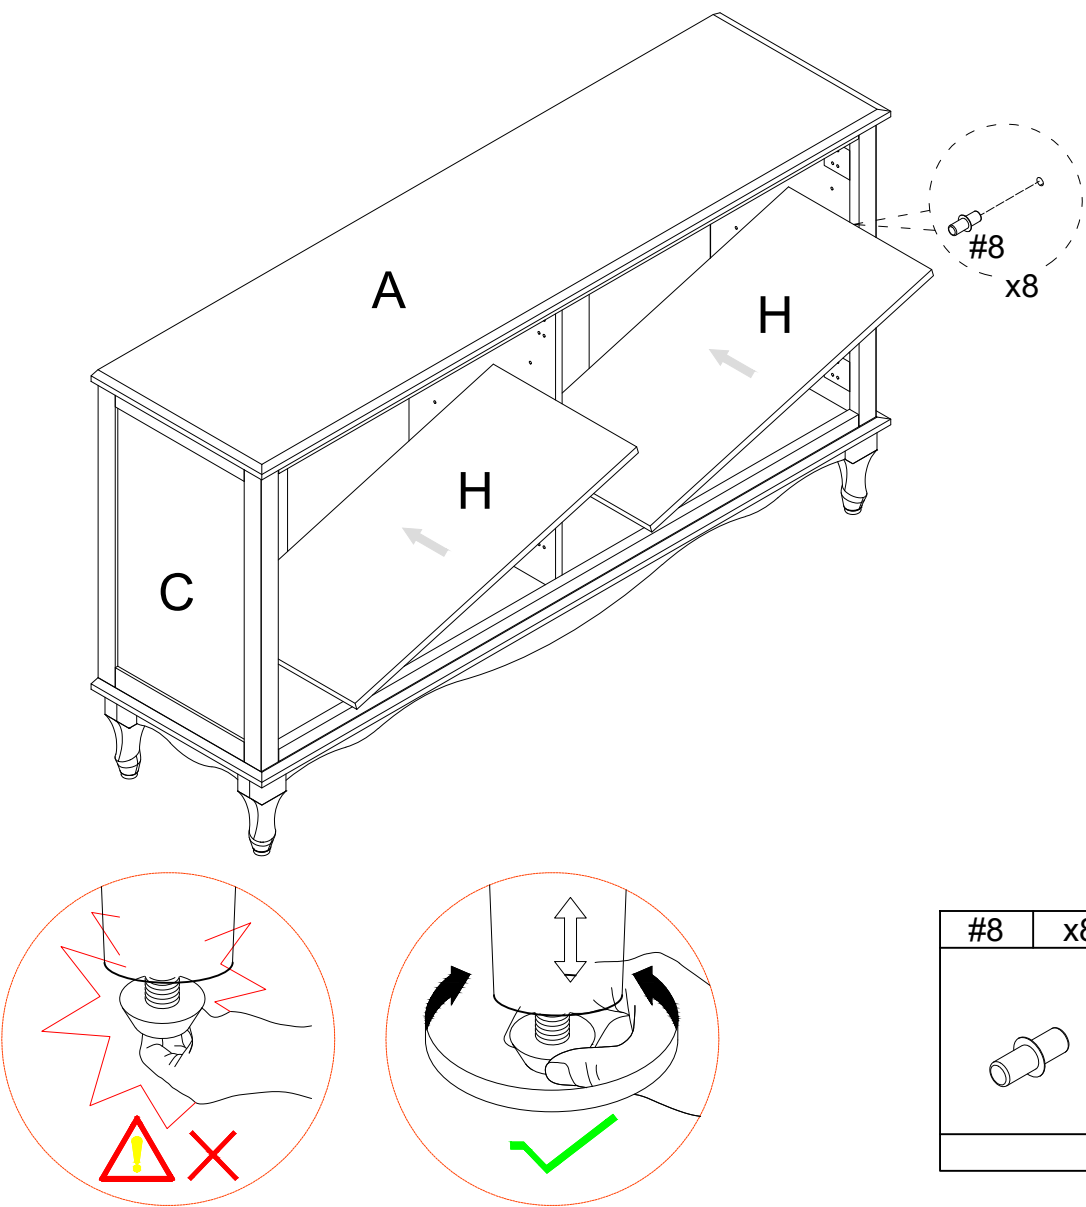




ASSEMBLY INSTRUCTIONS

STEP-11

Insert hardware #13 into part F as shown, screw in screw #15 using screwdriver #18 and tighten fully.

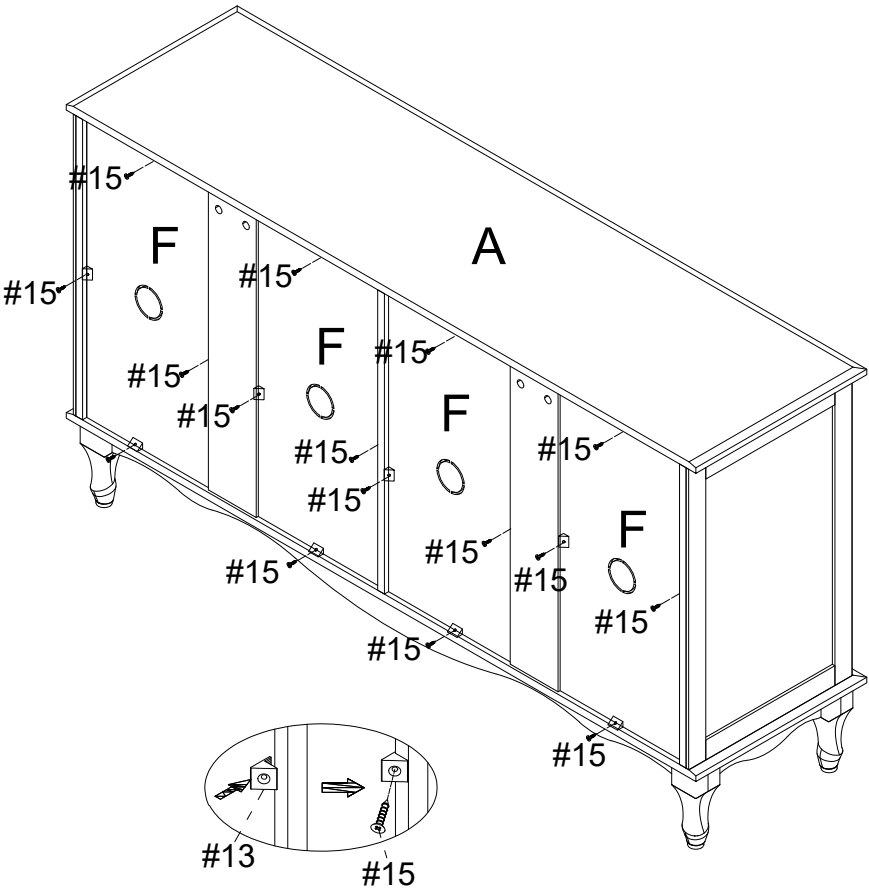






| #18 | x1 | #13 | x16 | #15 | x16 |
|---|----|--|-----|---|-----|
|  | |  | |  | |
| | | | | 3.5*14mm | |

ASSEMBLY INSTRUCTIONS

STEP-12

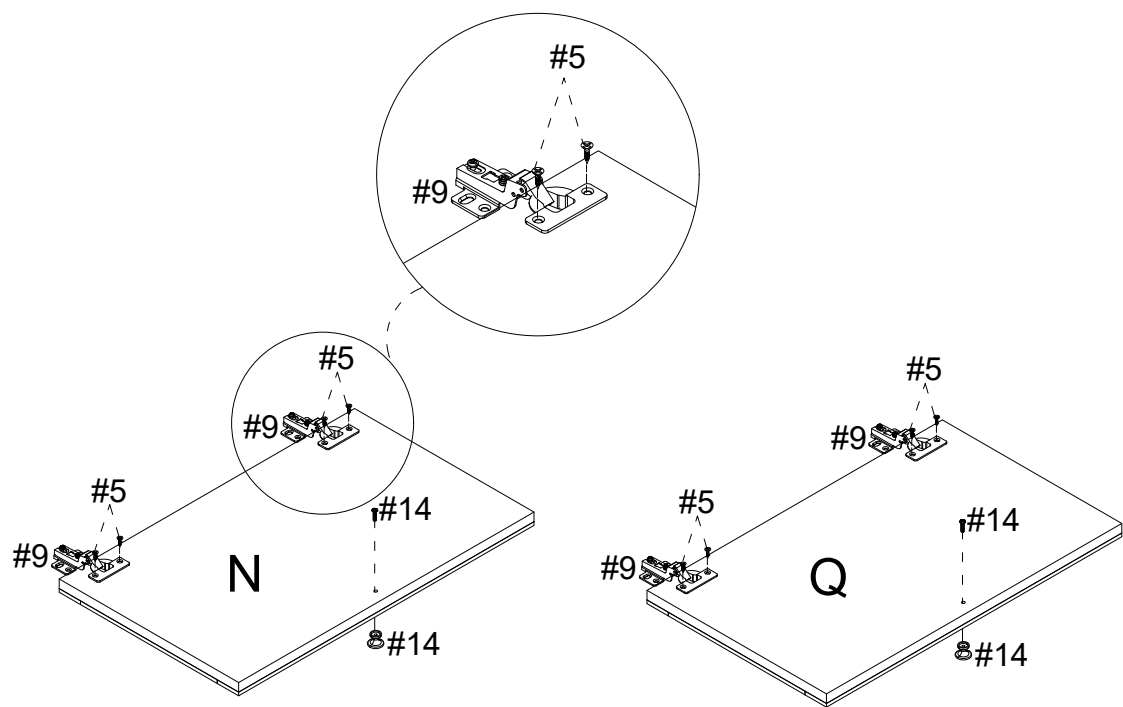- 1. Use screw #5 to attach the hinges #9 (Large bend) to door panel (N&Q), tighten screws #5 with screwdriver #18.
- 2. Use screw #14 to attach the handle #14 to door panel (N&Q), tighten screws #14 with screwdriver #18.






| #18 | x1 | #5 | x8 | #14 | x2 | #9 | x4 |
|---|----|---|----|--|----|---|----|
|  | |  | |  | |  | |
| | | 4*14mm | | M4*30mm | | Large Bend | |

ASSEMBLY INSTRUCTIONS

STEP-13

- 1. Use screw #5 to attach the door N to side panel C, tighten screws #5 with screwdriver #18.
- 2. Use screw #5 to attach the door Q to side panel E, tighten screws #5 with screwdriver #18.

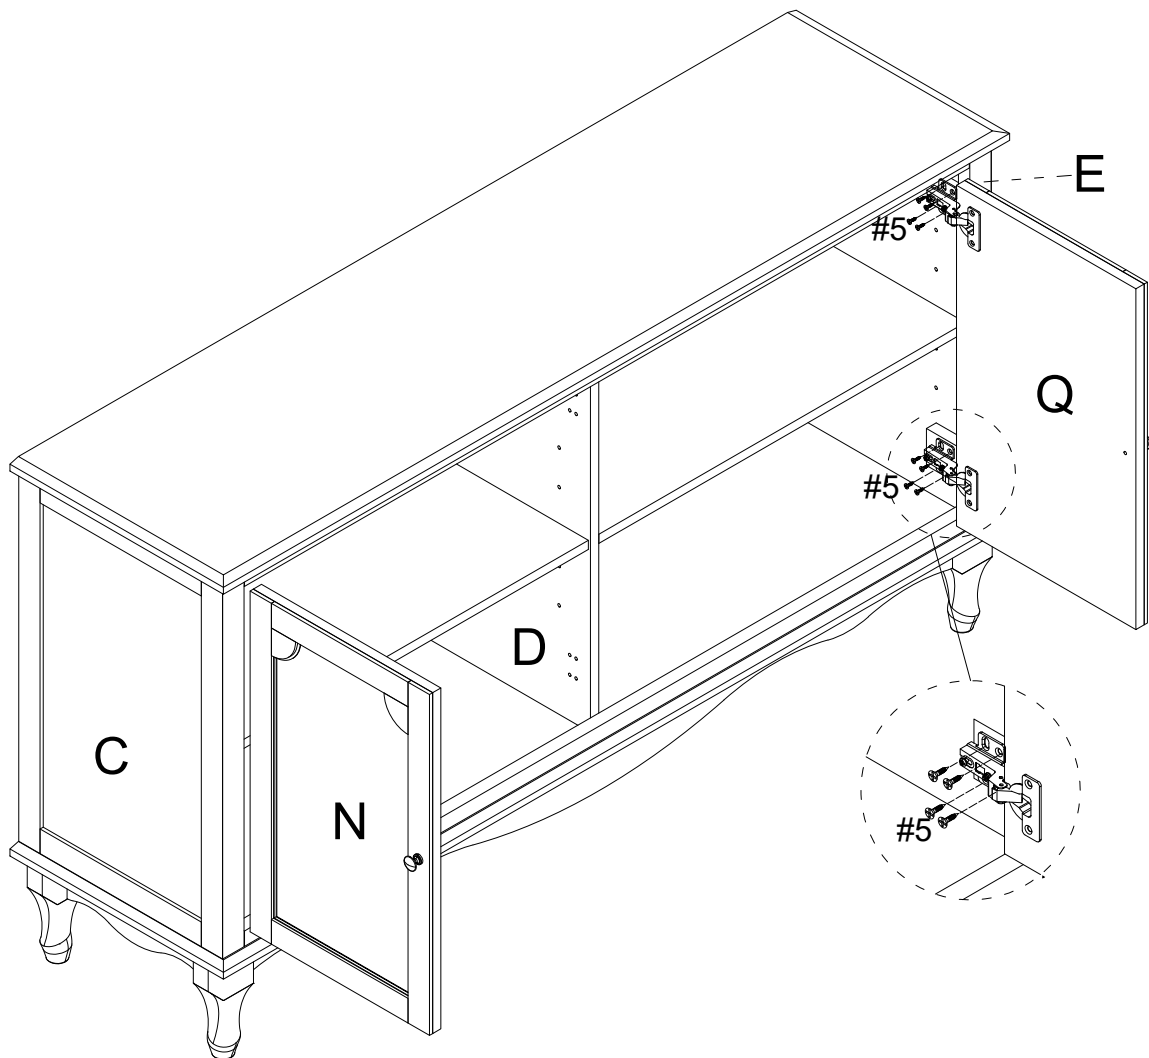


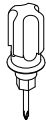



| | | | |
|--|----|---|-----|
| #18 | x1 | #5 | x16 |
|  | |  | |
| | | 4*14mm | |

ASSEMBLY INSTRUCTIONS

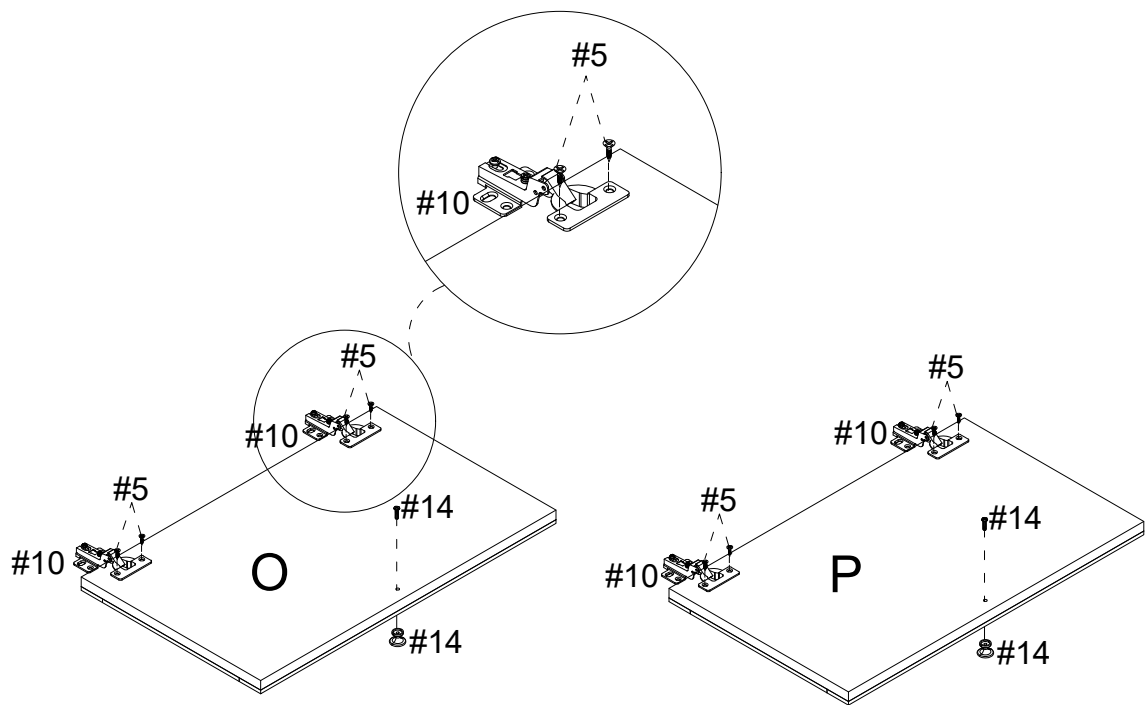STEP-14

- 1. Use screw #5 to attach the hinges #10 (Medium bend) to door panel (O&P), tighten screws #5 with screwdriver #18.
- 2. Use screw #14 to attach the handle #14 to door panel (O&P), tighten screws #14 with screwdriver #18.






| #18 | x1 | #5 | x8 | #14 | x2 | #10 | x4 |
|---|----|---|----|---|----|---|----|
|  | |  | |  | |  | |
| | | 4*14mm | | M4*30mm | | Medium Bend | |

ASSEMBLY INSTRUCTIONS

STEP-15

- 1. Use screw #5 to attach the door O to left side of panel D, tighten screws #5 with screwdriver #18.
 - 2. Use screw #5 to attach the door P to right side of panel D, tighten screws #5 with screwdriver #18.
- Make sure the doors (O&P) are installed as picture show

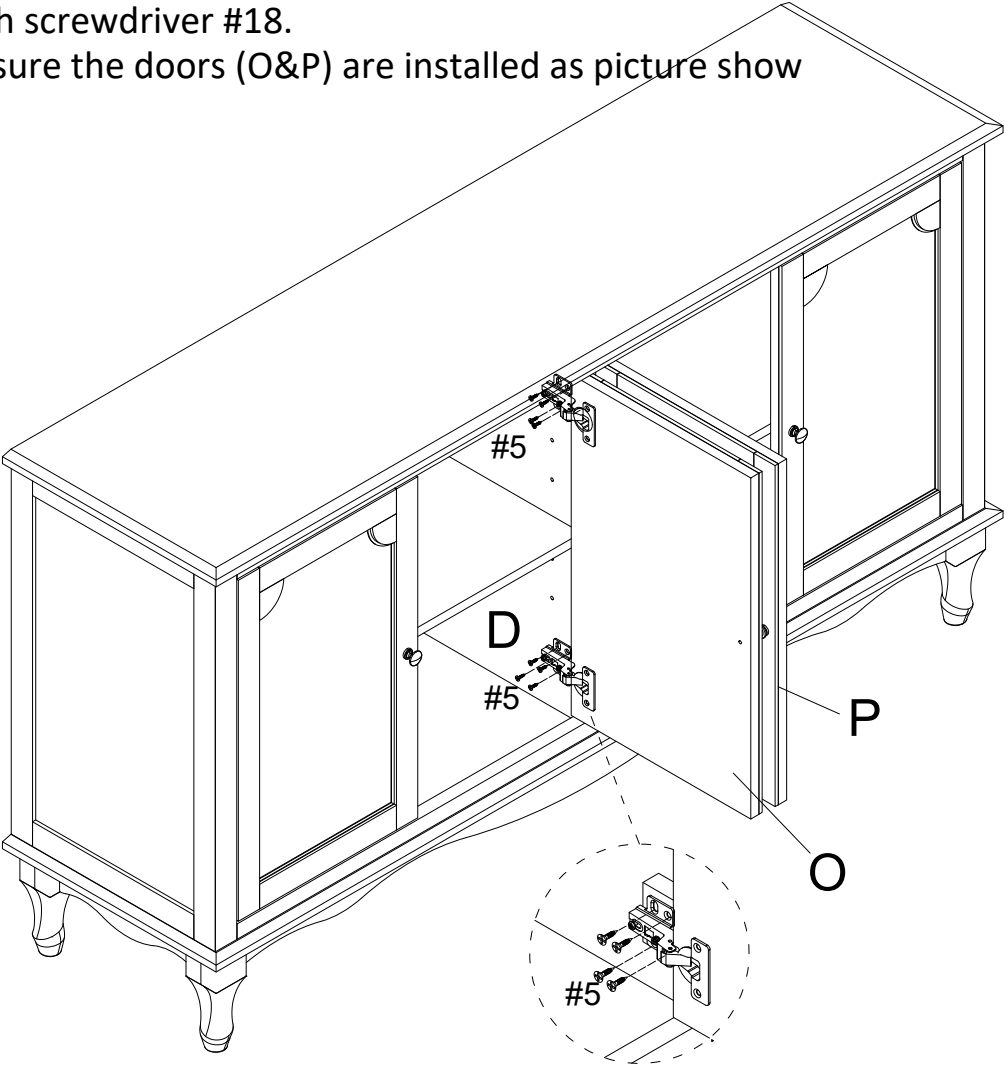

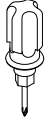
| | | | |
|--|----|---|-----|
| #18 | x1 | #5 | x16 |
|  | |  | |
| | | 4*14mm | |


ASSEMBLY INSTRUCTIONS

STEP-16


Concealed hinges are three-way adjustable:

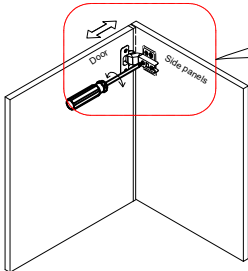


Horizontal
by screw adjustment!

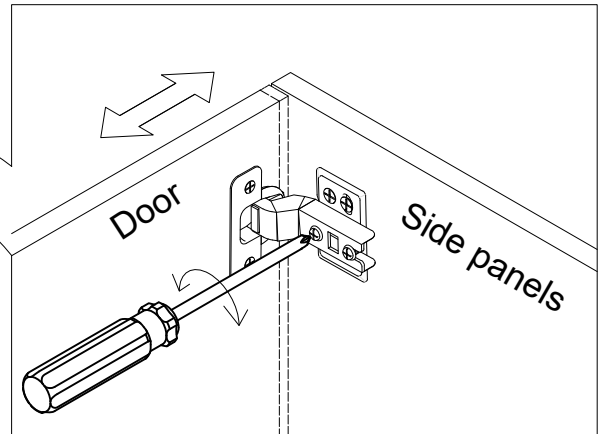


Concealed hinges are three-way adjustable:

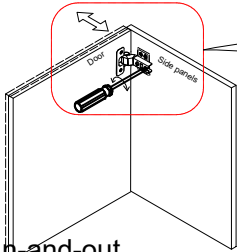


In-and-out
by loosening the hinge arm
mounting screw or via cam
adjustment!

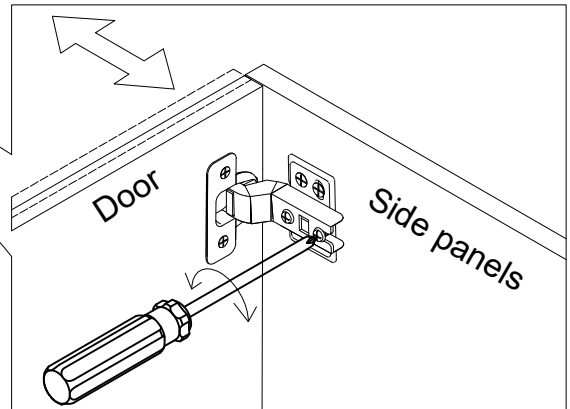

Concealed hinges are three-way adjustable:

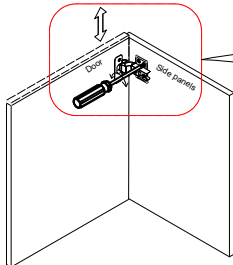

Vertical via slots in
the mounting plate
or via cam adjustment!

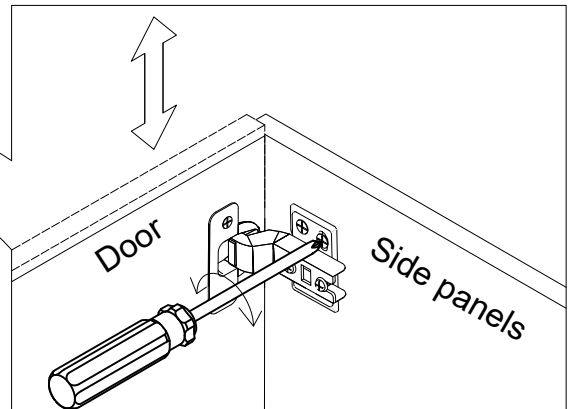



Video for door adjustment







Hinge adjustment method

ASSEMBLY INSTRUCTIONS

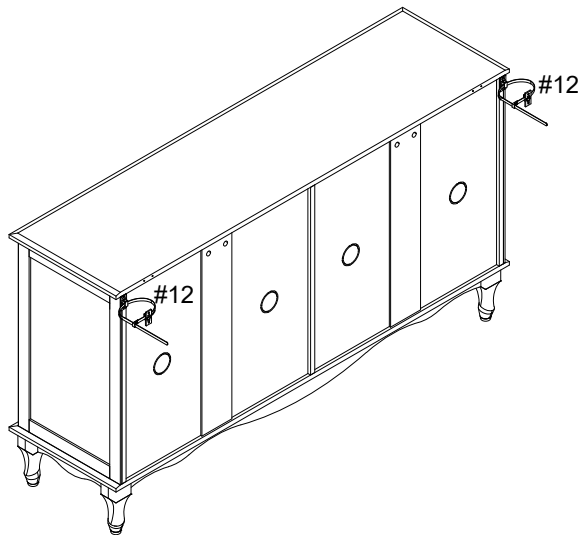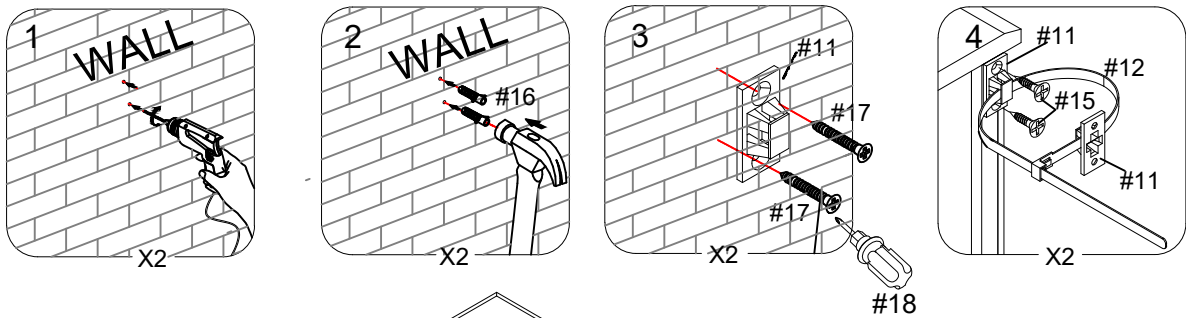STEP-17

- 1.Install the anti-collapse device.
- 2.Mark the position on the wall, that corresponds to the location of part (#11) on the Top panel (A); Drill and insert the expandable screw(#16) by hammer.
- 3.Assemble the part (#11) to the wall. Align the hole in the part (#11)with the expandable screw (#16), use screw (#17) to attach it and tighten by screwdriver (#18)
- 4.Assemble the part (#11) to the back of Part A. Align the hole in the part (#11), use screw (#15) to attach it and tighten by screwdriver (#18)
- 5.Let the plastic belt #12 pass through the both part #11 and pull tightly



| | | | | | | | | | | | |
|---|----|---|----|---|----|---|----|--|----|---|----|
| #18 | x1 | #16 | x4 | #17 | x4 | #11 | x4 | #12 | x2 | #15 | x4 |
|  | |  | |  | |  | |  | |  | |
| | | | | 4*30mm | | | | | | 3.5*14mm | |

WARRANTY

1. We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
2. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
3. Replacement parts by purchasing them with our company if they are available.

Are you having difficulty
With assembly? Missing parts?
Please send email with your order No to
customerservice@hulalahome.com

For return, please check the return policy with
the retailer or market place you bought from.

Appreciate your purchasing from us.
Pop up your life by our furniture piece!