


## **ITEM NO. Z6BCDZ0700**

Thank you for purchasing the Bookcase.



Please read the instructions and warnings carefully before use, to ensure safe and satisfactory operation of this product. At HULALA home we are committed to making great products possible. From our in-house Design Team, to our Buyers, we work together to bring great designs to life. Our expert Product Technologists work collaboratively with our buyers and suppliers to assure the legality, safety and quality of the product we sell. We are all committed to designing and developing products to the highest industry standards. We hope you are happy with your product and welcome any feedback or comments you may have.

# Exploded Diagram


in Carton A

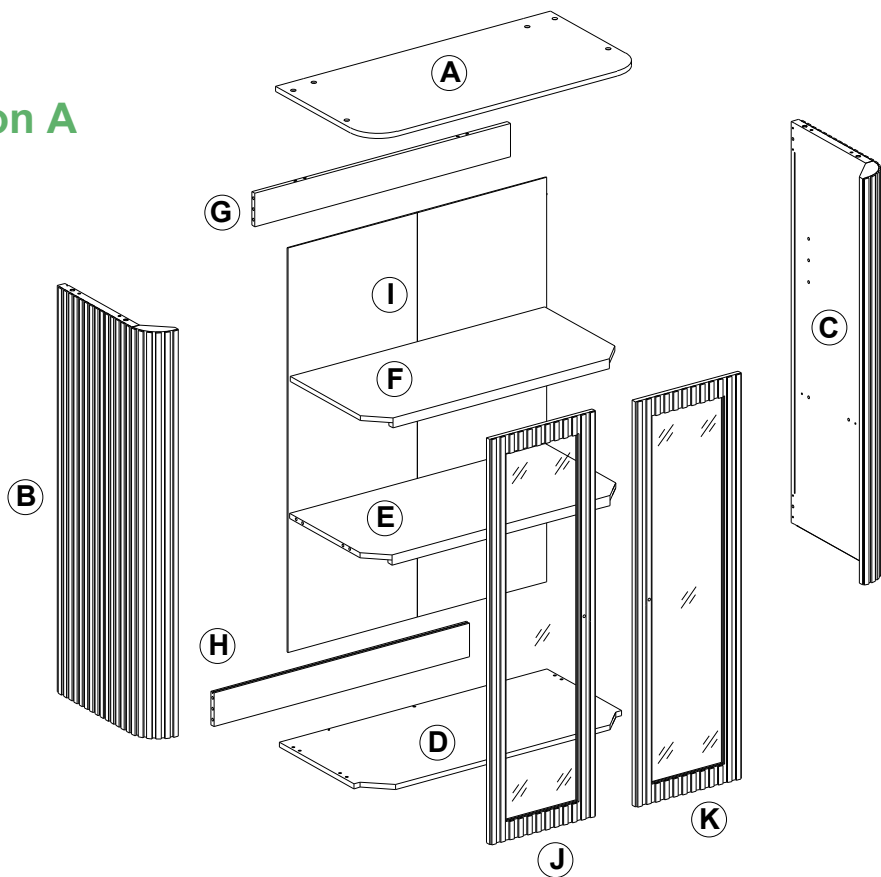









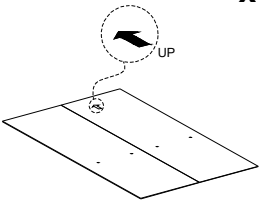
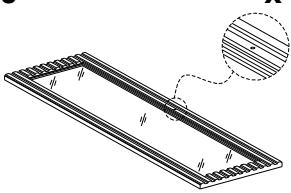
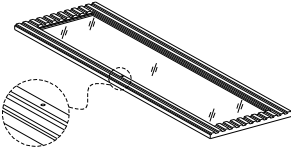
in Carton B

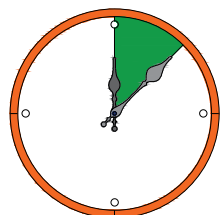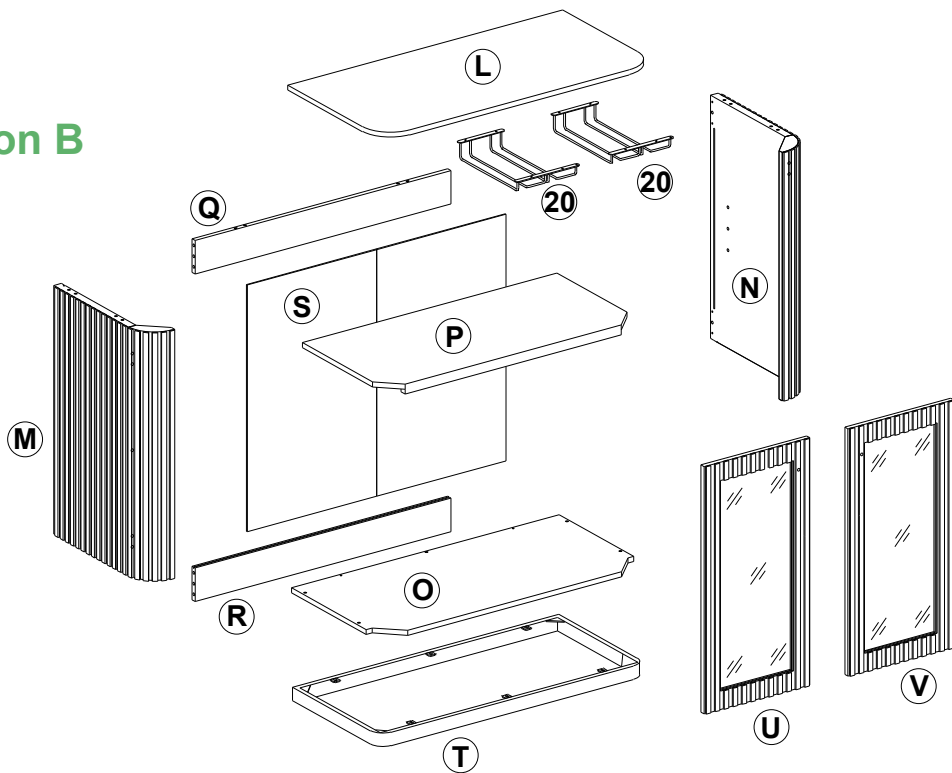













Around 45 min



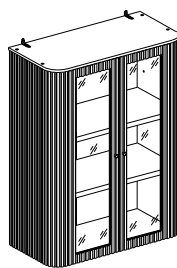



## PARTS LIST (Carton A)

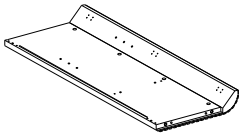
<b>A</b> x 1  Upper Top Panel	<b>B</b> x 1  Upper Left Side Panel	<b>C</b> x 1  Upper Right Side Panel	<b>D</b> x 1  Upper Bottom Panel
<b>E</b> x 1  Fixed Shelf	<b>F</b> x 1  Upper Adjustable Shelf	<b>G</b> x 1  Upper Back Cross Rail	<b>H</b> x 1  Back Cross Rail
<b>I</b> x 1  Upper Back Panel	<b>J</b> x 1  Upper Left Door	<b>K</b> x 1  Upper Right Door	












## HARDWARE LIST (In Carton A)

<b>1</b> x 18+2  Cam Bolt	<b>2</b> x 18+2  Cam Lock	<b>3</b> x 18+2  Wood Dowel 8x30mm	<b>4</b> x 8+1  Bolt M6X25mm
<b>5</b> x 1  Allen Key 4mm	<b>6</b> x 2  Bolt M6X12mm	<b>7</b> x 2  Anti-tipping Hardware	<b>8</b> x 46+4  Flat Head Screw Ø4X14 mm
<b>9</b> x 2  L Bracket	<b>10</b> x 6+1  Plastic wedge For back panel	<b>11</b> x 4+1  Round Head Screw Ø4X14mm	<b>12</b> x 6  Hinge 45°










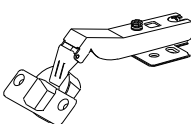






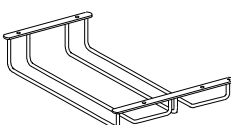
<b>13</b> <b>x 2</b>  <b>Bolt For Handle M4*24</b>	<b>14</b> <b>x 2</b>  <b>Handle</b>	<b>15</b> <b>x 1</b>  <b>Screwdriver</b>	<b>17</b> <b>x 4+1</b>  <b>Shelf support</b>
---	--	--	---
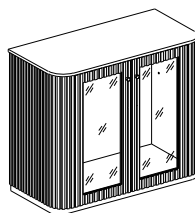
## PARTS LIST (Carton B)

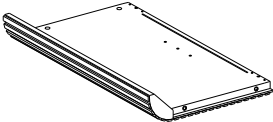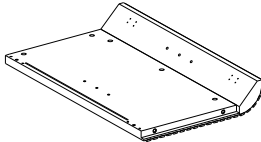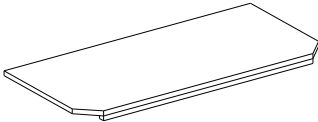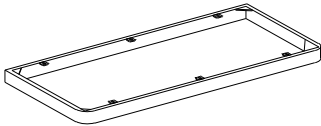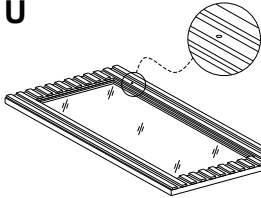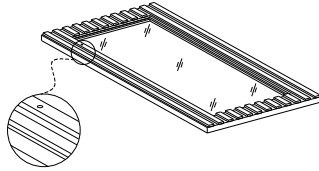

<b>L</b> <b>x 1</b>  <b>Lower Top Panel</b>	<b>M</b> <b>x 1</b>  <b>Lower Left Side Panel</b>	<b>N</b> <b>x 1</b>  <b>Lower Right Side Panel</b>	<b>O</b> <b>x 1</b>  <b>Lower Bottom Panel</b>
<b>P</b> <b>x 1</b>  <b>Lower Adjustable Shelf</b>	<b>Q</b> <b>x 1</b>  <b>Upper Back Cross Rail</b>	<b>R</b> <b>x 1</b>  <b>Lower Back Cross Rail</b>	<b>S</b> <b>x 1</b>  <b>Lower Back Panel</b>
<b>T</b> <b>x 1</b>  <b>Bottom Frame</b>	<b>U</b> <b>x 1</b>  <b>Lower Left Door</b>	<b>V</b> <b>x 1</b>  <b>Lower Right Door</b>	


## HARDWARE LIST (In Carton B)
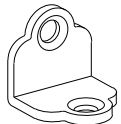
<b>1</b> <b>x 18+2</b>  Cam Bolt	<b>2</b> <b>x 18+2</b>  Cam Lock	<b>3</b> <b>x 10+1</b>  Wood Dowel Ø8x30mm	<b>4</b> <b>x 4</b>  Bolt M6X25mm
<b>5</b> <b>x 1</b>  Allen Key 4mm	<b>6</b> <b>x 10+1</b>  Bolt M6X12mm	<b>8</b> <b>x 42+4</b>  Flat Head Screw Ø4X14 mm	<b>9</b> <b>x 2</b>  L Bracket
<b>10</b> <b>x 6</b>  Plastic wedge For back panel	<b>12</b> <b>x 4</b>  Hinge 45°	<b>13</b> <b>x 2</b>  Bolt For Handle M4*24	<b>14</b> <b>x 2</b>  Handle
<b>16</b> <b>x 2</b>  Connector	<b>17</b> <b>x 4+1</b>  Shelf Support	<b>18</b> <b>x 2</b>  Anchor	<b>19</b> <b>x 2</b>  Round head screw Ø4X25
<b>20</b> <b>x 2</b>  Wine Glass Rack			


Before your installation, please make sure that you have all the parts listed on the manual. If you find something missing, stop installing and contact your supplier immediately.

NOTE: Should be assembled on soft surface to keep balance.


## IF HAVE THIS ACCESSORY

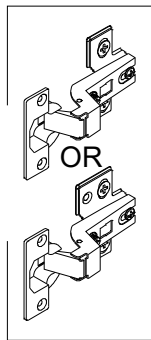


It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

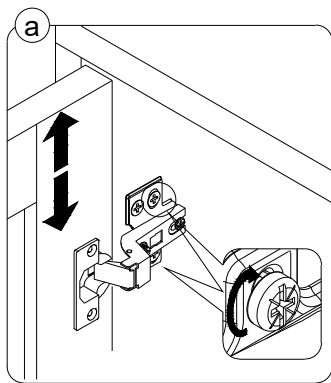


To adjust the door vertically loosen the screw as shown and move up and down as needed.

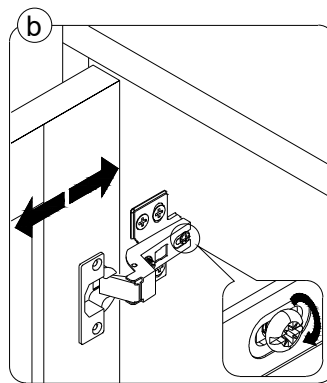

To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

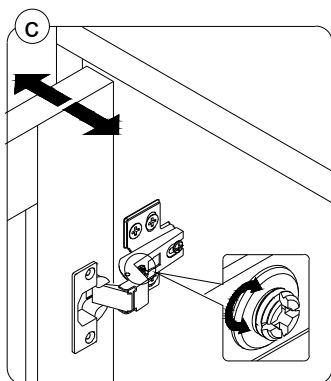


To adjust the door laterally adjust the screw as shown by turning clockwise or anti-clockwise.

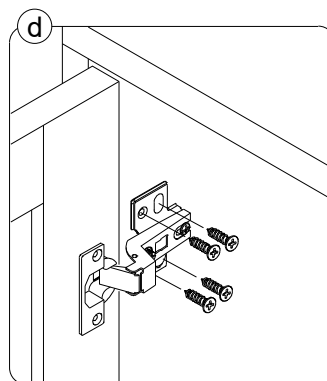


Please fix all screws.


## IF HAVE THIS ACCESSORY

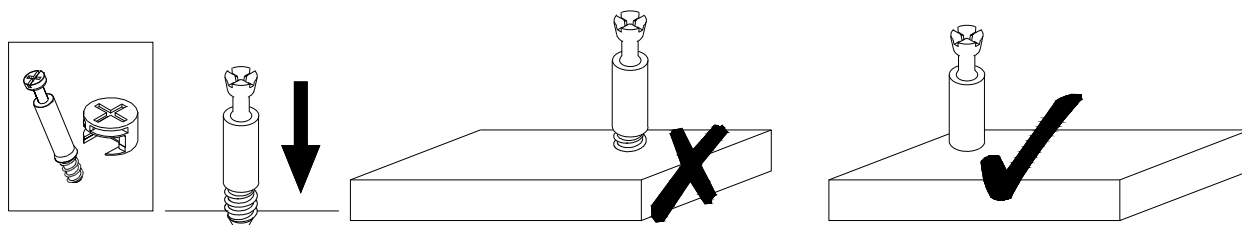


QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

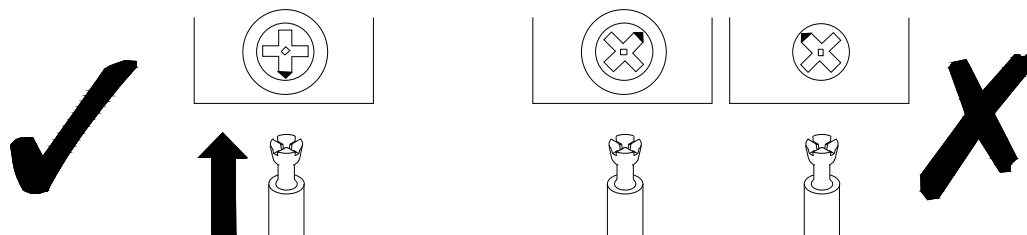

CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.


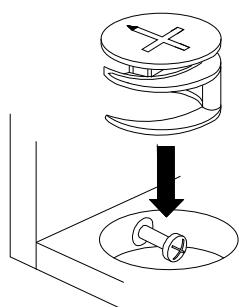


Quickfit head should be in the centre of the cam lock when the two panels are joined.

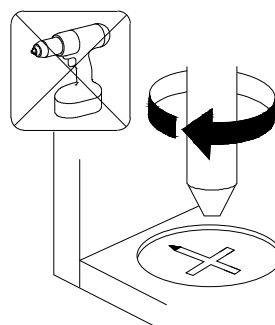


Turn cam lock clockwise to tighten.



## STEP 1

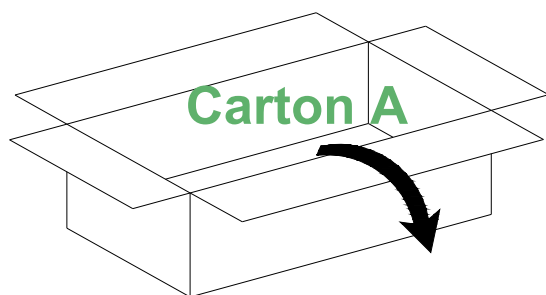


Hardware box

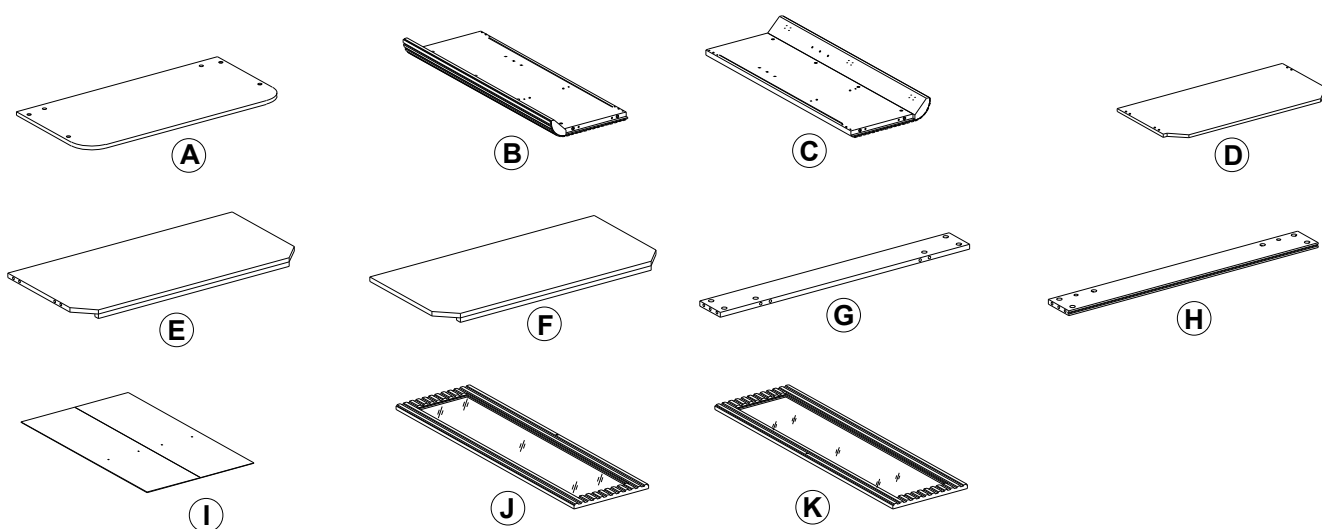



## STEP 2

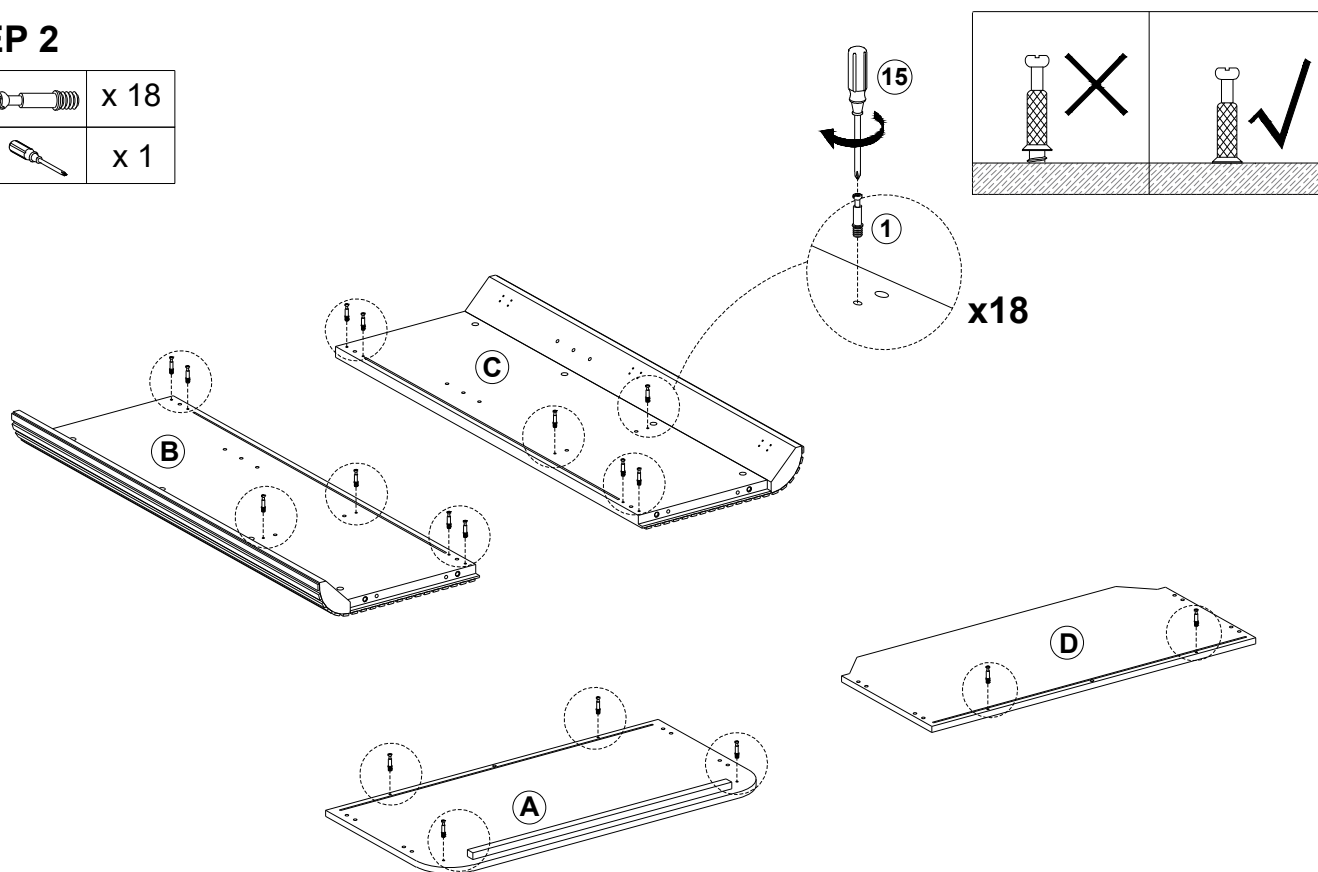1		x 18
15		x 1





Insert cam bolt (1) into the upper side panels (B) and (C), the upper top panel (A), and the upper bottom panel (D), and tighten them with the screwdriver (15) as shown.

### STEP 3

2		x 6
3		x 4



Note:  
Pay attention to the  
direction of the slot.

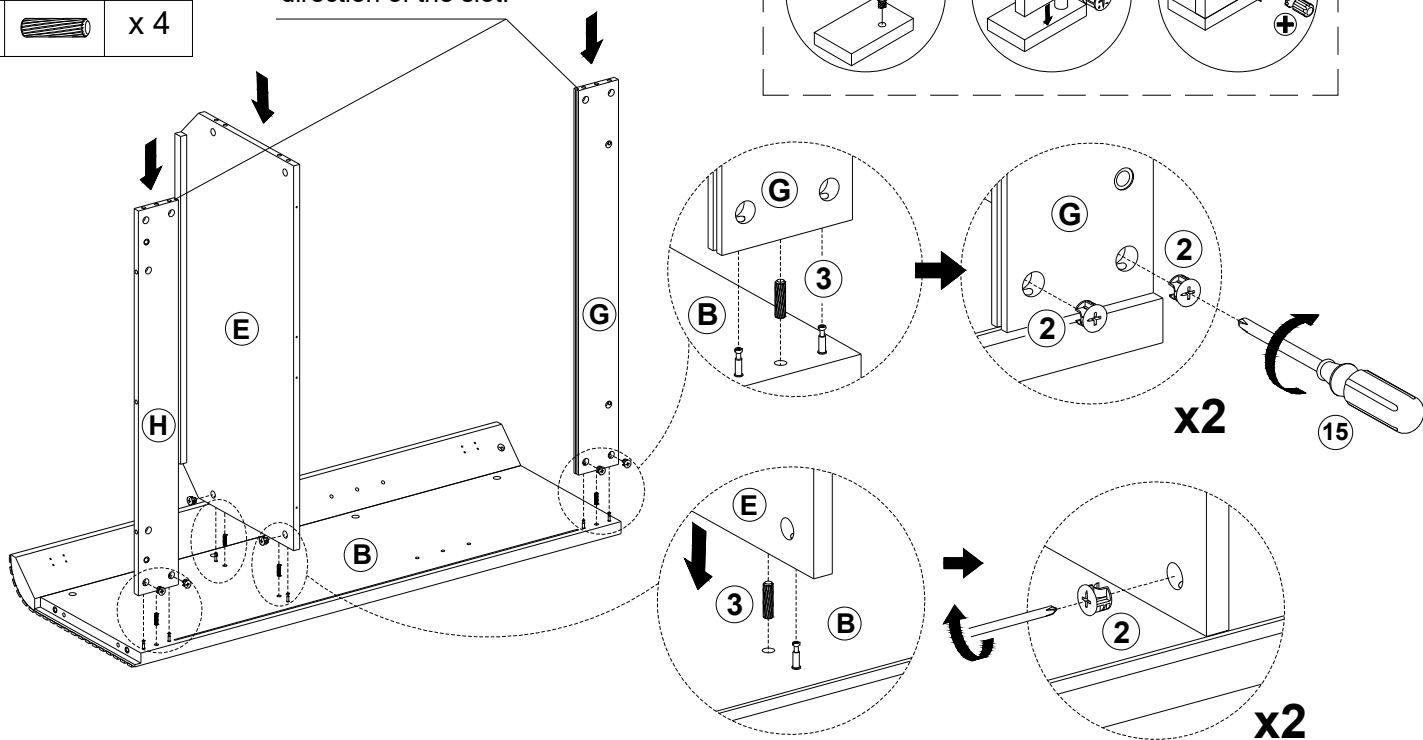
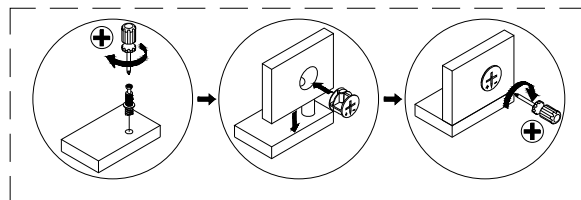


Insert the back cross rail (G) and (H) , and fixed shelf (E) into the left upper left side panel (B), Connect them with wood dowel (3), and secure the assembly with cam lock (2).

### STEP 4



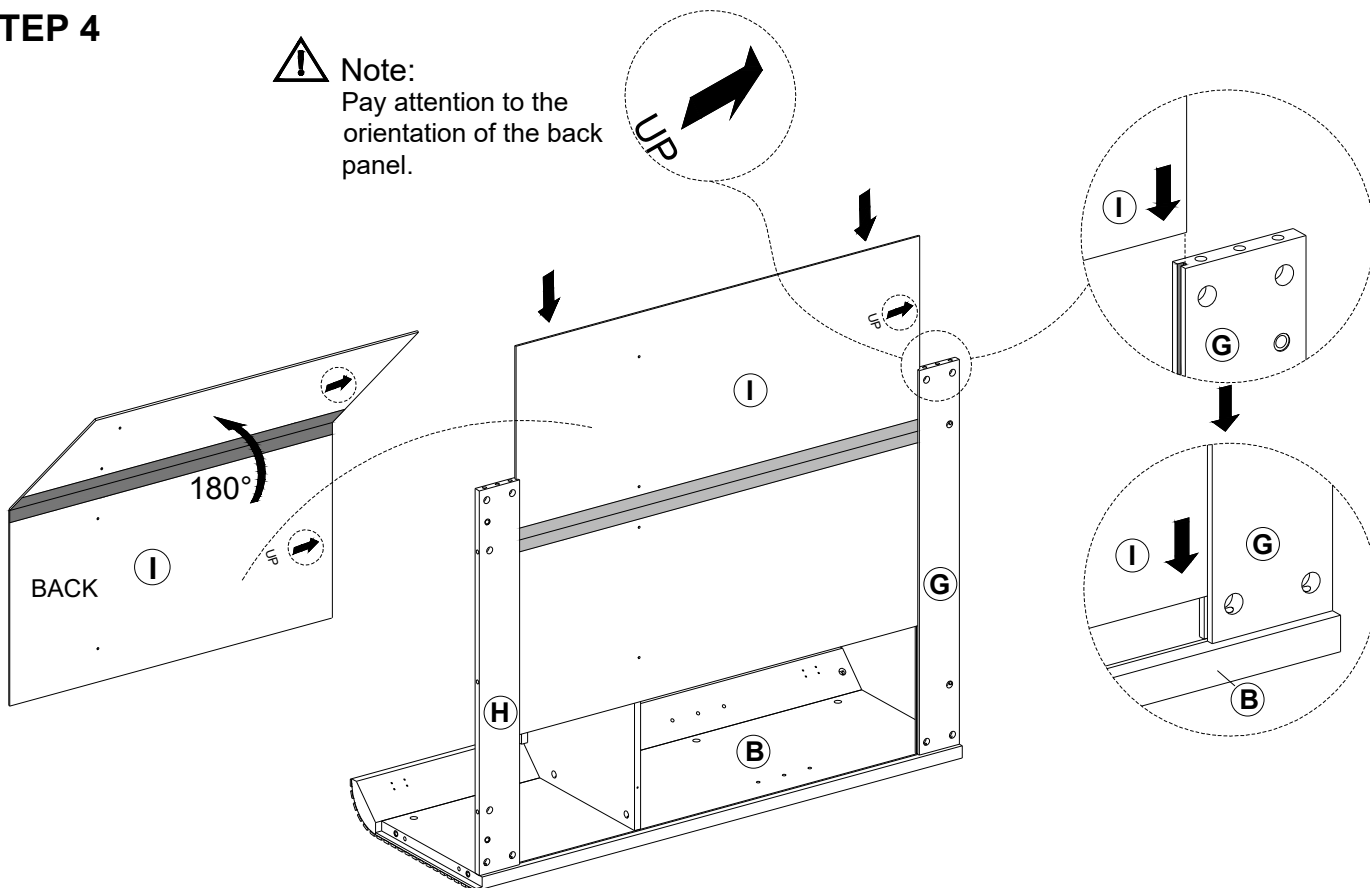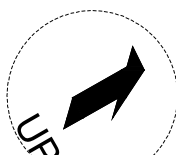

Note:  
Pay attention to the  
orientation of the back  
panel.




Open the folded upper back panel(I) , then align it and insert the upper back panel (I) into the slot of parts (B)/(H) / (G) as shown .





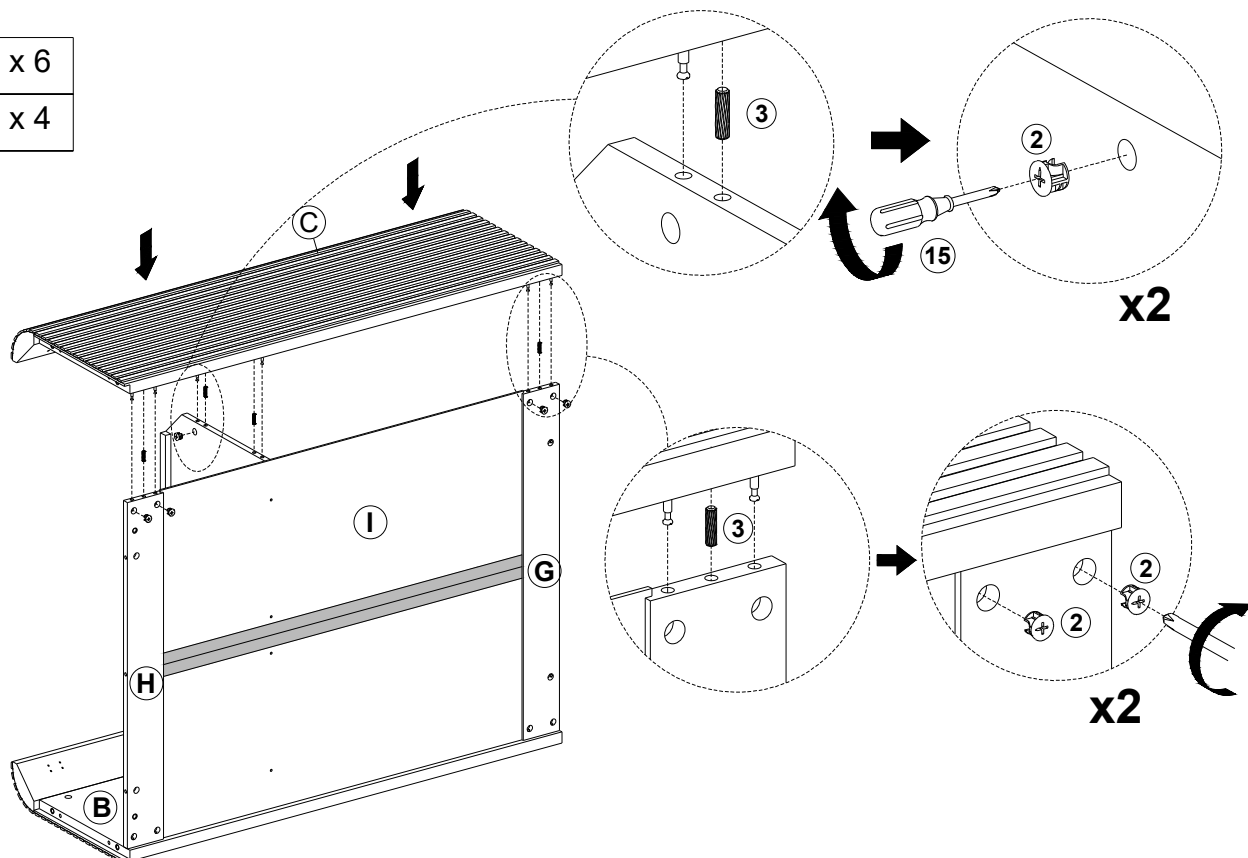

## STEP 5


2		x 6
3		x 4



Insert the back cross rail (G) and (H), and the fixed shelf (E) into the upper right side panel (C), Connect them with wood dowel (3), and secure the assembly with cam lock (2).

## STEP 6

2		x 2
3		x 5
4		x 4
5		x 1

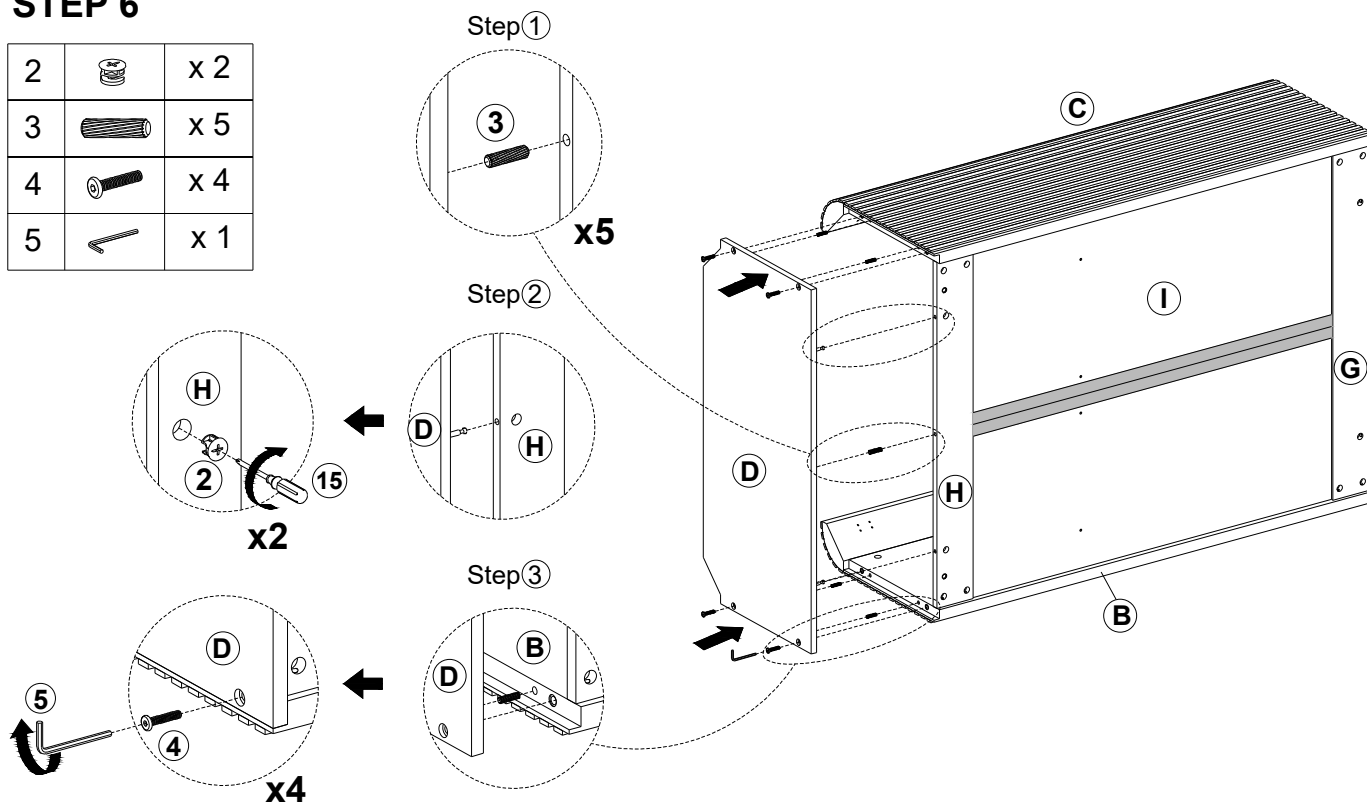


1. Insert the wood dowel (3) into the holes on parts (B)/(C) and (H) and connect it to the upper bottom panel (D), Then secure it with the connector cam lock (2).

2. Use bolts (4) to pass through the holes in the upper bottom panel, and tighten them with an Allen key (5).

## STEP 7




Note:  
The operation requires two adults to complete

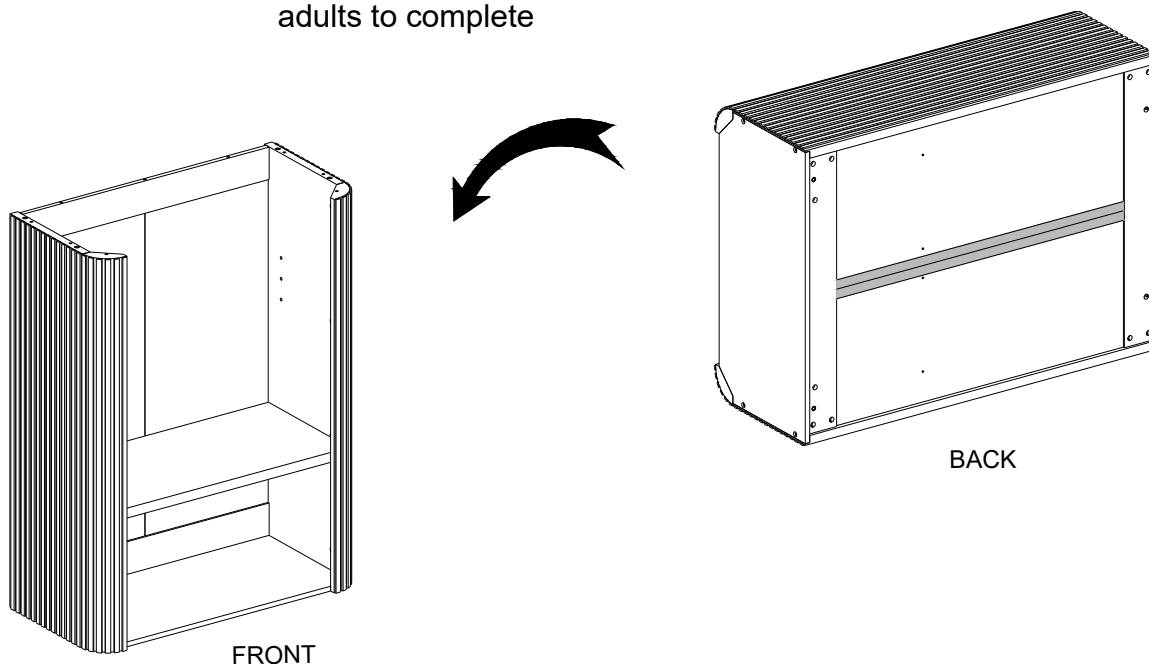


## STEP 8

2		x 2
3		x 5
4		x 4


Step ①

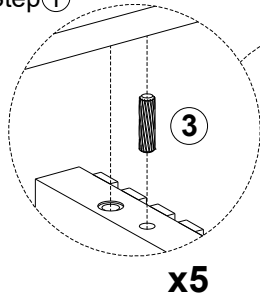

Step ③

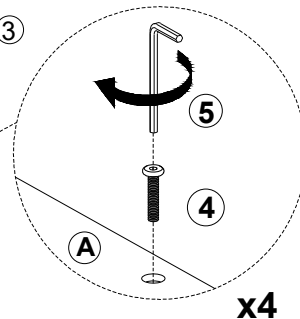

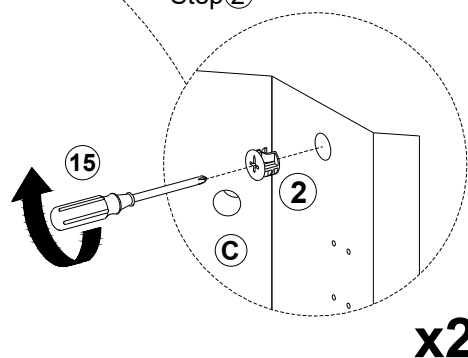


Step ②



1. Insert the wood dowels (3) into the holes on parts (B), (C), and (G), and connect them to the upper top panel (A). Secure with the cam lock (2).
2. Pass the bolt (4) through the hole in the upper top panel (A) and tighten using the Allen key (5).



## STEP 9

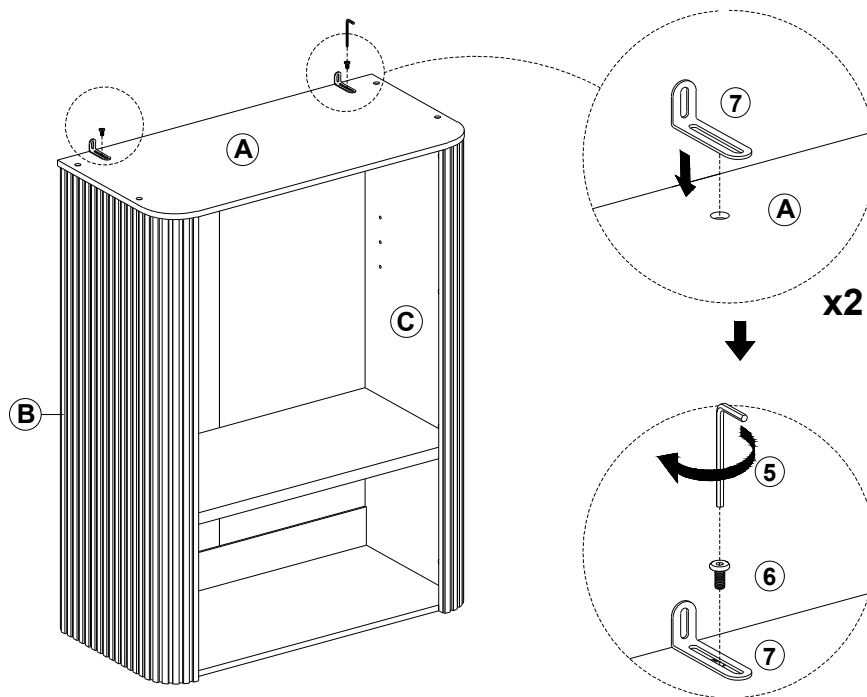
6		x 2
7		x 2



Use bolts (6) to install the anti-tilt hardware (7) on the upper top panel (A), and tighten them with the Allen key (5).



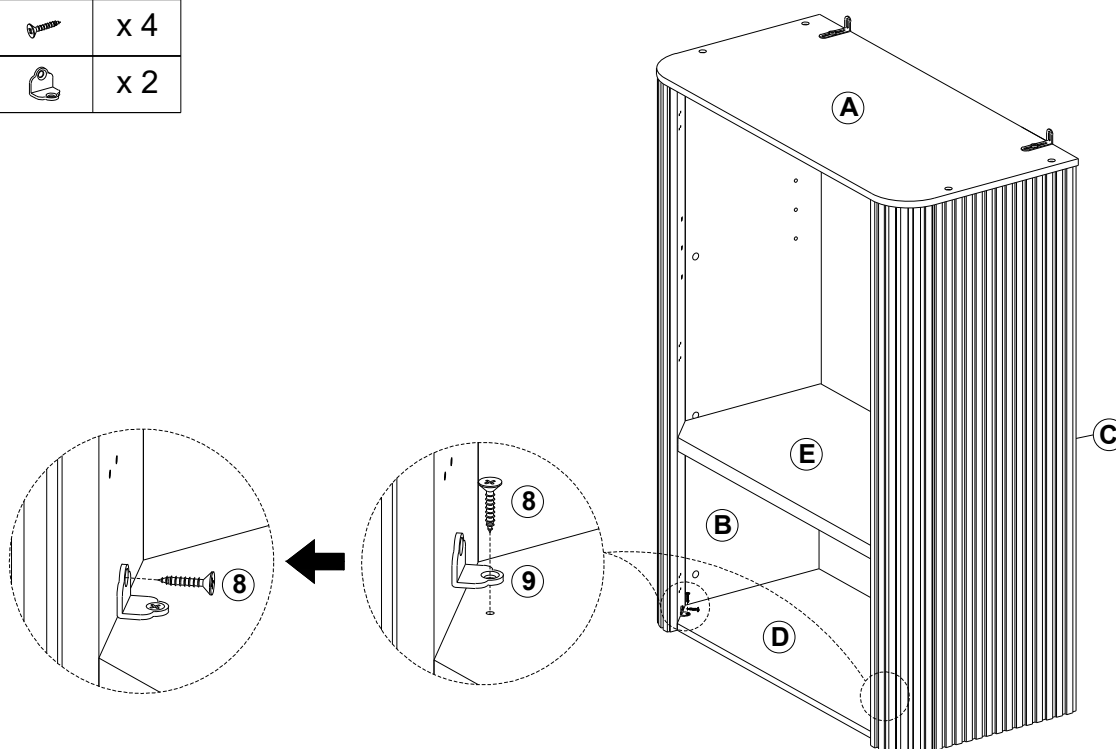

## STEP 10


8		x 4
9		x 2



Attach the L- bracket to the upper bottom panel (D), the left upper side panel (B), and the right upper side panel (C). Tighten and secure with flat head screws (8).



## STEP 11

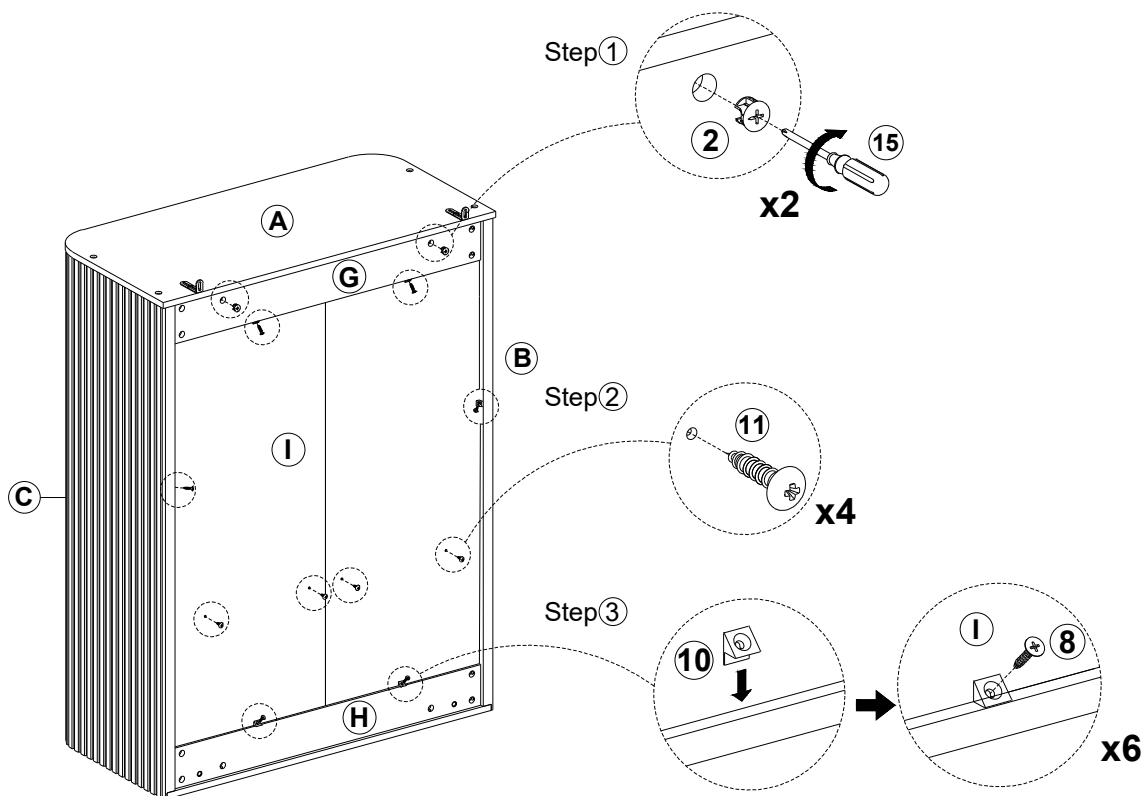
2		x 2
8		x 6
10		x 6
11		x 4



1. Insert cam lock (2) into the cross back panel (G) and tighten it with a screwdriver as shown.
2. Insert the round-head screw (11) into the hole of the upper back panel (I) and tighten it with a screwdriver.
3. Insert the plastic wedge (10) into the gap at the edge of the upper back panel (I), then insert the flat-head screw (8) into the hole of the plastic wedge (10) and tighten it with a screwdriver.




## STEP 12

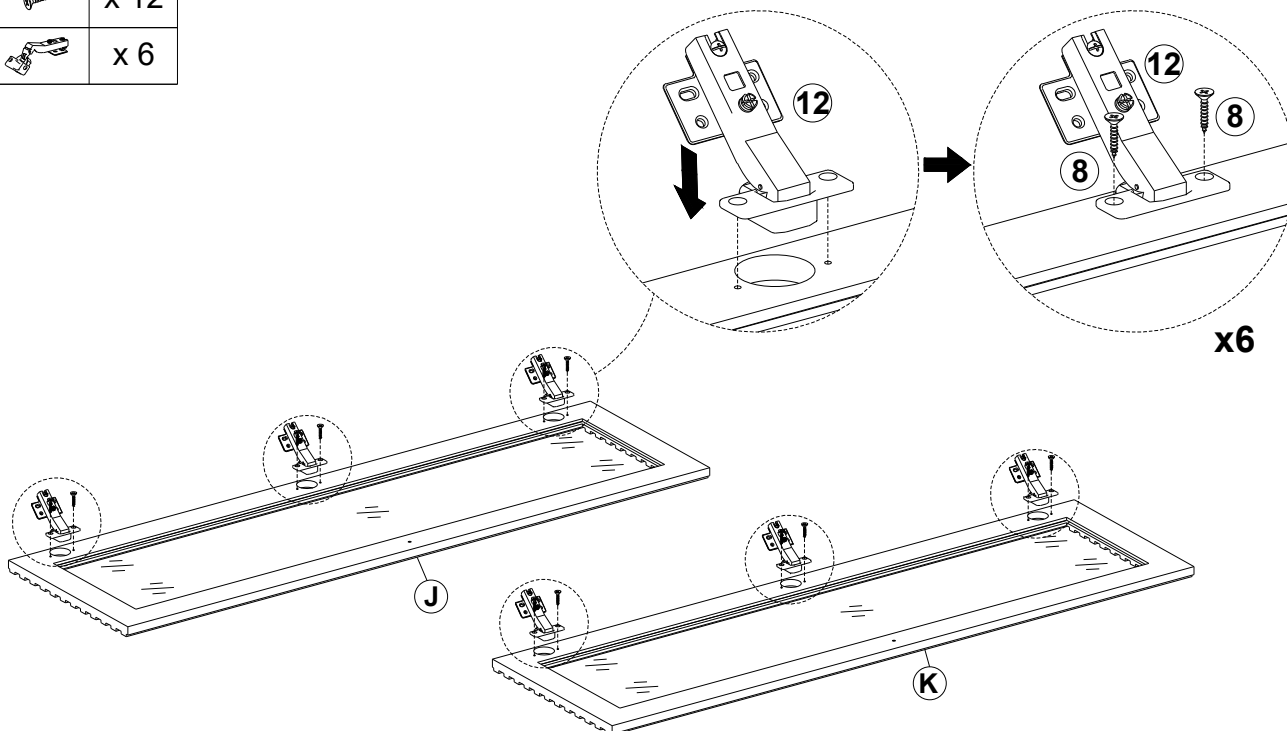
8		x 12
12		x 6



Use flat-head screws (8) to attach the hinge (12) to the door panel (J)(K), and tighten with a screwdriver.




## STEP 13

8		x 24
13		x 2
14		x 2

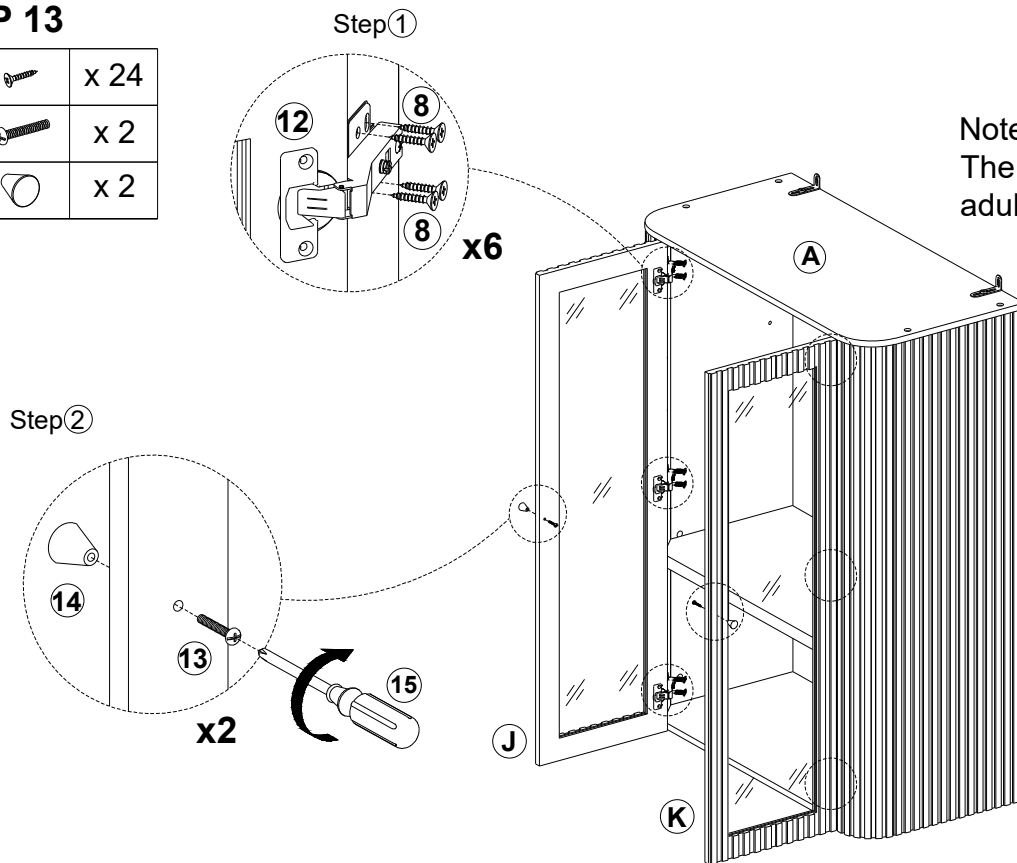



1. As shown, use flat-head screws (8) to secure the hinges (12) of the door panels (J)(K) to the assembled cabinet body.
2. Install the handle (14) onto the door with bolts (13) and tighten the bolts with a screwdriver.

## STEP 14

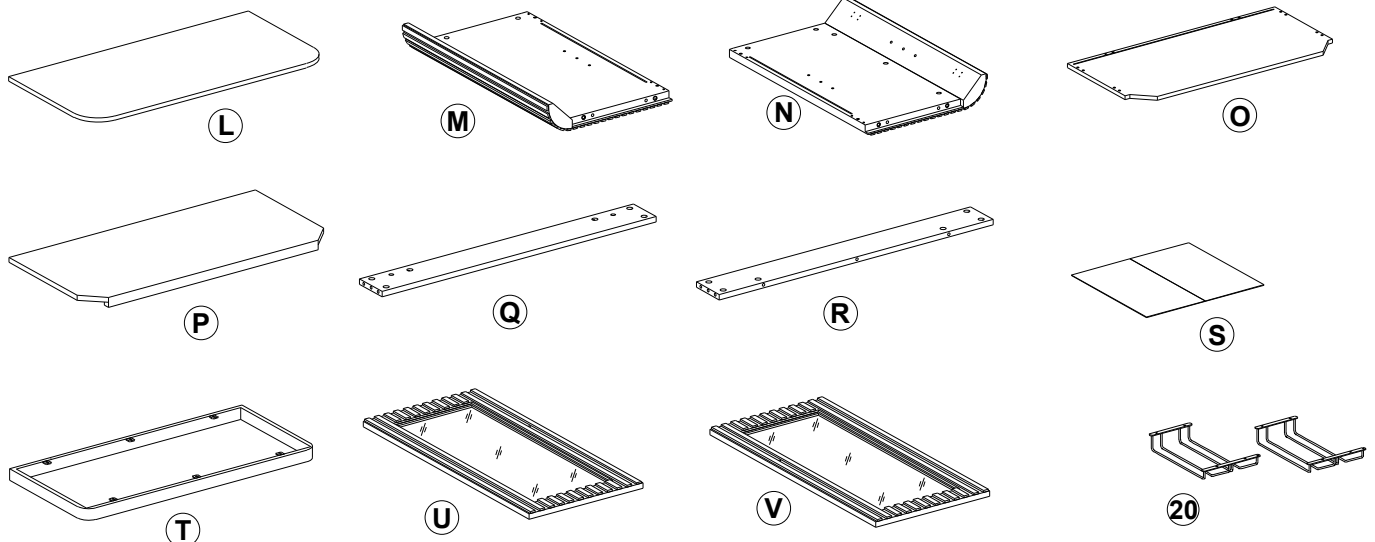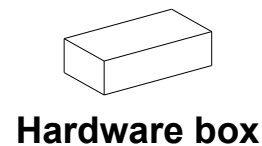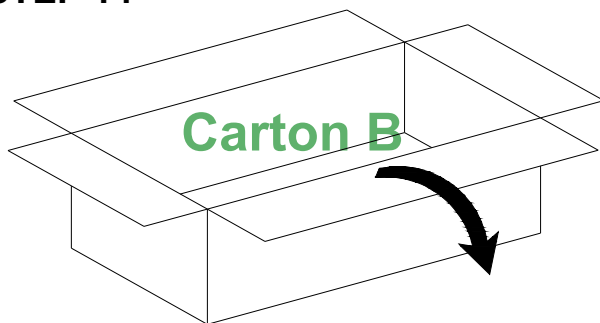




## STEP 15

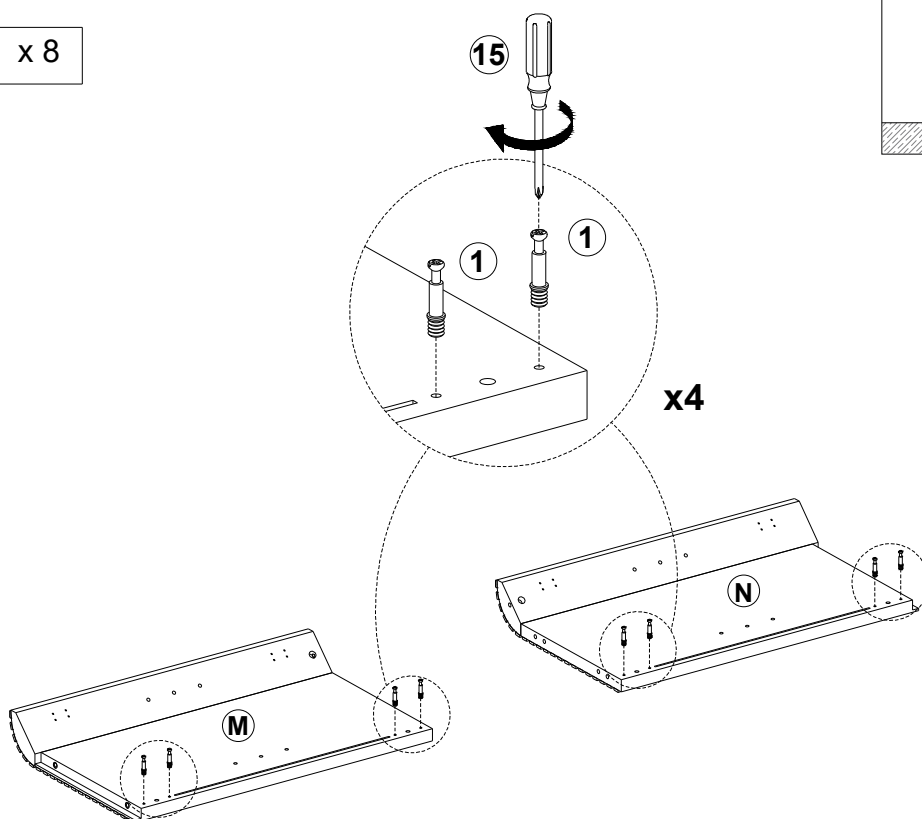
1		x 8
---	---	-----



Insert the cam bolts (1) into the left lower side panel (M) and the right lower side panel (N), and tighten them with the screwdriver (15) as instructed.



## STEP 16

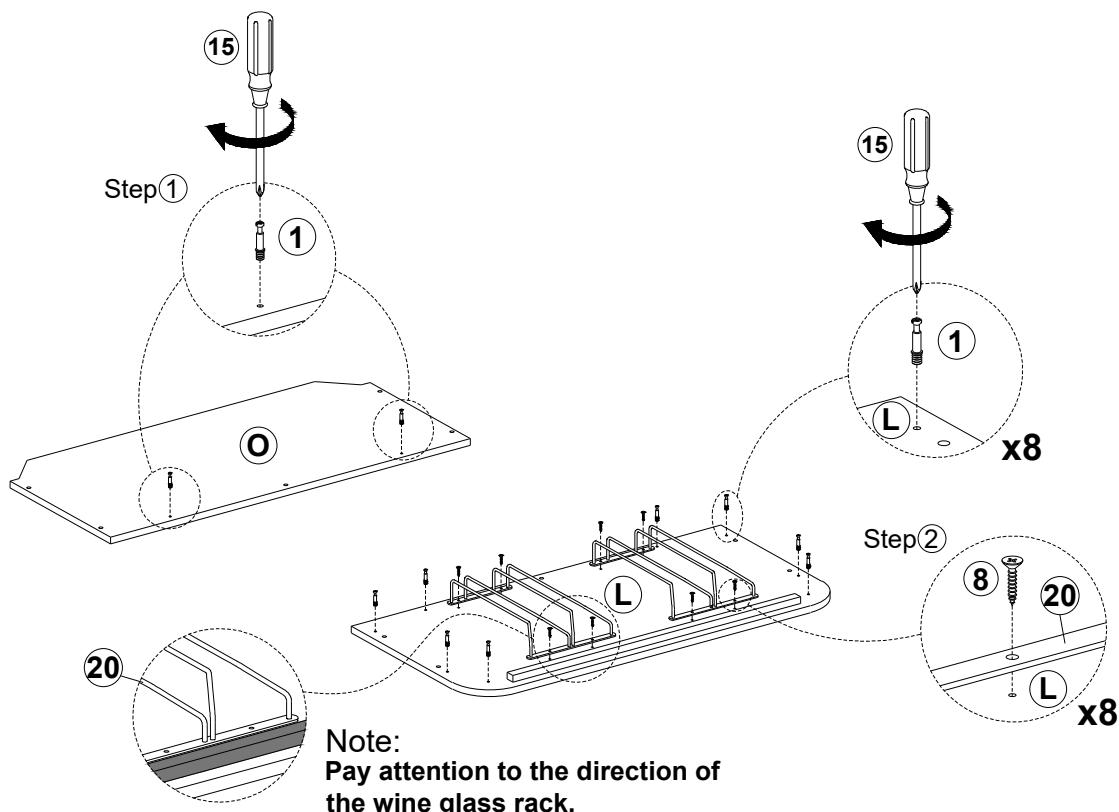1		x 10
8		x 8
20		x 2




1. Insert the cam bolts (1) into the lower panel (O) and tighten them with a screwdriver (15) as instructed.
2. Insert the cam bolts (1) into the lower top panel (L). Use bolts (8) to attach the wine glass rack (20) to the lower top panel (L), screw in with a screwdriver, and tighten with the screwdriver (15) according to the instructions.

## STEP 17


2		x 4
3		x 2

Note:  
Pay attention to the  
direction of the slot.

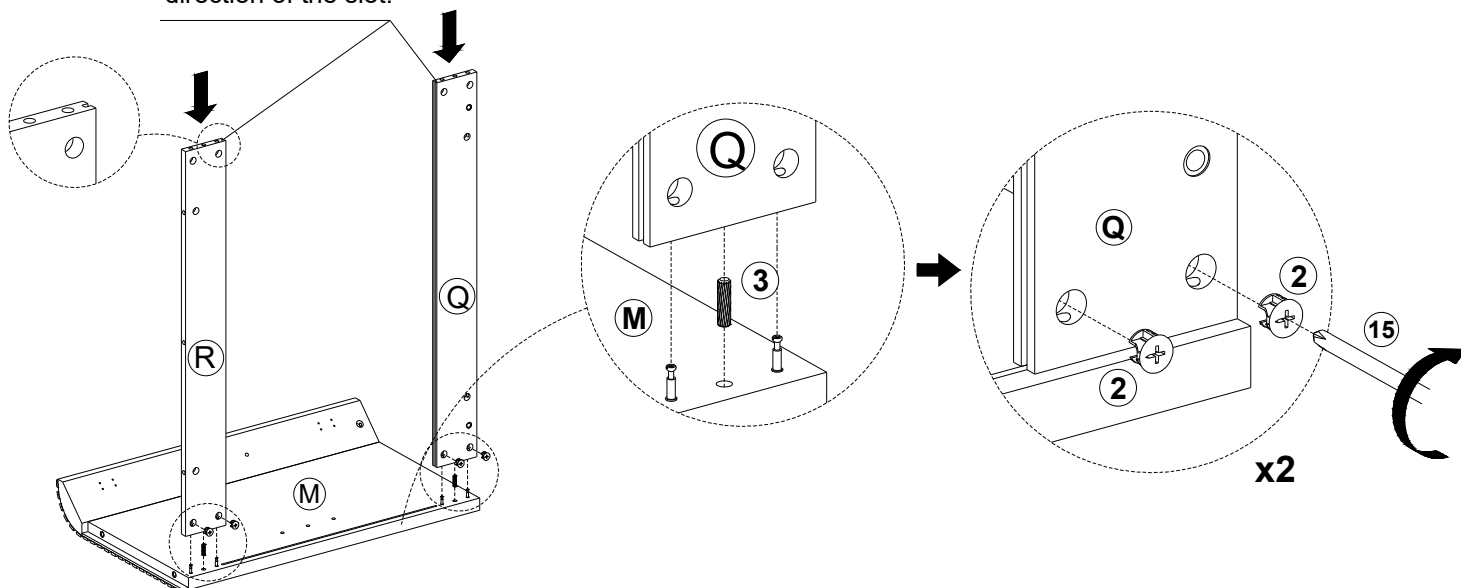



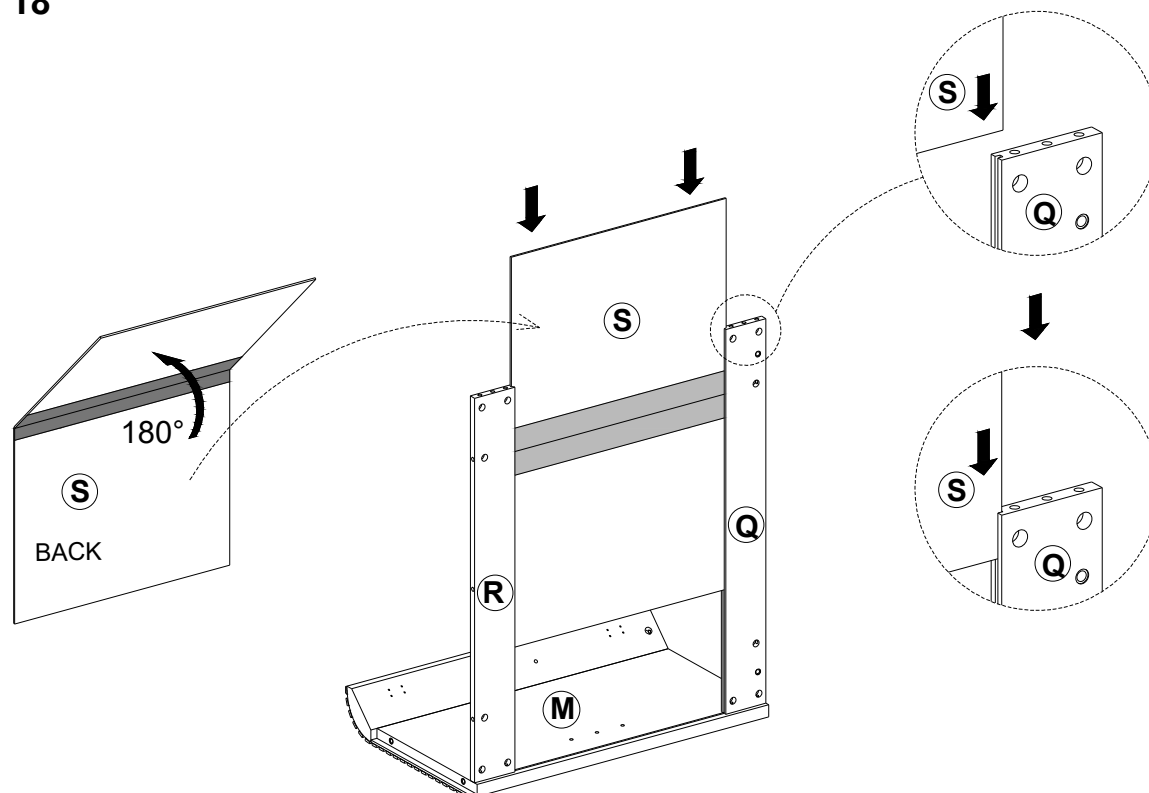

Insert the lower back cross (Q) and lower back cross (R) into the left lower side panel (M), connect with wooden dowels (3), and secure the assembly with cam lock (2).


## STEP 18



Open the folded back panel, then align it and insert the back panel (S) into the slot of parts (M)/(Q)/(R) as shown .

## STEP 19

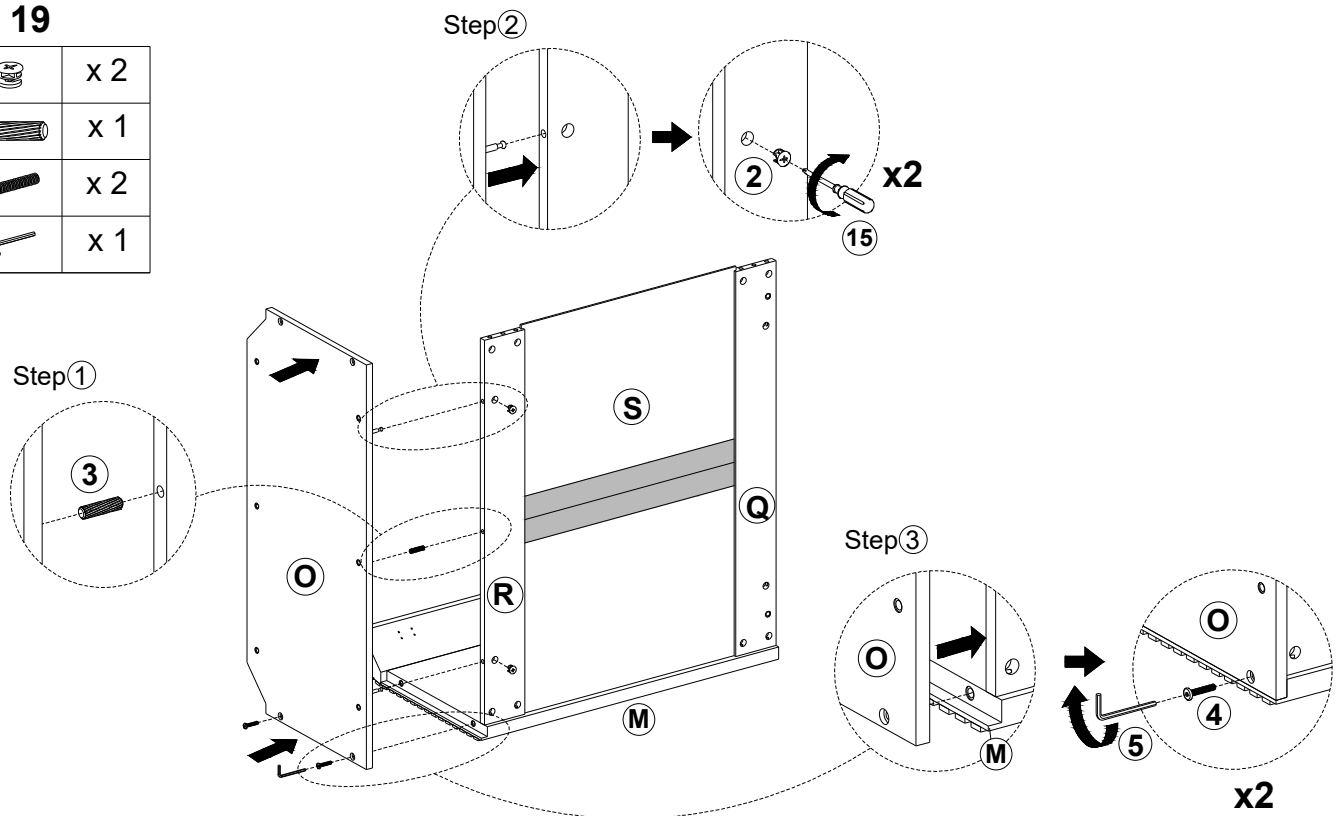


2		x 2
3		x 1
4		x 2
5		x 1




1. Insert the wooden dowel (3) into the hole on part (R) and connect it to the lower bottom panel (O). Secure it with the connector cam lock (2).

2. Use the bolt (4) to pass through the holes in the lower bottom panel (O) and tighten it with the Allen key (5).

## STEP 20

2		x 4
3		x 2
4		x 2

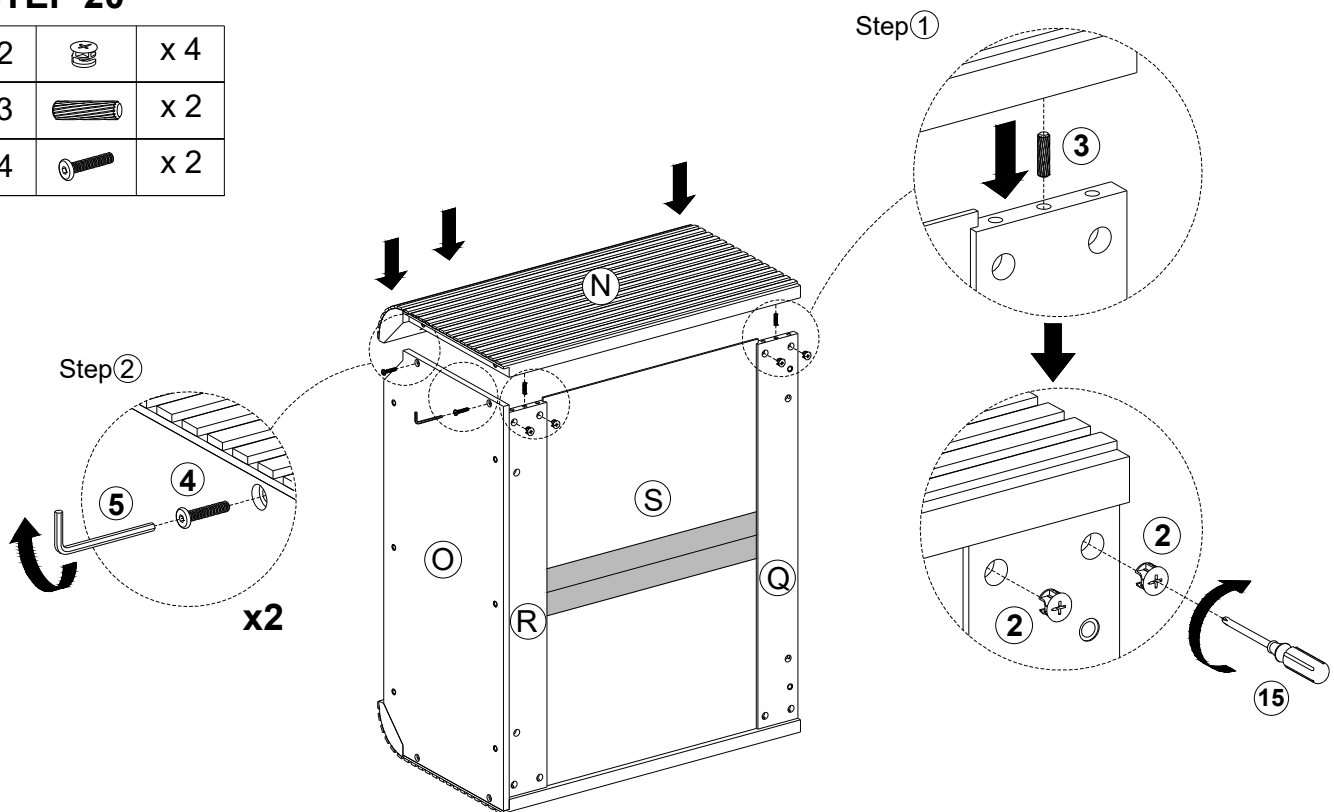


1. Insert the wooden dowel (3) into the hole at the lower back cross (Q) and lower back cross (R), and connect it to the right lower side panel (N). Secure it with the connector cam lock (2).

2. Use the bolt (4) to pass through the hole of the lower bottom panel (O), and tighten it with the Allen key (5).



## STEP 21


6		x 6
---	---	-----

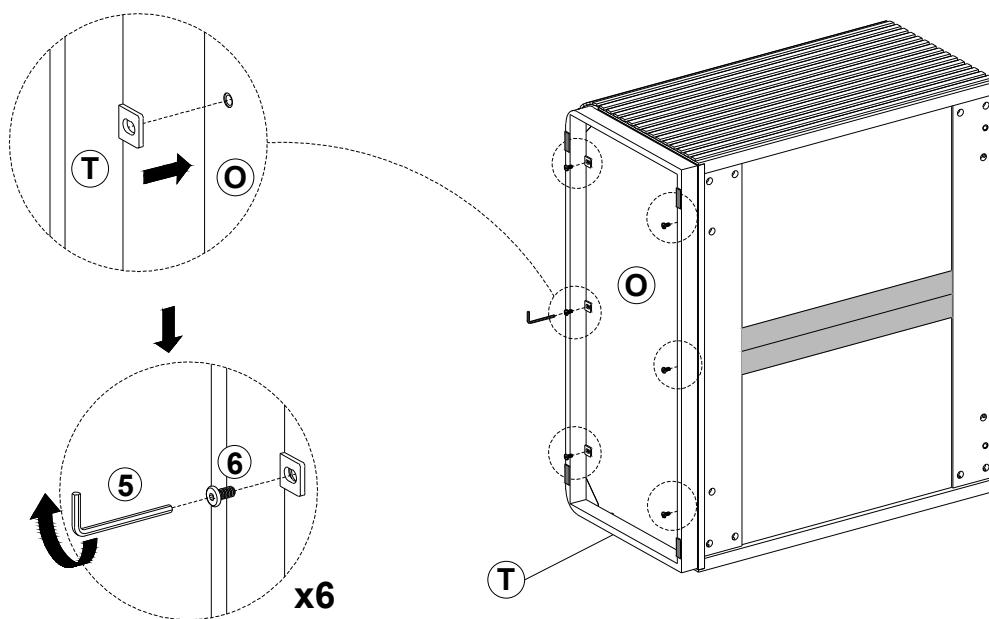



**Note:**  
Fully tighten the bolts in sequence  
after all bolts proper connected.

Use the bolt (6) to pass through the hole in the lower base support (T), and tighten it using the Allen key (5).

## STEP 22

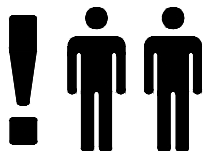

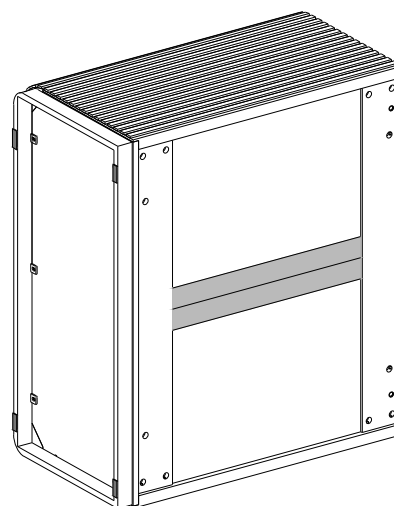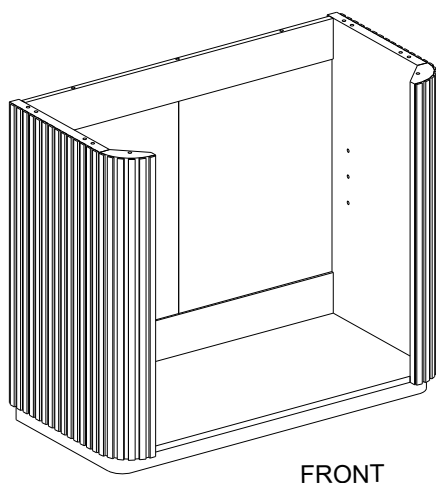


**Note:**  
The operation requires two  
adults to complete



BACK



## STEP 23

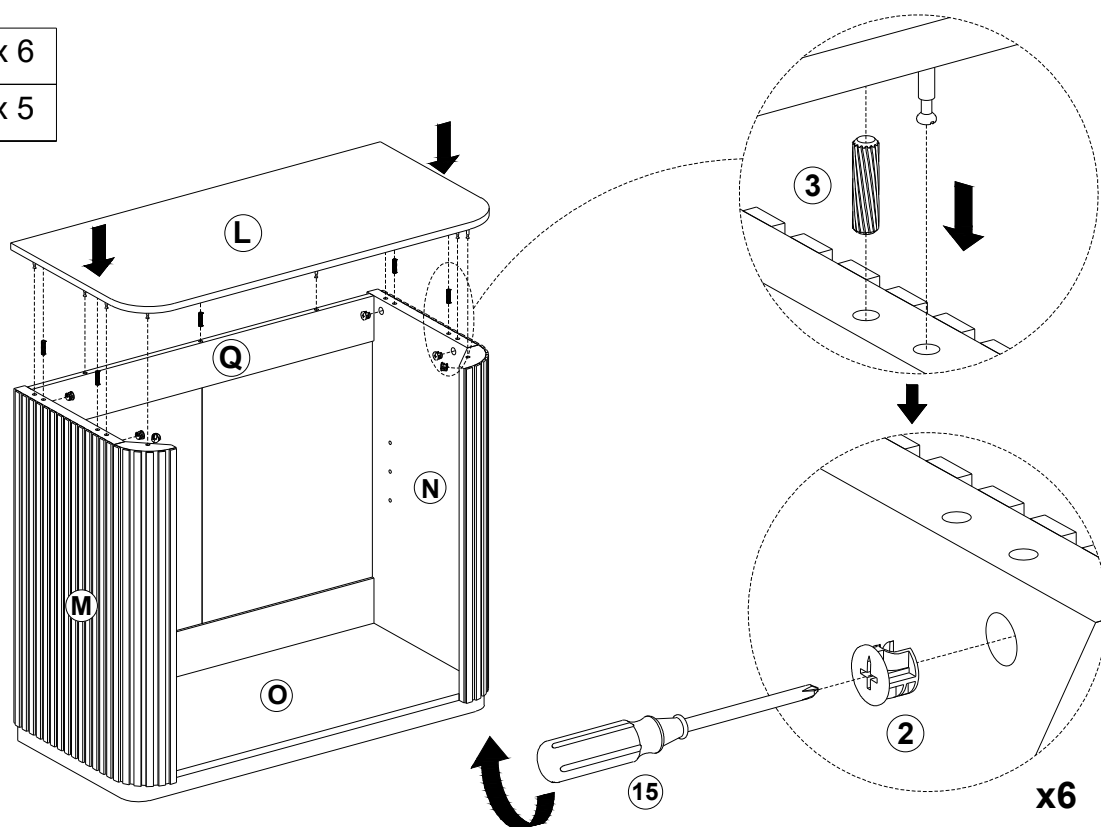
2		x 6
3		x 5



Insert wood dowel (3) into holes of parts (L) (M) (N) ,Then using the cam lock (2) to secure the lower top panel (L).




## STEP 24

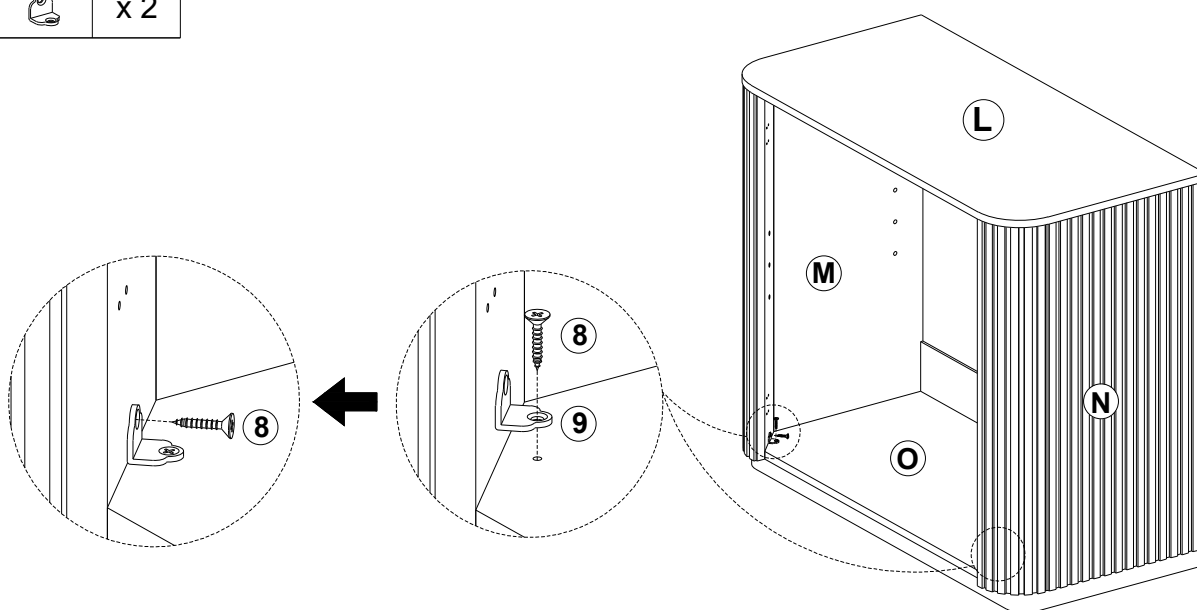
8		x 4
9		x 2



Attach the L-shaped bracket to the lower bottom panel (O) on the left lower side panel (M) and the right lower side panel (N). Tighten and secure it with flat-head screws (8).



## STEP 25

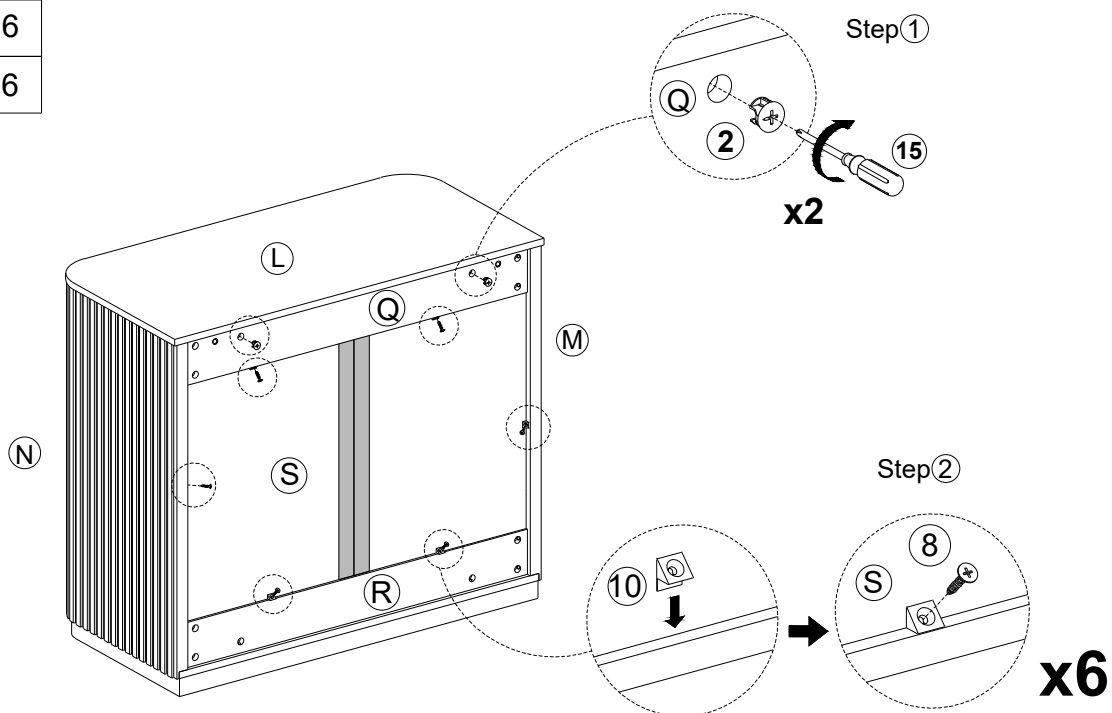
2		x 2
8		x 6
10		x 6



1. Insert the cam lock (2) into the lower cross rail (Q) and tighten it with a screwdriver.
2. Insert the plastic wedge (10) into the gap at the edge of the lower back panel (S), then insert a flat-head screw (8) into the hole of the plastic wedge (10) and tighten it with a screwdriver.




## STEP 26

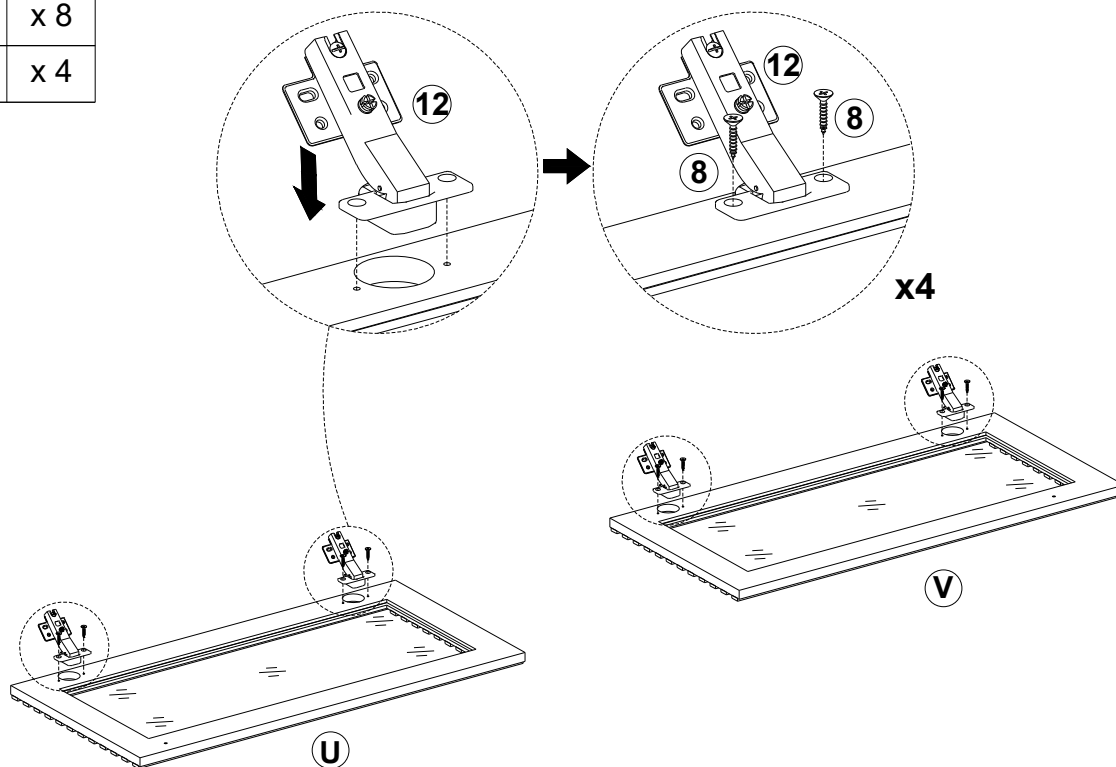
8		x 8
12		x 4



Use flat-head screws (8) to attach the hinge (12) to the door panel (U)(V), and tighten with a screwdriver.

## STEP 27

8		x 16
13		x 2
14		x 2

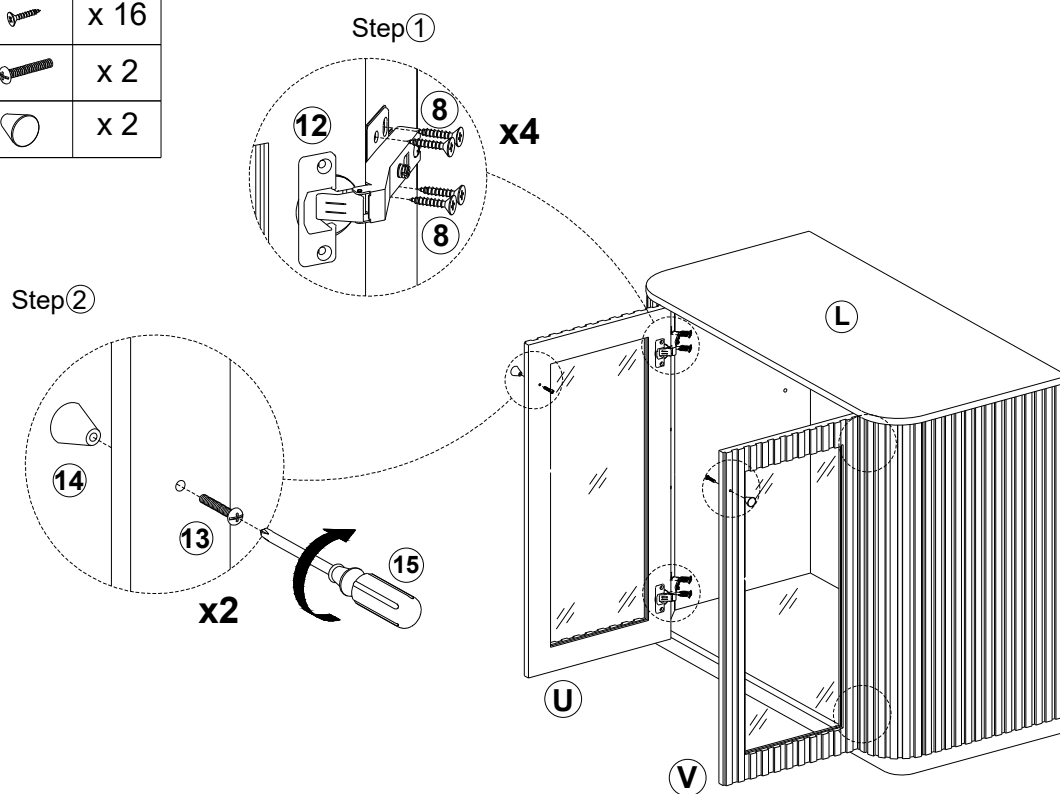


1. Use flat-head screws (8) to secure the hinges (12) to the door panels (U)(V), As shown .
2. Install the handle (14) onto the door with bolts (13) and tighten the bolts with a screwdriver.

## STEP 28




Note:  
The operation requires two adults to complete

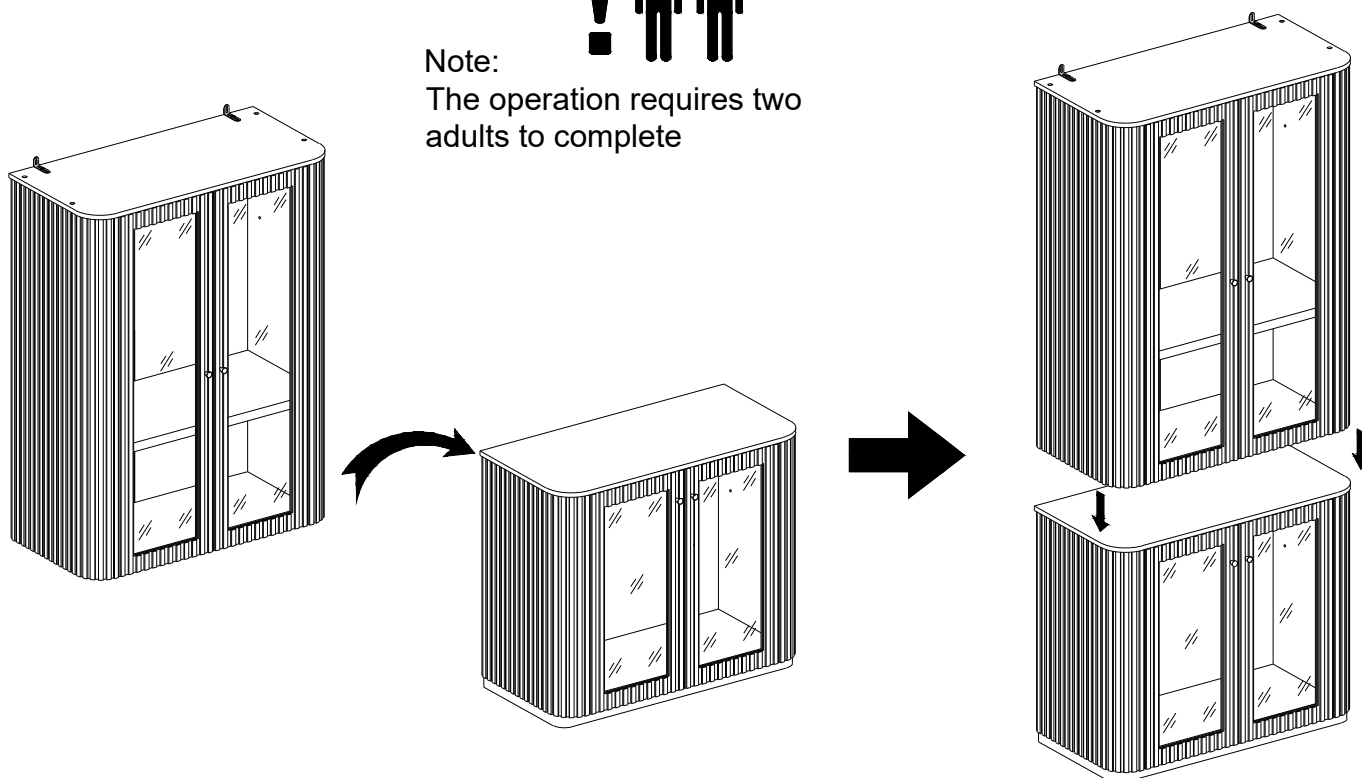

## STEP 29


6		x 4
16		x 2

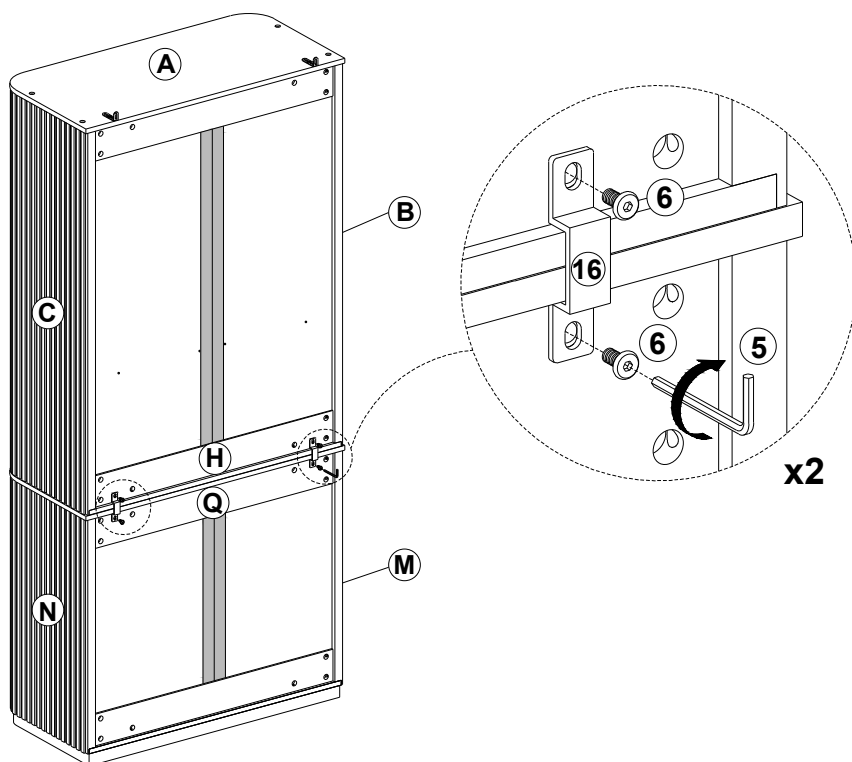

Use bolts (6) to connect the Connector (16) with back cross rail(H) & (Q), and tighten with an Allen key (5).



## STEP 30

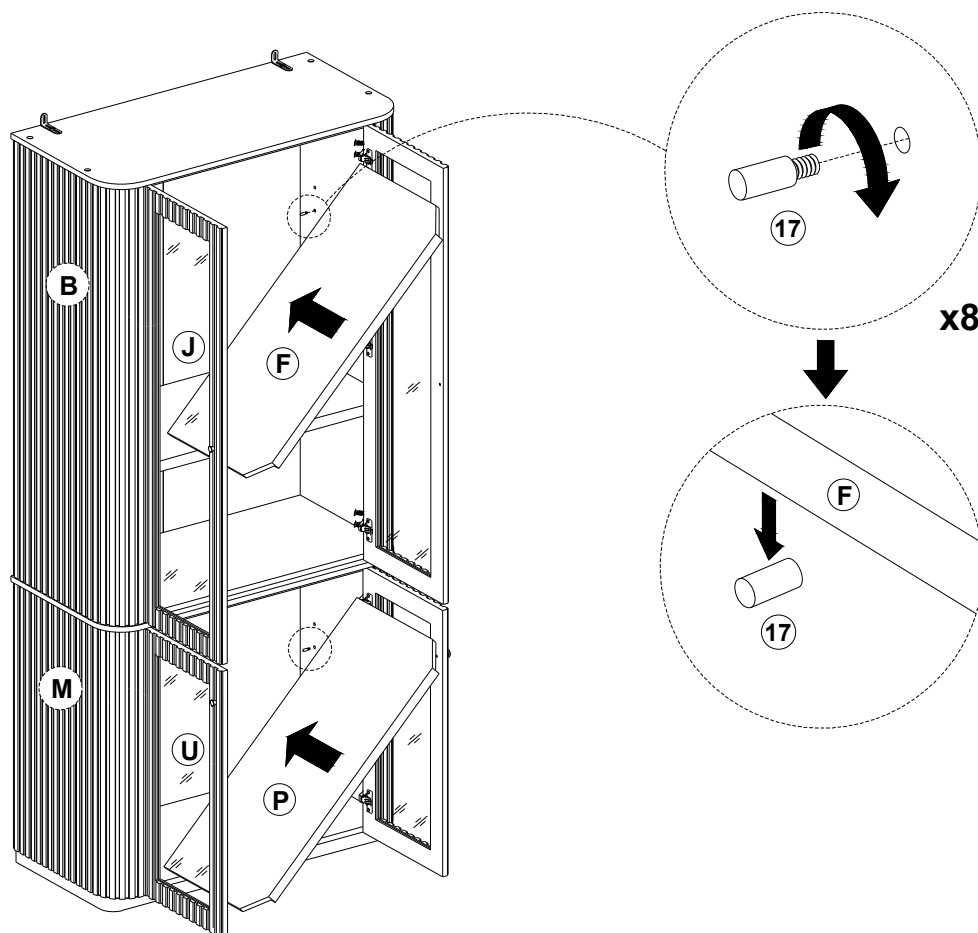17		x 8
----	--	-----



Rotating the shelf support (17), then place the adjustable shelf (F) and the adjustable shelf (P).

## STEP 31

18		x 2
19		x 2

**⚠ WARNING**




**Children have died from furniture tipover.**  
**To reduce the risk of furniture tipover:**

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


*This is a permanent label.  
Do not remove!*




**The anti tipping warning sign is located on the inside of the left side panel.**

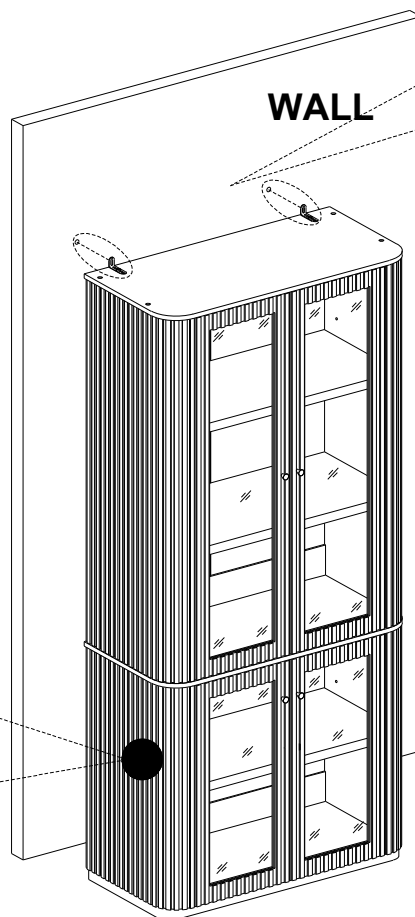


### Step 1

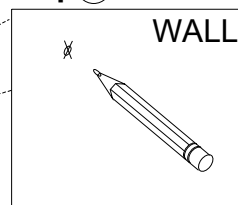


### Step 2

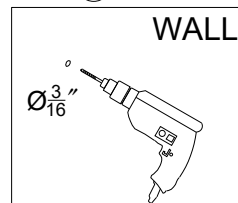


### Step 3

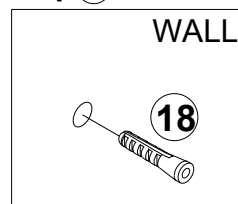

### Step 4

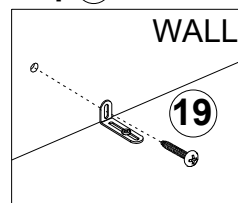

## STEP 32

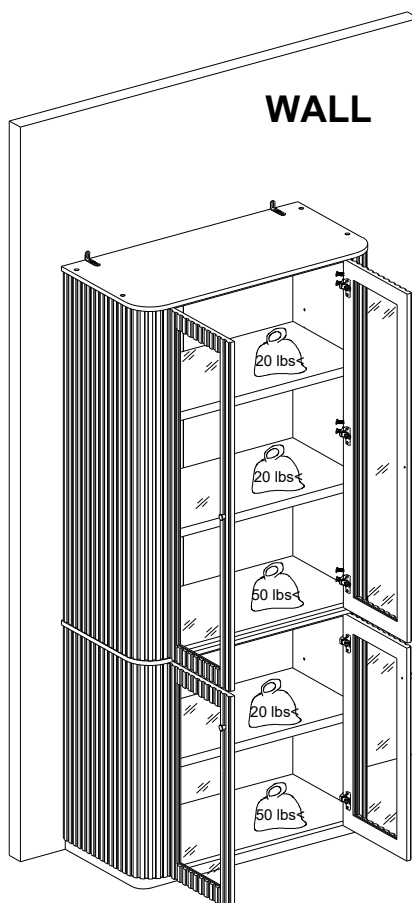

## MAINTENANCE AND WARNING

- Keep furniture away from heat.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use on site dry Cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, For residential use only.
- The maximum load is 160 LBS.

## WARRANTY

We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

Are you having difficulty with assembly? Missing parts? Please send email with your order No to [customerservice@hulalahome.com](mailto:customerservice@hulalahome.com)

For return, please check the return policy with the retailer or market place you bought from. Appreciate your purchasing from us. Pop up your life by our furniture piece!